


*Wired Heavy Duty Backup
Camera System with 7" LCD
Optional 2nd Cam Available

Example of an Installation

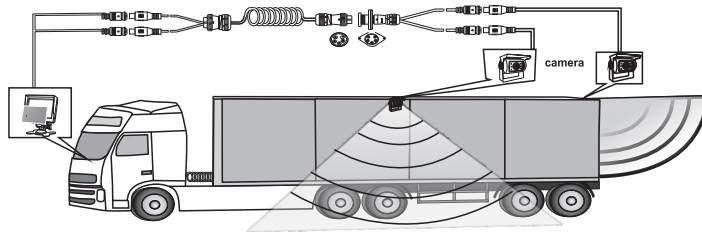

Monitor system use in truck,bus,express car, special vehicle

USER MANUAL



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

MONITOR




1. Power
2. V1/V2
3. Decrease setting
4. Menu
5. Increase setting

①

SPECIFICATIONS

Model	FEMS720RSC	
Screen size	7 inch	
Aspect ratio	16:9	
Luminance	300cd/m	
Resolution	480*R.G.B*234/ 800*R.G.B*480 (optional)	
Audio & Video	2video/2 audio input(dual channel, single image display)	age display)
System	PAL&NTSC automatically	
Voltage	12V~24V	
Language	multi-language	
OSD Menu	display menu, Brightness,color,contrast adjustable	
Built-in speaker	Include	
Bracket Accessories	fanshaped and butterfly bracket (optional)	
Sun shade		

REMOTE CONTROL

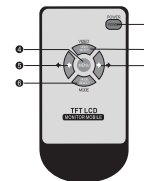



1. Power
2. V1/V2 Change
3. Positive Increase
4. Menu
5. Negative Decrease
6. Mode selection

②

CONNECTION

4 PIN


60' Extension Cable

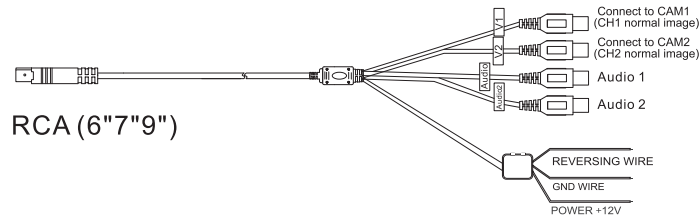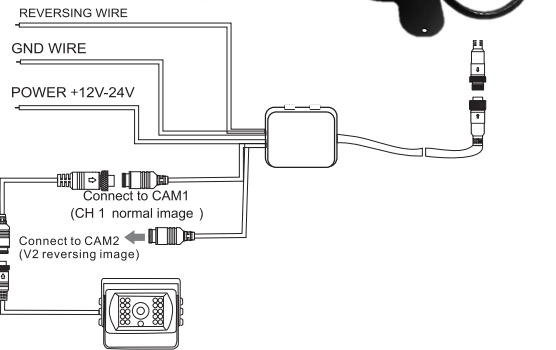

Monitor Installation(1)



1. Firstly please fix the screws with and let fan shaped bracket tight,
(see below pictures)

3

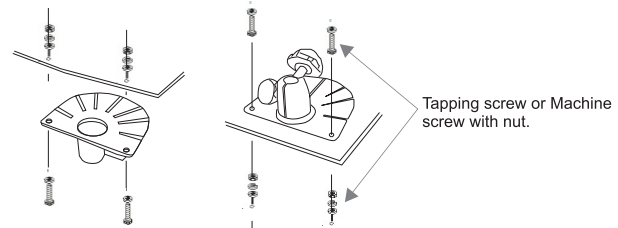


2. Secondly put the metal buckle piece on the top of the fan-shaped bracket into the notch at the back of the monitor.(see below pictures)

3. Move the bracket to the proper location.(see below pictures)

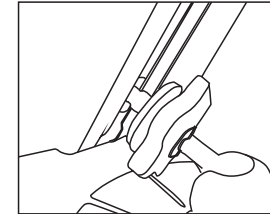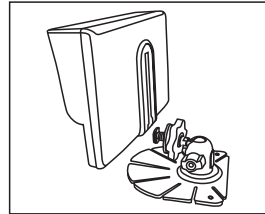


4. To fix the big screws of the bracket until to keep the monitor tight
(see below pictures)

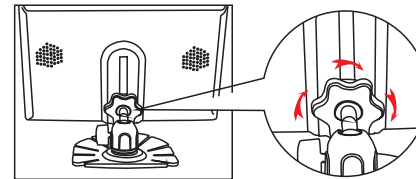


5. If users want to change the direction or angle of the monitor, firstly to loosen the screws on the bottom of the bracket. Then move the monitor to the desired location then fix the screws on the bottom of the bracket again.(see below pictures)

4

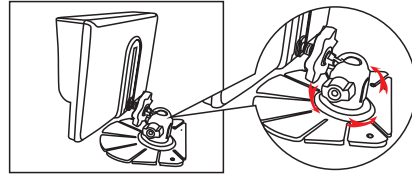

Monitor Installation(2)


1. Firstly please fix the screws with and let fan shaped bracket tight, (see below pictures)

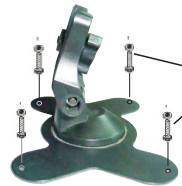


Tapping screw or Machine screw with nut.

2. Secondly put the metal buckle piece on the top of the fan-shaped bracket into the notch at the back of the monitor.(see below pictures)


3. Move the bracket to the proper location.(see below pictures)

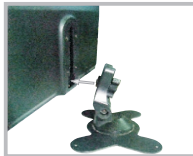

4. To fix the big screws of the bracket until to keep the monitor tight (see below pictures)

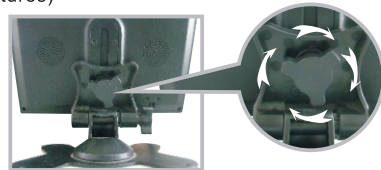

5.If users want to change the direction or angle of the monitor, firstly to loosen the screws on the bottom of the bracket.Then move the monitor to the desired location then fix the screws on the bottom of the bracket again.(see below pictures)

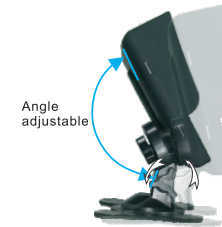

Accessory

1.Remote control*1 PCS	2.User manual*1PCS
3. Power cable 1 PCS(optional)	4.Bracket Accessories *1 PCS (optional)

Announcements

To ensure our safety, the driver should not watch the video files or operate the monitor. The amateurish workers should not disassemble it without permission.

If there are any product problems, please consult the local after-sales agency or take the defective product to the local maintenance department for repairing.

Warning: Please obey the local laws to install the product at a right position.

Our company is not responsibility for the law issue caused by the illegal installing.

Attention: When the weather is very cold. The LCD may be dark with power on.

After the temperature will increase gradually, the LCD should be back to normal.