

LP WIFI Backup Camera User Manual



Product Features

- WiFi transmission, support iPhone, iPad, and Android phone
- Adjustable multiple angle camera viewing, with image-flip ability
- Camera & transmitter rainproof, dustproof and shockproof
- Minimum illumination less than 0.5 Lux, digital compensation for clear night vision
- Easy installation, wiring free
- 12-30VDC car power supply
- Transmission distance with no obstacle more than 150meters
- The client terminal shall support Android 2.2 or above, and iOS shall support Version 4.3 or above.

Operations for Android system client

Installation APP software:

1. GOOGLE PLAY store.
2. Search "**WIFI**AV" software, and download.
3. Install the APP software, as the following interface:
4. Turn on the intelligent mobile device terminal and enter




Connection WIFI:

1. Click "wi-fi", select your camera, and connect the wifi of the intelligent mobile device terminal to the wifi of the tool. The initial SSID of the device is "**WIFI**AV", then type in the password of the device(default password: 12345678).
2. Click the "" icon in the main interface of the intelligent mobile device terminal.

□ **View the video:**

Open the app , and if the connection between the wifi of the tool and the intelligent mobile device terminal is successful, the icon  will be highlighted, and the images transmitted from the wifi camera tool can be seen in the APP, as shown in the figure.

With unique image zoom in, zoom out function.

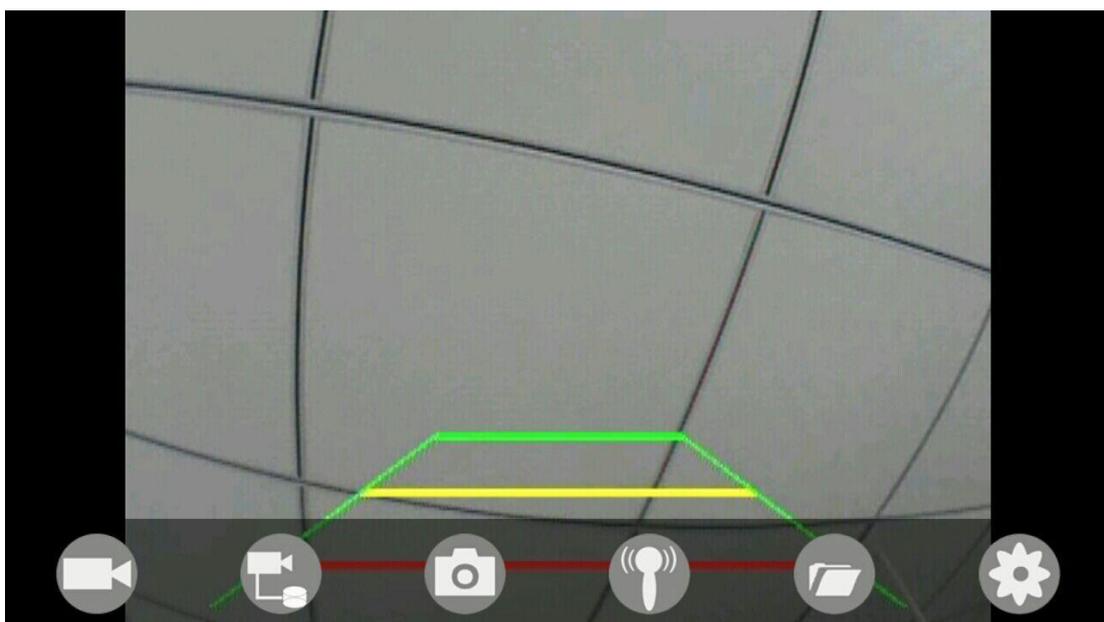


Notice:

- When the background is black or the image is still, please exit the app, and check whether the wifi connection is normal. Then click again the app icon to enter into the software interface.

□ Settings:

Press this icon  to enter into the settings menu. You can change the default factory SSID and password of the wifi camera tool, and clicking  will show whether the change is successful, and clicking  to cancel the new SSID set.

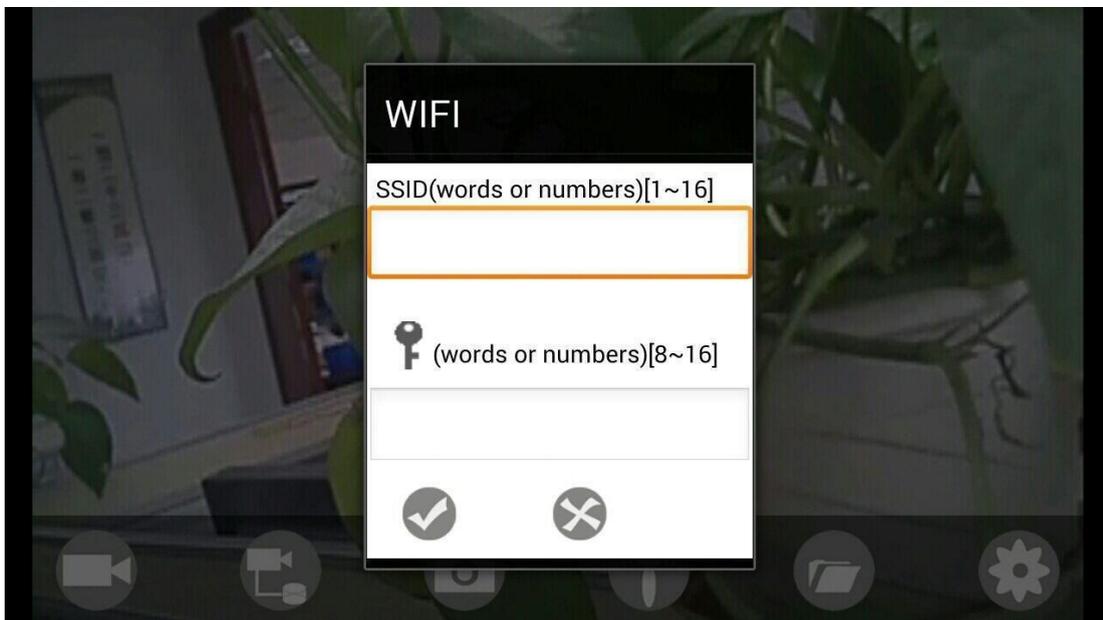

Notice:

- User could press the RESET button of the transmitter to renew the default factory SSID and password.

Operations for iOS Apple system client

□ Installation APP software:

1. Turn on the intelligent mobile device terminal and enter APP store.
2. Search "**WIFI**AV" software, and download.



3. Install the APP software, as the following interface:

□ Connection WIFI:


1. Click "wi-fi", select your camera, and connect the wifi of the intelligent mobile device terminal to the wifi of the tool. The initial SSID of the device is "WIFI~~AV~~", then type in the password of the device (default password: 12345678).



2. Click the " " icon in the main interface of the intelligent mobile device terminal.

□ View the video:

With unique image zoom in, zoom out function.

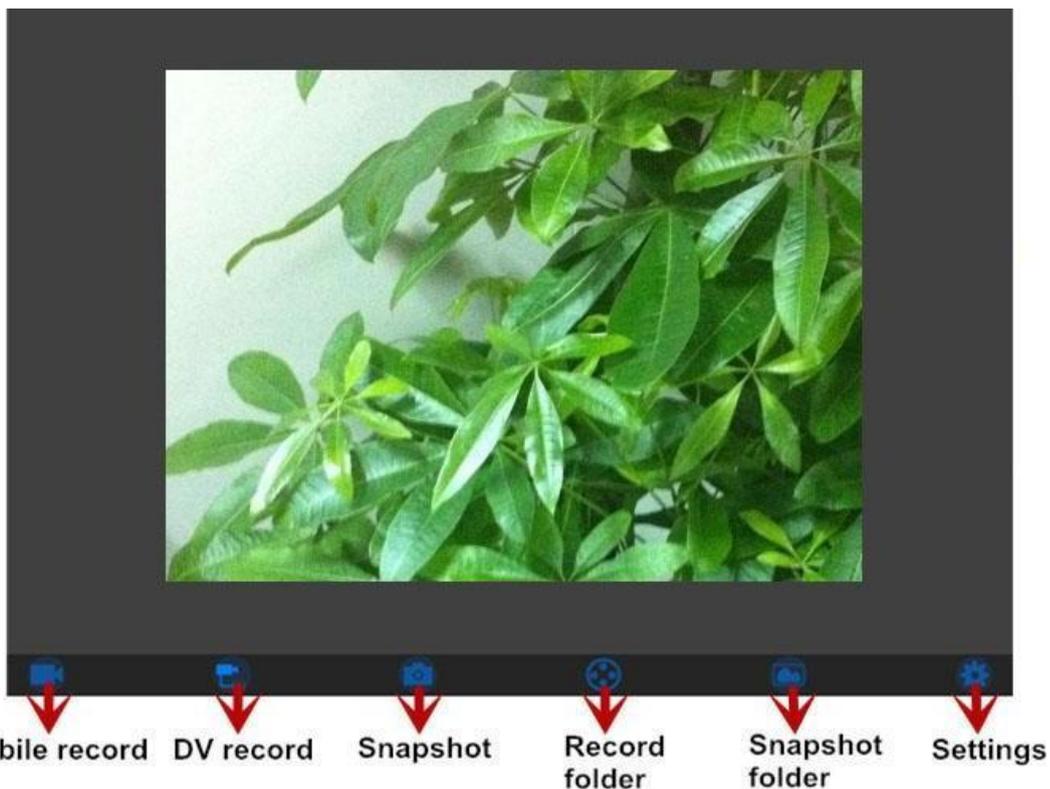

Notice:

- When the background is black or the image is still, please exit the app, and check whether the wifi connection is normal. Then click again the app icon to enter into the software interface.

Settings:

Press this icon  to enter into the settings menu. You can change the default factory SSID and password of the wifi camera tool, and clicking  will show whether the change is successful, and clicking  to cancel the new SSID set.



SSID: words or numbers[1~16]

password: words or numbers[8~16]

Notice:

- User could press the RESET button of the transmitter to renew the default factory SSID and password.

SPECIAL NOTICE

if you are using a Samsung mobile phone (including S7, S8, etc) please follow the following operation. Press the “RESET” button 4 times for reset, switch to Samsung mode (SSID:WIFI-SAMSUNG, default password: 12345678) , then all operations refer to the front of the Android system, long press the “RESET” button for 10 seconds, can be reset to the default mode (SSID:WIFI-SAMSUNG, default password:12345678) applicable to all non Samsung mobile phones.