


# Process to Connect and view IP Camera

IP CAMERA CAN ONLY BE VIEWED USING THE IP WEB SERVER OR SMART FLEET APP

<http://120.24.89.199:8088/808gps/login.html>

1. Connect the IP camera with the device and make the blue wire connect with GND (I/O wires), Red wire connect with the 12V OUT (I/O wires).

2. Check the IPC page via the monitor and you can see as pic shows below. Then you need to click the search button.

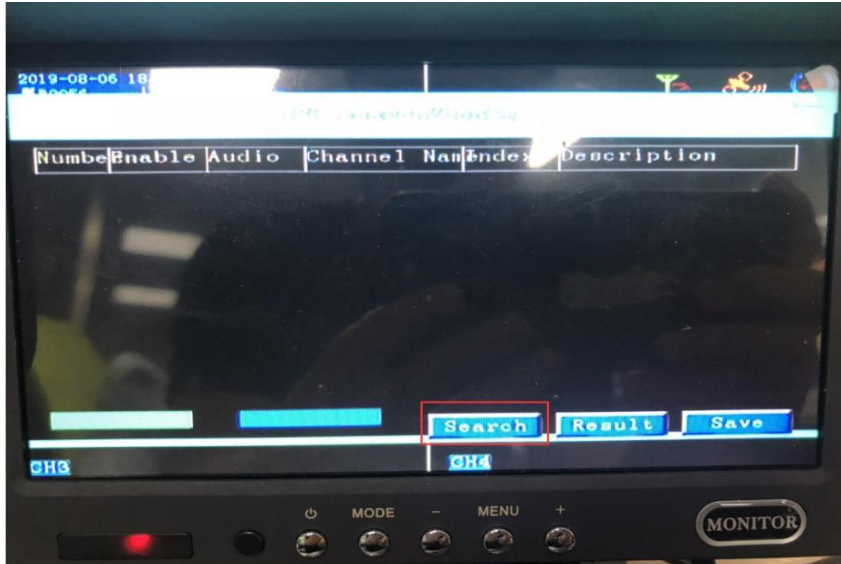

3. After search, it will show the IP info of the IP camera; If no info shows, that means the wire connect is not stable or wrong.

4. Open the "Network-wired" page, you can see as pic shows below. Compare "IP Address and Gateway" with the IP camera's, if they are not same in the first 3 part, you need to change the third part to 0. Then after save, the config settings are finish.

