



# ORB WiFi HD MINI DASH CAM QUICK START GUIDE

## Description of Buttons

1. Power ON/OFF/Esc Button  
Microphone Indicator
2. Menu button
3. Up arrow
4. Down arrow
5. OK button
6. Speaker
7. Back monitor LCD display
8. USB Power Port option 1
9. Master Reset port
10. SD Card Slot
11. USB Power Port option 2
12. Detachable 3M mount
13. Front recording camera lens

**It is recommended that you FORMATT SD card.**

- Press bottom right "OK" button, make sure camera is not recording.
- Once camera is not recording, press bottom left, menu button
- On menu screen you have two menu setting options
  - 1) Video Movie Mode Settings
  - 2) General settings
- Press M button 2x or until you are in General Setting
- Use down/right arrow until you are on page 6 of 7 and see "Format Card"
- Press bottom right "OK" button and highlight "Yes". Press bottom right "OK" button to confirm you want to format sd card.
- SD card is now formatted. If you format SD card in the future, it will erase everything that is currently on card.
- Press power button to get to recording mode
- Press Ok button to start recording
- We recommend formatting card once a month.

### **Setup instructions to keep dash camera from freezing:**

- Press bottom left "OK" button, make sure camera is not recording.
- Once camera is not recording, press bottom left, MENU button until you are on Video Movie Mode Settings
- Use right/down button until you are on page 2 of 7 and highlight motion detection
- Press Ok and make sure it is OFF
- Press menu button to get into General Settings
- Use right/down button until you are on page 2 of 7 and highlight Parking Monitor
- Press Ok and make sure it is OFF
- Press power button to get to recording mode
- Press Ok button to start recording

### **Master Reset port is next to sd card slot**

Using a safety pin, thumbtack, toothpick, etc. Press inside hole for a master reset of ORB WIFI dash camera.