

4K PLATINUM SPORT CAM

Instruction Manual



Description:

Take incredible photos with 4 times the resolution of traditional HD cameras. This sports camera provides multiplication function to meet your needs. It has loop mode, prerecorded, slow motion and so on. The microphone of the action camera can be worn on the helmet or pinned to the chest, which can clearly record your voice. The ultra HD underwater camera is equipped with rechargeable batteries, each battery can record 60-120 minutes, no longer have to worry about the recording time of this waterproof camera. Application places: Outdoor sports activities, Bicycles, Car hard disk video recorders, Diving, Home safety, etc.

Note:

SD card is not included, please purchase by yourself.

Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

Package Includes:

4K Platinum Sport Cam

Waterproof Case

Waterproof Cover Clip Mount

Yellow Interchangeable Face Plate

Zip Ties

32GB Memory Card

Bicycle Bracket Mount

Multi-function Clip Mount

Helmet Pedestal Mount

Various Straps

USB Cable

Manual

Caution:

- Protect camera from falls and drops.
- Do not place heavy objects on the camera.
- Keep a safe distance from any strong magnetic interference to avoid strong radio waves that might damage the camera and affect the sound/image quality.
- Keep the camera away from water and liquids (unless equipped with waterproof case). This may cause the camera to malfunction.
- Do not expose the product directly to high temperatures over 130°F.
- We recommend using high quality Micro SD Cards for the best results. Please format the micro-SD, micro SDHC and micro SDXC memory card on the camera before using and restart the camera after formatting.
- Don't place your Micro SD card near strong magnetic objects to avoid data error or loss.
- Remove the battery before using as a dash camera.
- In case of overheating, unwanted smoke, or unpleasant smell from the device, unplug it immediately from the power outlet to prevent hazardous fire.
- Keep it safely away from children while charging.
- Do not use the camera when it has very low power.
- Do not use the camera while it is charging.
- Store the device in a cool, dry and dust free location.
- Do not attempt to open the case of the camera or modify it in any way.

Introduction:

The 4K Platinum Sport Cam is a high-definition digital motion video recording device, created to record video in various conditions. It has a wide variety of the leading features for digital video recording, photo shooting, audio recording with screen display and detachable battery. Best suitable for vehicle recording, outdoor sports, home security, diving, and more. Allowing you to enjoy the moments while capturing every scene anytime, anywhere.



Tips:

- In order to capture a clear video or photo, please tear off the lens protection film of the waterproof shell before use.
- In order to ensure the waterproof performance, please make sure that the waterproof shell is sealed well before use. If the white silicone ring of waterproof shell can not seal well, do not use.
- Please dry the camera each time after use, otherwise the waterproof shell metal button will dust and reduce the waterproof performance
- Waterproof shell can be vulnerable, we strongly recommend, according to the usage of the environment and frequency, to replace the waterproof shell in time.
- During camera use low temperatures, such as winter, rain, underwater, please start with the anti fogging treatment to avoid blurred video

Mounting Your Camera:

Attach your camera to helmets, gear and equipment. See included insert for more info.



YELLOW
INTERCHANGEABLE
FACE PLATE



Getting Started:

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

Power On:


Press and hold the Power/Mode Button for seconds to the screen on.

Power Off:

Press and hold the Power/Mode Button for seconds to the screen off.

Overview:

Turn camera and repeatedly press the Power/Mode Button to cycle through camera modes and settings. The modes will appear in the following order:

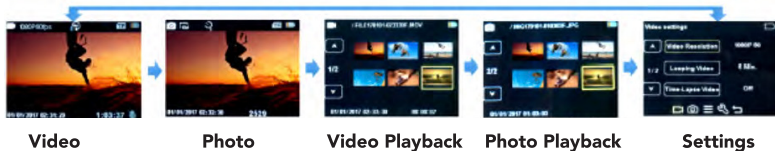

Settings:

Repeatedly press the Power/Mode Button to Setting Menu, use the UP or Down Button to cycle through the various options, and press the Shutter/Select Button to select desired option.

Video Settings:

- Video Resolution: 4K 25/4K 30 EIS/2K 30EIS/1080p 60EIS/1080p 30EIS/720p 120EIS
- Looping Video: Off/1Min./3Min./5Min.
- Time-Lapse Video: Off/1Sec./5Secs./10Secs/30Sec./60Sec.
- Slow Motion: Off/1080P 60/720p 120
- Motion Detection: Off/On
- Audio Record: Off/On
- Press and hold the Power/Mode Button for seconds to the screen off.

Photo Settings:

- Photo Resolution: 20M/12M/8M/5M
- Time-Lapse Photo: Off/2Sec./10Sec.
- Burst Photo: Off/3photos/5photos
- Volume: 0~10
- Beep: Off/On
- White Balance: Auto/daylight/cloudy/fluoresc./fluoresc. 1/fluoresc. 2 IOS: Auto/ISO100/ISO200/ISO400/ISO800/ISO1600 Effect: Normal/Sepia
- B&W/Negative
- Contrast: -100~100
- Saturation: -100~100
- Sharpness: -100~100
- Exposure: +2.0~0

System Settings:

- Language: English/Español//Portugues
- Car Mode: Off/On
- Power Off: Never/1Mins/5Mins
- Date & Time: __Y__M__D 00:00:00
- Off/On Frequency: 50Hz/60Hz Upside
- Down: Off/On
- Date Format: None / YYYY MM DD / MM DD YYYY / DD MM YYYY Stamp
- Screen Saver: Off/30sec./1min./3min.
- Format: YES/NO
- Reset: YES/NO
- FW Version:
- Exit: Press the shutter button to exit

Tips: To ensure your setting succeed, please restart your camera after setting.

Video Mode:

To record video, verify the camera is in different Video Modes and set the desired video resolution, if the Video icon in your camera's LCD is not showing, press the Power/Mode Button repeatedly to then menu setting and select the desired option in the Video Setting menu (such as Looping Video/Time-lapse Video/Slow Motion/Motion Detection etc)

To Start Recording:

To press the Shutter/Select Button. The camera Status Light and a Red Dot on the screen will flash while recording.

To Stop Recording:

To press the Shutter/Select Button. The camera Status Light and a Red Dot on the screen stop flashing to indicate recording has stopped

To Turn On/Off the audio record:

To press the Down Button. The MIC icon will show the status in the right corner of the screen.

Tips: This camera automatically stops recording when the battery is out of power. Your video will saved before the camera powers off. This camera automatically stops recording when the SD card is full, if the looping record function is turn off.

Photo Mode:

To capture photo, in different Photo Modes and set the desired photo resolution, if the photo icon in your camera's LCD is not showing, press the Power/Mode Button repeatedly to then menu setting and select the desired option in the Photo Setting menu (such as Time-lapse Photo/Burst Photo)

To capture a photo:

Press the Shutter/Select Button. The camera will emit the camera shutter sound.

Time Lapse Photo

To capture Time Lapse Photo series, verify the camera is in Time Lapse Photo mode. If the the Time Lapse Photo icon on your camera's LCD screen is not appear, press the Power/Mode Button repeatedly to the Photo Setting Menu, then select the desired option of the Time Lapse Photo in Setting Menu.

To capture a Burst Photo series:

Press the Shutter/Select Button, the camera initiates countdown and emit shutter sound each time a photo is taken.

Burst Photos

To capture a Burst Photo series, verify the camera is in Burst Photo mode. If the the Burst Photo icon on your camera's LCD screen is not appear, press the Power/Mode Button repeatedly to the Photo Setting Menu, then select the desired option of the Burst Photo in Setting Menu.

To capture a Burst Photo series:

Press the Shutter/Select Button, the camera will emit shutter sound.

Playback:

Playing back Videos and Photos

Verify the camera is in Video or Photo Playback menu. Press the UP/DOWN Button to cycle the videos or photos and then Press the Shutter/ Select Button to playback the desired options, to exit playback mode, press the Power/Mode Button to the main preview menu, press the Power/ Mode Button again to switch setting modes.

Tips: The camera might not be compatible with the files from different resolution camera.

Storage/Memory Cards:

This camera is compatible with 8GB, 16GB, 32GB, 64GB (selected) capacity micro SD, micro SDHC and micro SDXC memory card. You must use a micro SD card with a CLASS 10 (80M/S) speed rating at least. We commend using brand-name memory cards for maximum reliability in high vibration activities

Tips: please format the micro SD, micro SDHC and micro SDXC memory card on the camera before using.

Please restart the camera after formatting.

Battery:

Charging the battery

1. Connect the camera to a computer or USB power supply.
2. The charging status light remains ON while the battery is charging.
3. The charging status light will turn OFF when the battery is fully charged.
4. Charging time: 3.5hours
5. Please make sure the camera is shuttled down while charging.
6. Charge only with 5V output charger.
7. Remove the battery before using as a dash camera.
8. Do not store in temperature above 140°F/60°C.
9. Do not disassemble,crush,damage or dispose of in fire.
10. Do not use swelling battery.
11. Stop using the battery after immersed in water.
12. Please do no throw the camera or its battery to the trash, find a recycling center for disposal.

WIFI App:

The WIFI App lets you control your camera remotely using a smart phone or tablet. Features include full camera control,live preview,playback and sharing of selected content and more.

Download the LIVE DV App or to your smart phone or tablet from the Google Play or Apple App Store. Press the Power/Mode Button to power the camera ON.

Make sure the WIFI is on in the camera setting menu. Press the Up/ WIFI Button to turn on WIFI

In your smart phone or tablet's WIFI setting, connect to the network called "Live DV" followed by a series of numbers. Enter the password"12345678"

Open the LIVE DV App on your smart phone or tablet.

*press and hold the Up/ WIFI Button to turn off the WIFI

The LIVE DV App is compatible with smart phone and tablet listed below:

For Apple IOS *iPhone5,5s, 6(plus),6s(plus),7 (above IOS9)

App available on:



>>>>> 4K PLATINUM SPORT CAM >>>>>

