

Achieve Meat Perfection Every Time
The MeatStick

 


FIRST TIME SETUP

1. Open your preferred mobile app store. Search and download "The MeatStick App". You can also find these instructions on the App.



2. Place stick on the charger, insert 2 new AA batteries and press the button to activate your charger. Please charge the stick for a minimum of **4 hours** before your first use.



The LED light will turn off after the stick is completely charged.
(AA batteries not included)

WHAT'S IN THE BOX:

The MeatStick



 
1 x
(BR661)




2 x
(BR662)

The MeatStick Charger

1 x



 3. Set up WiFi Bridge (more info inside).

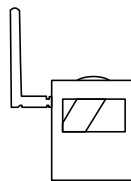


4. Press the button on the charger to activate the stick. Select the stick in the App and choose your desired cook.



If not within a heat source, the stick will turn off automatically after 30 minutes.

WiFi Bridge

 1 x

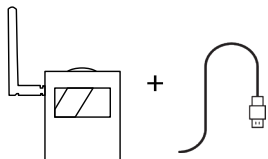

Carrying Case

1 x



5. You can NOW remove the stick from the charger and insert it completely into the meat, up to the ceramic handle. The stick should be in the thickest part, away from fat and bones.



6. You will get real-time data on your smartphone, the App will let you know when it's ready to eat.



Once your cook is ready, let your meat rest and carefully remove the stick from the meat. Watch out it might be hot!

Thank you for choosing The MeatStick!

For more information please visit:

www.themeatstick.com

If you need help, contact support:

support@themeatstick.com

The MeatStick
#mymeatstick

 
7. Enjoy your meat! Remember, the stick will be very hot, be careful when removing it.



8. After enjoying your meat, allow the stick to cool down then clean it to look like new.



STICK & CHARGER

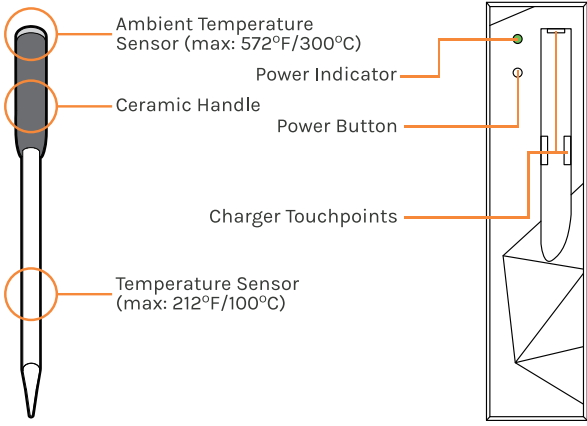


Stick lasts 24+ hours on a full charge.

CAUTION



The stainless steel portion withstands up to 212°F/100°C and the ceramic handle withstands up to 572°F/300°C.

 Exceeding these temperatures may damage the stick.



If not within a heat source, the stick will turn off automatically after 30 minutes.

WIFI BRIDGE SETUP

1. Plug in WiFi Bridge with the included cable to a power source. For portability, use a USB battery pack.
2. Make sure your router is on, and follow the instructions in the App for the WiFi Bridge to connect to your home network.
3. **Once set up, place the WiFi Bridge within 6ft/2m from the stick.**

In case you don't have WiFi, you can use your WiFi Bridge in Xtender mode. Just press the button when the LCD says "Check app" to set extended range up to 300ft/90m.



Position the stick completely into the meat. This allows the stick to withstand the high temperatures.

 


Cooks over direct heat may cause fire flare-ups that can instantly exceed 900°F/500°C. Please be aware and remove the stick to avoid damaging it.



To ensure uninterrupted connectivity, we recommend the WiFi Bridge to be as close as possible to the stick (6ft/2m).

WIFI BRIDGE

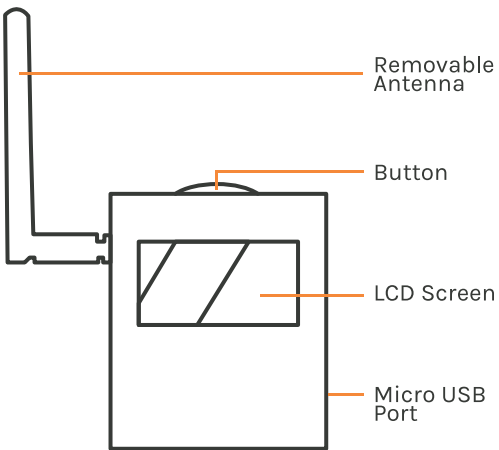

Do not use the stick in a microwave or pressure cooker.



 
The stick will be very hot after each use. Do not touch with your bare hands.




The stick is dishwasher, sous-vide and deep-fryer safe.

⚠ Do not soak in standing water when not in use.

CONNECTIVITY

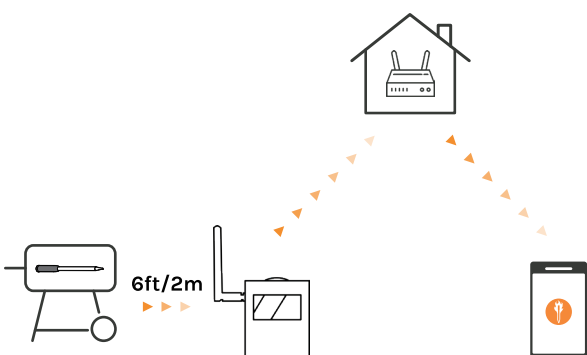

 Please note that all The MeatStick products are covered by a 1-year limited warranty. For more details: themeatstick.com/warranty



The MeatStick is modular, you can create the set you want. Visit our website to add more probes or add-ons to your collection!



Protect our planet by recycling paper & plastic packaging at designated facilities.