Achieve Meat Perfection Every Time



FIRST TIME SETUP

1. Open your preferred mobile app store. Search and download "The MeatStick App". You can also find these instructions on the App.






2. Place stick on the charger, insert 2 new AA batteries and press the button to activate your charger. Please charge the stick for a minimum of **4 hours** before your first use.



The LED light will turn off after the stick is completely charged.

(AA batteries not included)

WHAT'S IN THE BOX:

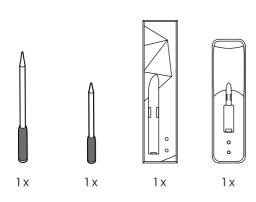


The MeatStick

Mini Stick

The MeatStick Charger

MiniX Charger

 3. Set up WiFi Bridge for CB668 (more info inside).




4. Press the button on the charger to activate the stick. Select the stick in the App and choose your desired cook.



If not within a heat source, the stick will turn off automatically after 30 minutes.

WiFi Bridge

 (Only included with CB668)



Carrying Case

1 x



5. Insert the stick completely into the meat, up to the ceramic handle. The stick should be in the thickest part, away from fat and bones.





NeatStick. When using just The MeatStick please turn on the charger and keep within 6 feet of your stick during cooks. (If using the WiFi Bridge, the MiniX Charger is not required.)

6. You will get real-time data on your smartphone, the App will let you know when it's ready to eat.

 


Once your cook is ready, let your meat rest and carefully remove the stick from the meat. Watch out it might be hot!

Thank you for choosing The MeatStick!

For more information please visit: www.themeatstick.com If you need help, contact support:

support@themeatstick.com



7. Enjoy your meat! Remember, the stick will be very hot, be careful when removing it.




8. After enjoying your meat, allow the stick to cool down then clean it to look like new.





STICK & CHARGER

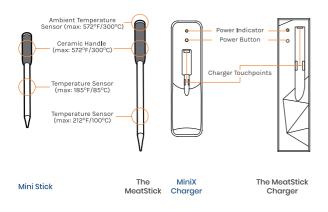

The Mini Stick lasts 8+ hours on a full charge. The MeatStick lasts 24+ hours on a full charge.

WIFI BRIDGE SETUP

- Plug in WiFi Bridge with the included cable to a power source. For portability, use a USB battery pack.
- 2. Make sure your router is on, and follow the instructions in the App for the WiFi Bridge to connect to your home network.
- 3. Once set up, place the WiFi Bridge within 6ft/2m from the stick.

In case you don't have WiFi Bridge, you can use your MiniX charger to extend the range. Just turn it on and place within 6ft/2m of your stick to extend range up to 260ft/80m.

CAUTION



The stainless steel portion withstands up to 212°F/100°C (The MeatStick); 185°F/85°C (Mini Stick) and the ceramic handle with stands up to 572°F/300°C.

Exceeding these temperatures may damage the stick.



If not within a heat source, the stick will turn off automatically after 30 minutes.



Position the stick completely into the meat. This allows the stick to withstand the high temperatures.




Cooks over direct heat may cause fire flare-ups that can instantly exceed 900°F/500°C. Please be aware and remove the stick to avoid damaging it.



To ensure uninterrupted connectivity, we recommend the MiniX charger and/or WiFi Bridge to be as close as possible to the stick (6ft/2m).

WIFI BRIDGE

(Only for CB668)

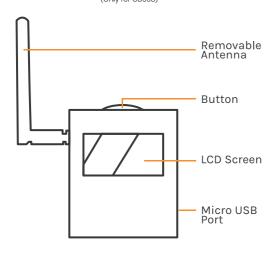



Do not use the stick in a microwave or pressure cooker.



The stick will be very hot after each use. Do not touch with your bare hands.



The stick is dishwasher, sous-vide and deep-fryer safe.



Do not soak in standing water when not in use.

CONNECTIVITY

 
MiniX Charger



The MiniX charger and/or WiFi Bridge is recommended to be within 6ft/2m from the stick.

WiFi Bridge

(Only for CB668)





Please note that all The MeatStick products are covered by a 1-year limited warranty. For more details: themeatstick.com/warranty



The MeatStick is modular, you can create the set you want. Visit our website to add more probes or add-ons to your collection!



Protect our planet by recycling paper & plastic packaging at designated facilities.