

iChef™



**ET-737
Remote
Food
Thermometer**


Thank you for selecting Maverick's **ET-737 iChef** Bluetooth Remote Food Thermometer. Simply turn on the Thermometer, download the Free **SmartThermo** App from the Apple Store or Google Play Store, and follow the easy instructions that will turn your iPhone, iPad, Android or Tablet into a roasting thermometer with a 90 foot range.

MAVERICK®

GETTING STARTED

Step 1:

Preheat oven to your desired roasting temperature.

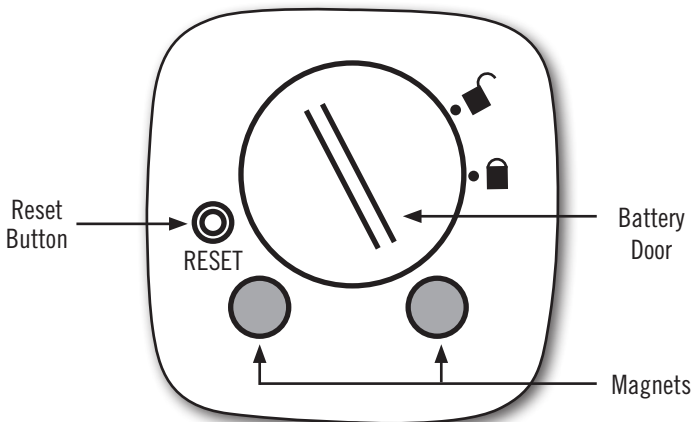


Back of the ET-737 iChef Thermometer shown here

Step 2:

On the back of the **iChef** Thermometer, remove the pull-tab to engage the battery.

See page 14 for Battery Replacement Installation.

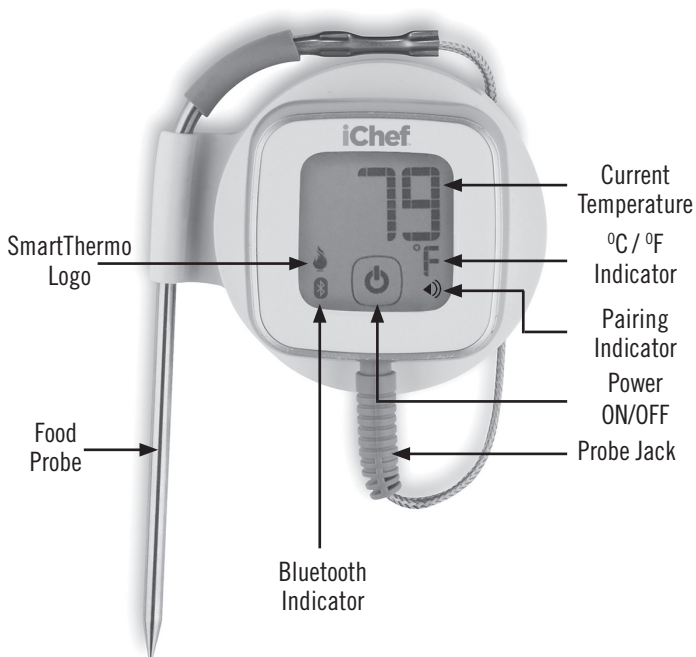

Step 3:

Remove protective plastic film from the **iChef** Thermometer screen. Insert the metal probe firmly into the Probe Jack at the bottom of the **iChef** Thermometer. At the bottom center of the screen, tap the **ON/OFF** button. If the **iChef** Thermometer does not turn on, depress the **RESET** button on the back of the Thermometer using the tip of the metal probe, then re-tap the **ON/OFF** button.

Step 4:

On your iPhone, iPad, Android or Tablet, go to **Settings** and turn on **Bluetooth**.



Step 5:


Go to the Apple App Store or Google Play Store to download the Free **SmartThermo** app. When searching for the app, make sure to type **SmartThermo** as one word with no spaces. Once you have successfully downloaded the **SmartThermo** app, open it.




SmartThermo app icon

Step 6:

The **SmartThermo** screen (A) will appear on your device. It will automatically go to the next screen (B) that displays the current temperature. At top right of screen (B) tap **Pair**.

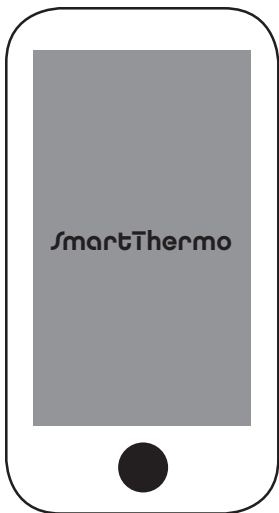

(A)

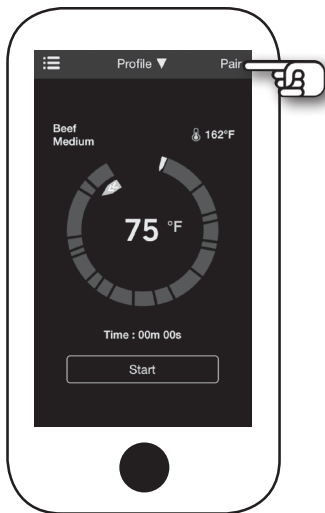


(B)

Step 7:

The **Bluetooth** screen (C) will now appear. Below the **Bluetooth** icon, tap **Unbound**.

Step 8:


Now tap **Search**. When pairing is completed, the **Bluetooth** and **Pairing** icons will flash briefly on the **iChef** Thermometer screen in lower left and right corners. Now you are back to screen (B).

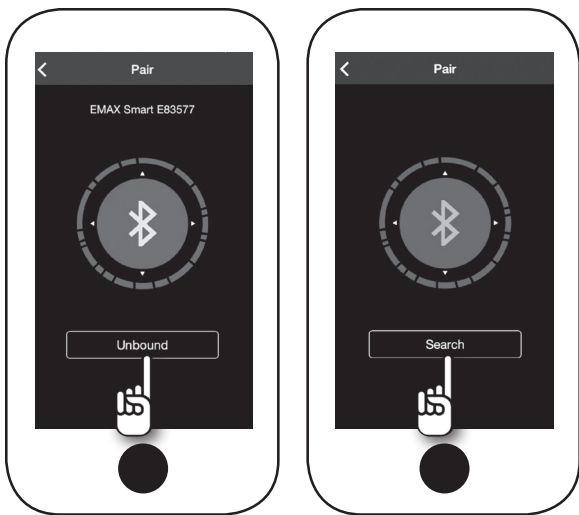


(C)

Step 9:

On top left of screen, tap the **Navigation Bar** icon. This will bring you to screen (D). Tap **Settings**.

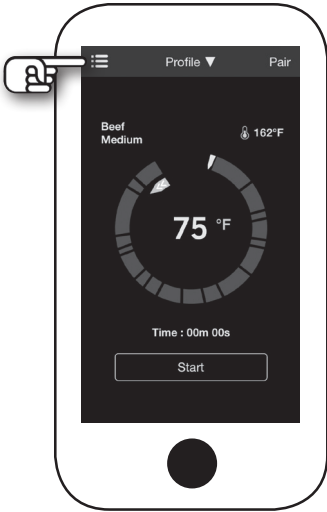

(B)

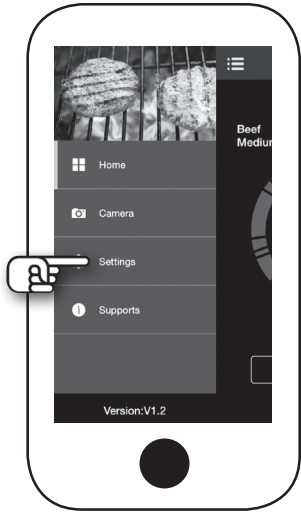


(D)

Step 10:

You are now on the **Settings** screen (E). Tap to select **°C** or **°F** temperature mode.

Tap **Profile**. This brings you to screen (F). Select the type of Meat you are cooking. Most common meat options are listed as pre-set selections. To cook a meat / food selection not listed here, tap **Add** at top right of screen to create additional meats / foods.

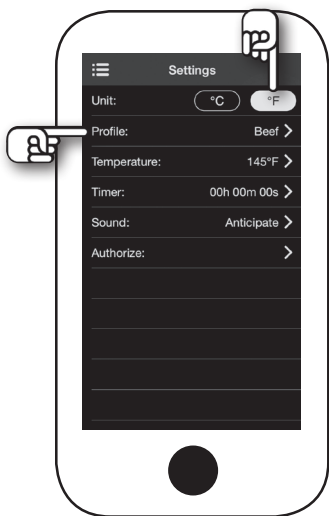

(E)



(F)

Step 11:


Now that you have chosen the type of meat you are cooking you can select your preferred level of doneness. Still on screen (F), under **Doneness**, tap a pre-set doneness temperature from **Well Done** to **Rare**. You can also raise or lower the temperature by tapping the plus or minus boxes. Once you have selected your level of doneness tap the back arrow at top left of your screen. Now tap the **Navigation Bar** icon at top left of your screen.

Step 12:

Return to **Settings** screen (E) and tap on **Sound**. This brings you to the **Sound** screen (G). Scroll through 27 pre-programmed alert sounds and tap to select the one you prefer.



(F)

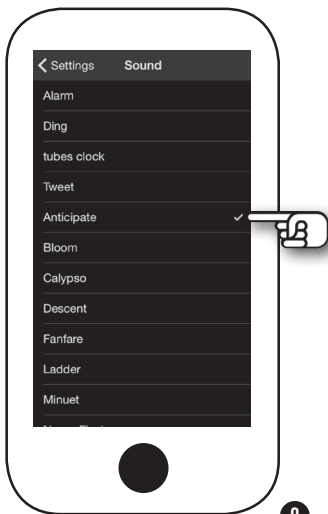


(G)

Step 13:

On the top left of screen, tap the **Navigation Bar** icon to return to screen (D). Tap on **Home** to return to the current temperature screen (B).

Step 14:

Insert the metal probe tip into the center of the meat you are cooking. Place the meat and probe into the oven but leave the probe cord and the **iChef Thermometer** outside the oven door. To begin cooking, tap **Start** at bottom of screen.

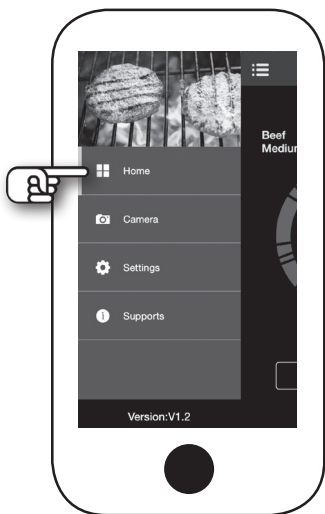

(D)



(B)

Step 15:

You can now monitor your cooking progress on your smart device within a 90 foot range. When the set temperature has been reached, your smart device will alert you with the sound you have chosen and the finished temperature will flash on the **iChef** Thermometer.

Note: See page 12 for Cook By Custom Temperature and / or Time instead.




Cook By Custom Temperature:


Return to **Settings** Screen (E) and tap on **Temperature**. This will take you to the customized doneness temperature screen (H). Scroll to the custom temperature desired. Tap the arrow at top-left of the screen to return to **Settings**.

Cook by Timer / Temperature:

In addition to, or instead of the temperature setting, the timer may be set to determine doneness. Return to **Settings** Screen (E) and tap on **Timer**. This will take you to the customized cooking time screen (J). Select a customized cooking time by scrolling to the custom time desired. Tap the arrow at screen top-left and return to **Settings**.

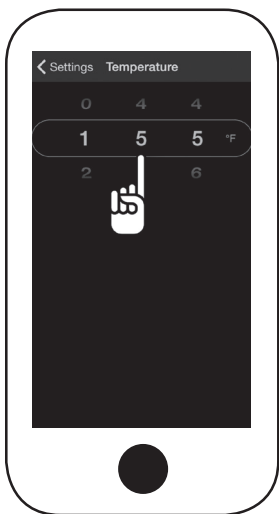

(H)

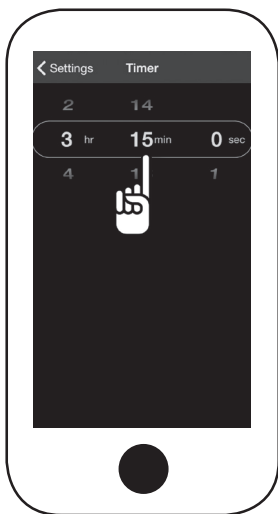

(J)

Important iChef Thermometer Information

- The magnets on the back of the **iChef** will hold it securely to the exterior of the oven or cooktop.
- To turn off the **iChef**, press and hold the ON/OFF button for 3 seconds.
- **iChef** temperature range is -13°F to 572°F (-25°C to 300°C).
- Clean the Food Probe by wiping it with a soft cloth and warm, soapy water. Do not immerse the Food Probe, Probe Jack or Thermometer in water or a dishwasher.
- Store the **iChef** in its magnetized holder, plug in the Probe Jack, wrap the cord around the holder, snap the Food Probe securely in its place. (See photo page 3.)


Cooking Tips

- When inserting the Food Probe, be sure the tip is not touching bone or resting in fat.
- For steaks and chops, insert the Food Probe from the side to the center.
- Meat continues to cook while resting. Final doneness temperature can increase 3 to 10 degrees.
- Allow meats to rest 3 to 5 minutes or longer before slicing to allow its flavorful juices time to redistribute throughout the meat.

Battery Replacement and Installation:

The low battery icon **LO** will flash on the **iChef** Thermometer screen to signal when the battery should be replaced.


1. Remove the battery door by twisting it counter-clockwise.
2. Remove the old battery and replace it with a **CR2032** coin cell battery, matching the polarities (+/-).
3. Replace the battery door, twisting clockwise to lock it.
4. Depress the **RESET** button using the tip of the metal probe.
5. On front display screen, tap the **ON/OFF** button to turn it on.

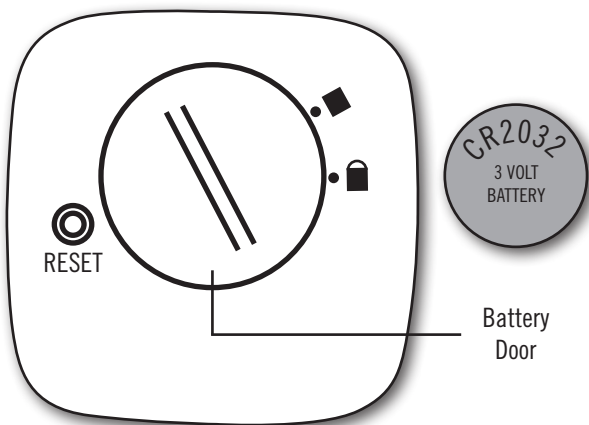


Back of the ET-737 iChef Thermometer shown here

Sharing Photos:

You can post your food photos through social media. Return to **Settings** and tap **Authorize**. This will bring you to screen (K) where you can authorize social media. Go back to **Settings** and tap on the **Camera** button. This will take you to the camera function screen (L). Tap the **Camera** Icon to take a picture. Tap on the **Share** button to share your photos with your friends and family through social media.

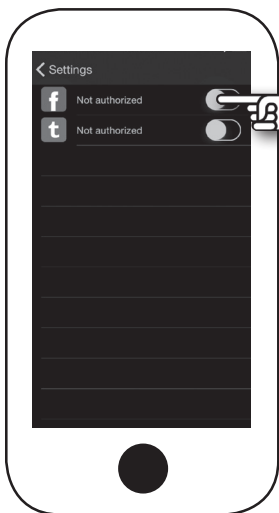

(K)

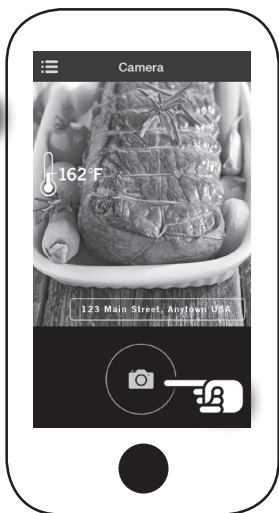

(L)

Maverick Limited 90-Day Warranty

Maverick Industries, Inc. warrants this product to be free of defects in parts, materials and workmanship for a period of 90 days from date of purchase. Should any repairs or servicing under this warranty be required, contact Maverick Customer Service by mail or phone for instructions on how to pack and ship the product to Maverick's National Service Center located as follows:

Maverick Customer Service

94 Mayfield Ave.

Edison, NJ 08837

Telephone: (732) 417-9666

Hours: Weekdays 8:30 am - 4:30 pm

Do not send any parts or product to Maverick without calling and obtaining a Return Authorization Number and instructions. This warranty is VOID if instructions for use are not followed; for accidental damage; for commercial use; for damage incurred while in transit; or if the product has been tampered with. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

MAVERICK®

www.maverickhousewares.com