

INSTALLATION GUIDE



52135 Bucket Set

FORD F150 XL Trucks (2015 - 2019)

FORD F250-F550 XL Trucks (2017 - 2019)



BILL OF MATERIALS

ITEM	QUANTITY
Driver Seat Back Cover	1
Driver Seat Bottom Cover	1
Passenger Seat Back Cover	1
Passenger Seat Bottom Cover	1
Seat Headrest Cover	2

Seat Backs & Bottoms have tag signifying Driver or Passenger.

Ensure airbag patch (same side as the TigerTough tag) goes on the outside edge of the seat.

Watch the install video here:
www.ttcovers.com/52135video

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
Drip dry or machine tumble dry on a no heat cycle.
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.



1 - Preparation



Unhook from seat bottom.

Pull down to detach from seat bottom.

- 1.1 - Slide seat forward and raise to highest position, if possible.
- 1.2 - Remove headrest by pressing in tabs at base of headrest and pulling up
- 1.3 - Pull yellow plug out of bottom of seat.
- 1.4 - Unhook elastic straps from under seat bottom.

For assistance with installation, call us at 507.246.3545




2 - Install Seat Bottom Cover





- ❑ 2.1 - Put cover over seat bottom.
- ❑ 2.2 - Tuck outside of cover behind plastic trim. Tuck inside of cover between seat bottom and center console.
- ❑ 2.3 - Tuck outside string between seat bottom and trim, where the back and bottom meet. Inside string goes down and under seat. Strings must run in front of rear seat mounts.
- ❑ 2.4 - Pull strings tight.
- ❑ 2.5 - Tie a loop in one string. Run the other string through the loop, pull tight, and tie string back on itself. It is important to pull tight as this is what keeps your cover from shifting.
- ❑ 2.6 - Push top flap between seat back and seat bottom. Slits in cover line up with wires in seat back.
- ❑ 2.7 - Run front flap over seat adjustment levers, wires, and brackets.
- ❑ 2.8 - Pull front flap tight and fasten to Velcro on top flap.

3 - Install Seat Back Cover

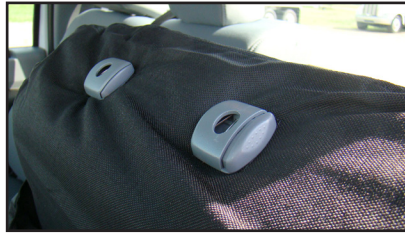

- 3.1 - Turn seat back cover 3/4 of the way inside out and pull over seat back.
- 3.2 - Line holes in cover up with headrest holes and work holes around plastic trim.
- 3.3 - Continue pulling the cover down over the seat, unrolling it as you go.
- 3.4 - Push front flap between seat back and seat bottom.
- 3.5 - Pull front flap tight and fasten to Velcro on seat back.
- 3.6 - Long flap on rear of seat back fastens to Velcro on underside of seat bottom cover.

4 - Install Headrest Cover

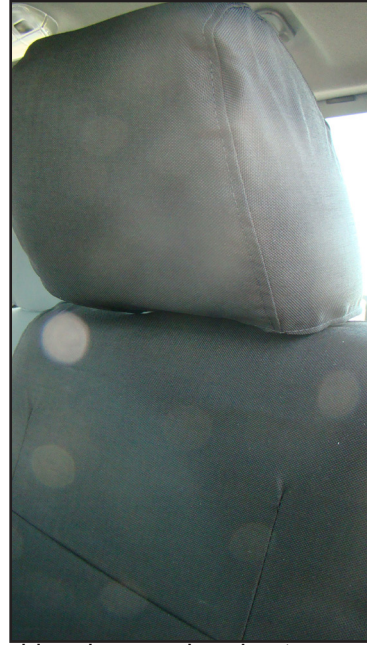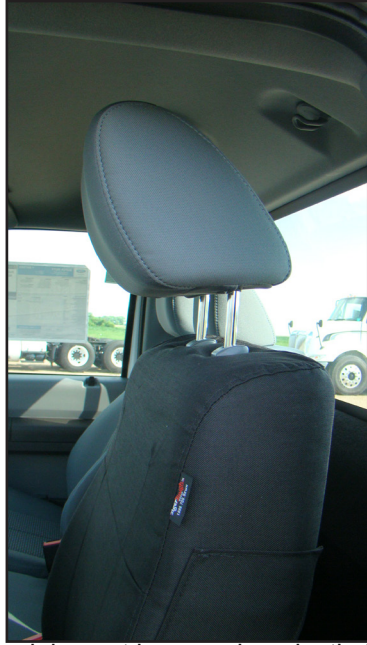

- 4.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- 4.2 - Pull cover over head rest with “loop” Velcro in front and “hook” Velcro in rear.
- 4.3 - Fasten Velcro tabs together under headrest.