

INSTALLATION GUIDE



75505 60/40 Rear Bench

RAM 1500-5500 (2011-2018)



BILL OF MATERIALS

ITEM	QUANTITY
40 Portion Seat Back Cover	1
40 Portion Seat Bottom Cover	1
60 Portion Seat Back Cover	1
60 Portion Seat Bottom Cover	1
Headrest Cover	3

Seat Backs & Bottoms have tag signifying Driver or Passenger

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
Drip dry or machine tumble dry on a no heat cycle.
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.



1 - Preparation



- 1.1 - Tip seat bottom up.
- 1.2 - Remove headrests by pressing in tabs at base of headrest and pulling up

2 - Install Seat Back Cover



40 Portion - Driver's Side

- 2.1 - Push center flap behind seat back, between the brackets.
- 2.2 - Push outside flaps down on outside of brackets.
- 2.3 - Reach up behind seat from bottom and pull flaps down.
- 2.4 - Pull cover down over seat back.
- 2.5 - Tip seat bottom 1/2 way down and push front flaps between seat back and bottom.
- 2.6 - Tip seat bottom up. Pull front and back flaps tight and fasten together.
- 2.7 - Line holes in cover up with headrest holes and work holes around plastic trim.
- 2.8 - Push front flap between seat back and seat bottom.
- 2.9 - Pull front flap tight and fasten to Velcro on seat back.

60 Portion - Passenger's Side

- 2.1 - Push seat cover behind seatbelt.
- 2.2 - Push center flap behind seat back, between the brackets.
- 2.3 - Push outside flaps down on outside of brackets.
- 2.4 - Reach up behind seat from bottom and pull flaps down.
- 2.5 - Pull cover down over seat back.
- 2.6 - Tip seat bottom 1/2 way down and push front flaps between seat back and bottom.
- 2.7 - Tip seat bottom up. Pull front and back flaps tight and fasten together.
- 2.8 - Line holes in cover up with headrest holes and work holes around plastic trim.
- 2.9 - Push front flap between seat back and seat bottom.
- 2.10 - Pull front flap tight and fasten to Velcro on seat back.

For assistance with installation, call us at 507.246.3545



3 - Install Seat Bottom Cover



40 Portion - Driver's Side

- 3.1 - Tip seat bottom 1/2 way up.
- 3.2 - Pull cover over seat bottom. Pull tight, tucking cover behind plastic trim at rear of seat bottom.
- 3.3 - Ensure that the metal restraint loops go through the holes in the cover.
- 3.4 - Push top flap between seat back and bottom.
- 3.5 - Tip seat bottom up.
- 3.6 - Pull top and bottom flaps tight and fasten together.

Repeat for 60 Portion - Passenger's Side



4 - Install Headrest Cover



- 4.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- 4.2 - Pull cover over head rest with “loop” Velcro in front and “hook” Velcro in rear.
- 4.3 - Fasten Velcro tabs together under headrest.