INSTALLATION GUIDE



75509 60/40 Rear Bench With Armrest RAM 1500 (2019)



BILL OF MATERIALS

ITEM	QUANTITY
40 Portion Seat Back Cover	1
40 Portion Seat Bottom Cover	1
60 Portion Seat Back Cover	1
60 Portion Seat Bottom Cover	1
Headrest Cover	2
Armrest Cover	1

Seat Backs & Bottoms have tag signifying Driver or Passenger

Watch the install video here: www.ttcovers.com/75509video

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
 - Drip dry or machine tumble dry on a no heat cycle.
 - Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
- 5. Do not use bleach.




1 - Preparation



- 1.1 Tip seat bottom up.
- □ 1.2 Remove headrests by pressing in tabs at base of headrest and pulling up
- ☐ 1.3 Remove seat belt recepticles from the elastic straps.



2 - Install Seat Back Cover

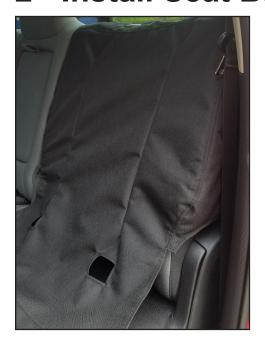











40 Portion - Driver's Side

- 2.1 Push center flap behind seat back, between the brackets.
- □ 2.2 Push outside flaps down on outside of brackets.
- □ 2.3 Reach up behind seat from bottom and pull flaps down.
- 2.4 Pull cover down over seat back.
- □ 2.5 Tip seat bottom 1/2 way down and push front flaps between seat back and botom.
- 2.6 Tip seat bottom up. Pull front and back flaps tight and fasten together.
- □ 2.7 Line holes in cover up with headrest holes and work holes around plastic trim.
- 2.8 Push front flap between seat back and seat bottom.
- □ 2.9 Pull front flap tight and fasten to Velcro on seat back.

60 Portion - Passenger's Side

- 2.1 Push seat cover behind seatbelt.
- □ 2.2 Push center flap behind seat back, between the brackets.
- □ 2.3 Push outside flaps down on outside of brackets.
- □ 2.4 Reach up behind seat from bottom and pull flaps down.
- 2.5 Pull cover down over seat back.
- □ 2.6 Tip seat bottom 1/2 way down and push front flaps between seat back and botom.
- 2.7 Tip seat bottom up. Pull front and back flaps tight and fasten together.
- 2.8 Line holes in cover up with headrest holes and work holes around plastic trim.
- □ 2.9 Push front flap between seat back and seat bottom.
- 2.10 Pull front flap tight and fasten to Velcro on seat back.
- 2.11 Tip armrest down.
- □ 2.12 Pull cover over armrest, lining holes up with cup holders.
- □ 2.13 Fasten Velcro at rear of armrest.



3 - Install Seat Bottom Cover



40 Portion - Driver's Side

- □ 3.1 Tip seat bottom 1/2 way up.
- □ 3.2 Pull cover over seat bottom. Pull tight, tucking cover behind plastic trim at rear of seat bottom.
- □ 3.3 Ensure that the metal restraint loops go through the holes in the cover.
- □ 3.4 Push top flap between seat back and bottom.
- □ 3.5 Tip seat bottom up.
- □ 3.6 Pull top and bottom flaps tight and fasten together.
- □ 3.7 Feed seat belt recepticles back through the space between the seat bottom and seat back.

Repeat for 60 Portion - Passenger's Side



4 - Install Headrest Cover



- □ 4.1 Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- □ 4.2 Pull cover over head rest with "loop" Velcro in front and "hook" Velcro in rear.
- □ 4.3 Fasten Velcro tabs together under headrest.

