



Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

PART NUMBER

E0822058

PRODUCT TYPE

SINGLE SEAT COVER

PIECES

(1) SEAT BACK

(1) SEAT BOTTOM

(1) HEADREST

(1) STRINGLOCK

LIFETIME WARRANTY

*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by an unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're suppose, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

This warranty only applies to the original purchaser.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

Install Seat Cover

Removing the headrest is optional, but it comes off pretty easily. Just pull straight up.



Pull them tight and secure behind the seat.



Undo all velcro on the seat back. Turn it partly inside out and slide on as shown.



Place the seat bottom cover on. Watch out for the seat adjustment bar - make sure that is still exposed.



Push the flaps between the back and bottom.

Fasten flaps at the top. You can tuck the cover under the plastic headrest mounts for a clean, finished look.



Pull flaps tight and secure behind.



Pull the cover tight against the top of the seat and unroll the cover the rest of the way down.



Push the flaps between the seat back and bottom.



Fasten the strings using the StringLock (see next page)



THE STRINGLOCK

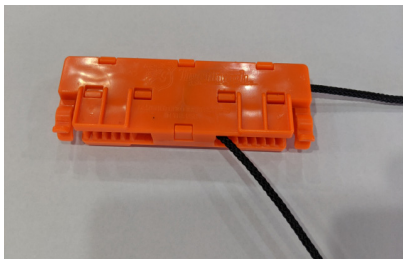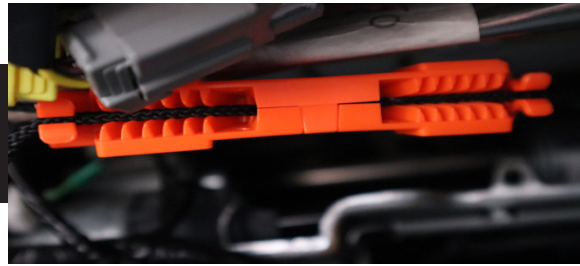


1

Run one string through the channel on the end of the StringLock.




2

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

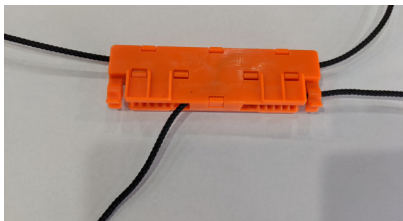


3

Run the second string through the StringLock just like the other one.

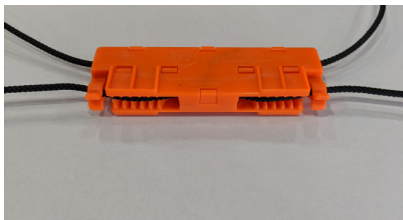

4

Pull the loose end of the second string until everything is tight and lock it into place as well.

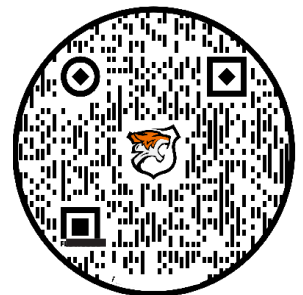

Watch the video
ttcovers.com/stringlock

Put the headrest back on if you removed it. Cover it with the flap towards the front.



Tuck flap under the headrest and secure up inside the back of the headrest cover.

That's all! You're finished!