It's not rocket science, but following these instructions will make installing your seat covers a lot easier.

We promise.

PART: | E82206

PRODUCT: CAT DOZER SEAT COVER

- PIECES: (1) SEAT BACK COVER
 - (1) SEAT BOTTOM COVER
 - (1) HEADREST COVER



Basically, you break it, we buy it. Seriously.

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
 - Drip dry or machine tumble dry on a no heat cycle.
 - Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
- 5. Do not use bleach.

Install Cover

Start with the seat back. Undo all the velcro tabs on the cover. Slide cover over the headrest.

The flaps at the bottom should be facing you.

Push those flaps between the seat back and bottom.





[View from back of seat]

Pull flaps tight and secure to the velcro.

Work the cover the rest of the way down the seat back.

Fasten the tabs under the headarest.





Put headrest cover on with long flap towards the front.

[view from back of seat]

Make sure that the buttons on the back of the seat are throught the holes in the cover.

Take the flaps at the bottom, pull them tight, and secure to the velcro.





Secure the long flap to the velcro inside the back of the headrest cover.

Place seat bottom cover over seat bottom with the flaps towards the back. Press cover around the plastic trim of the adjustment buttons on the front of the seat bottom.

Push the flaps in between the seat back and bottom.



