It's not rocket science, but following these instructions will make installing your seat covers a lot easier.

We promise.

PART: I E82213

PRODUCT: | CAT WHEEL LOADER SEAT COVER

PIECES: (1) SEAT COVER (1) STRINGLOCK



Basically, you break it, we buy it. Seriously.

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
 - Drip dry or machine tumble dry on a no heat cycle.
 - Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
- 5. Do not use bleach.

Install Seat Cover

SEAT DOES NOT NEED TO BE REMOVED FROM EQUIPMENT

Slide cover over seat back.





Run tabs around to the back of the seat, making sure they're under the metal brackets on the edge of the seat.

Make sure the knob on the back of the seat is exposed.

The notch goes around the knob, and the string runs underneath.





Secure using stringlocks. See next page.



THE STRINGLOCK





Run one string through the channel on the end of the StringLock.



Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.



Run the second string through the StringLock just like the other one.



Pull the loose end of the second string until everthing is tight and lock it into place as well.

