

It's not rocket science,  
but following these  
instructions will make  
installing your seat covers  
a lot easier.

We promise.

<b>PART:</b>	<b>E82234</b>
<b>PRODUCT:</b>	<b>JLG 1075, 1644, 1732, AND 2733 TELEHANDLER SEAT COVER</b>
<b>PIECES:</b>	(1) HEADREST (1) BACK (1) BOTTOM (1) STRINGLOCK



*Basically, you break it, we buy it.  
Seriously.*

**Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.**

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

### General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.  
Drip dry or machine tumble dry on a no heat cycle.  
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

# Install Seat Cover

**SEAT DOES NOT NEED TO BE REMOVED FROM EQUIPMENT**

Remove headrest.



Pull tabs tight and secure to velcro on the back.

Turn seat back cover partly inside out (this helps get it snug against the top of the seatback)



Place seat bottom cover over seat bottom. Push flap between back and bottom.

Slide on seatback with pocket facing the back.



Press cover down around the headrest mounts to tuck the edges under the plastic trim.

Run strings to the back and secure with Strinlock - see next page.

Unroll the cover the rest of the way down the seat back.





Make sure the adjustment knob comes through the hole in the side.



Pull flap tight and secure to velcro.

Push the tabs between the seat back and bottom.

# THE STRINGLOCK

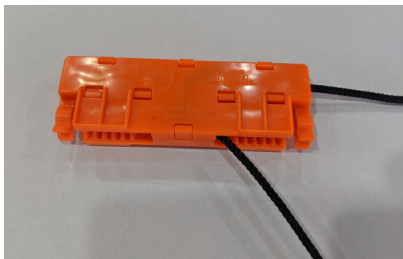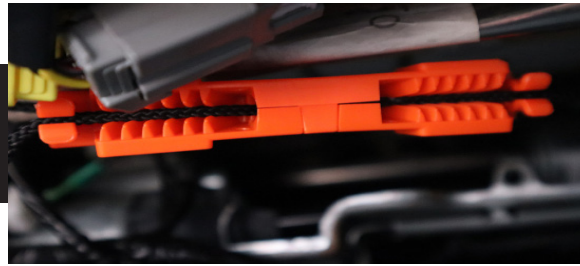


1

Run one string through the channel on the end of the StringLock.




2

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

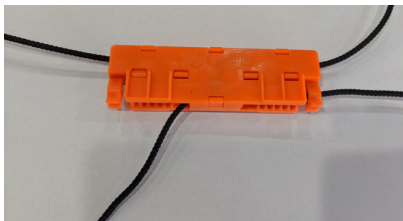

3

Run the second string through the StringLock just like the other one.

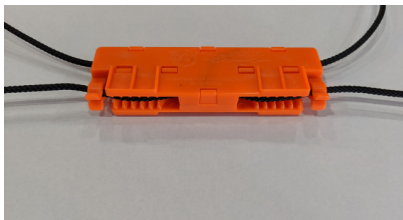

4

Pull the loose end of the second string until everything is tight and lock it into place as well.



Watch the video  
[ttcovers.com/stringlock](http://ttcovers.com/stringlock)

# Install Seat Cover


Headrest cover goes on as shown.



Finished!



Put headrest cover on - the long part of the headrest goes into the 'pocket' of the cover

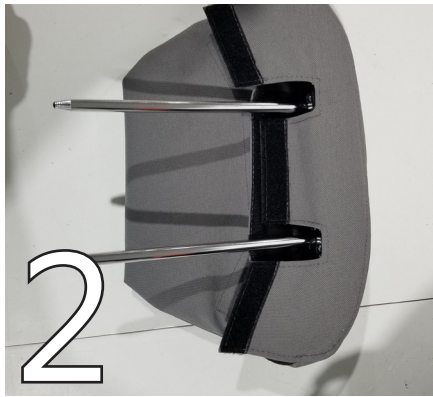

Secure velcro tabs inside the cover.



Put headrest back on the seat.

