

It's not rocket science,  
but following these  
instructions will make  
installing your seat covers  
a lot easier.

We promise.

PART:	E82242
PRODUCT:	DEERE K WHEEL LOADER SEAT COVER
PIECES:	(1) SEAT BACK (1) SEAT BOTTOM (1) HEADREST



Basically, you break it, we buy it.  
Seriously.

**Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.**

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

### General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

# Install Seat Bottom Cover

Undo all velcro on the seat back cover.

Slide it over the headrest with the pocket towards the back.



Secure those flaps inside the back of the cover.



Make sure the knob on the back comes through the hole in the cover.




Place the seat bottom cover on, making sure that the lever on the bottom comes through the cover correctly.



Push the flaps at the bottom between the seat back and bottom.



Push the flaps between the seat back and bottom. Pull tightly from the back and secure to the velcro behind the seat.

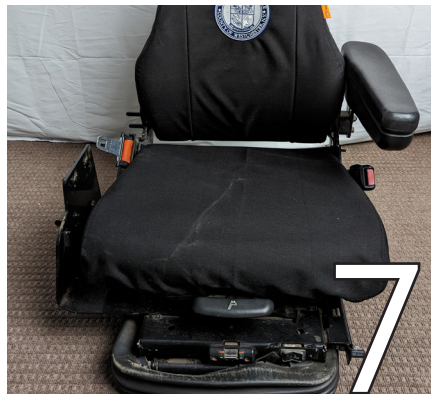

Press the flaps at the top under the headrest.



Slide the headrest cover on with the flaps towards the front.



Push the flaps under the headrest and secure them up inside the back of the cover.