

It's not rocket science,  
but following these  
instructions will make  
installing your seat covers  
a lot easier.

We promise.

<b>PART:</b>	<b>E82249</b>
<b>PRODUCT:</b>	<b>BOBCAT EXCAVATOR SEAT COVER</b>
<b>PIECES:</b>	(1) SEAT BACK COVER (1) SEAT BOTTOM COVER (1) HEADREST COVER (1) STRINGLOCK

# LIFETIME WARRANTY

*Basically, you break it, we buy it.  
Seriously.*

**Your new seat covers are covered by an unconditional, no B.S. warranty.**

That means that if you manage to abuse them to a point that they can't perform like they're suppose, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

This warranty only applies to the original purchaser.

## General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

# Install Cover

Start with the seat back. Undo all the velcro tabs on the cover. Slide cover over the headrest.

The flaps at the bottom should be facing you.



Work the cover the rest of the way down the seat back.



[View from back of seat]

Pull tabs tight under the headrest and secure to hook-and-loop inside the cover.



Push the flaps between the back and bottom. Secure to hook-and-loop at the back.



Place seat bottom cover on seat bottom.

Push flaps between the back and bottom.


Pull tight and secure to velcro.



Secure strings behind the bottom of the seat with StringLock (see next page)





Put headrest cover on. Secure velcro tab inside the back of the headrest.

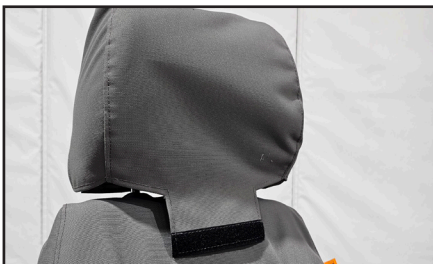

Finished!



# THE STRINGLOCK

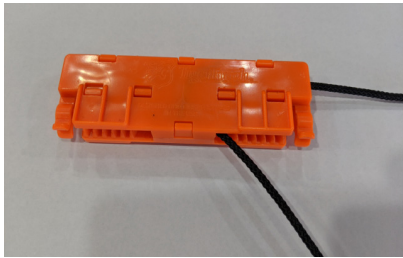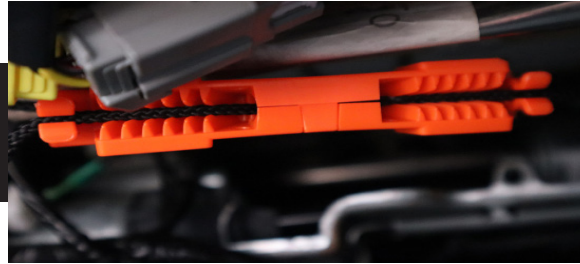


1

Run one string through the channel on the end of the StringLock.



2

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

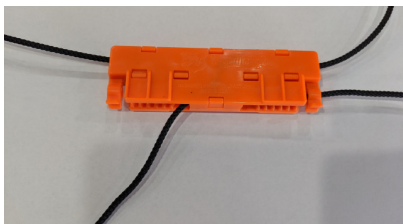


3

Run the second string through the StringLock just like the other one.



4

Pull the loose end of the second string until everything is tight and lock it into place as well.

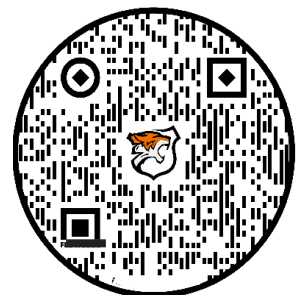

Watch the video  
[ttcovers.com/stringlock](http://ttcovers.com/stringlock)