

It's not rocket science,
but following these
instructions will make
installing your seat covers
a lot easier.

We promise.

PART:	E82254
PRODUCT:	DEERE K & L SERIES WHEEL LOADER (WITH PREMIUM SEAT) SEAT COVER
PIECES:	(1) BACK COVER (1) BOTTOM COVER (1) HEADREST COVER (1) STRINGLOCK COVER

LIFETIME WARRANTY

*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by an unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

This warranty only applies to the original purchaser.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

Install Seat Cover

Undo all velcro. With the seat back cover partly inside-out, work it over the headrest.

The four little flaps should be facing the front.



Tip the seat forward and push the flaps between the seat back and bottom.

Work the cover the rest of the way down the seat back.



Pull tight and secure at the back.

Make sure the knob at the back comes through the gap in the cover.



Now for the seat bottom cover: undo the tabs and strings. Place over the seat bottom as shown.

At the top of the cover, push the flaps between the seat back and headrest.

Fasten up to the tabs along the inside of the seat back.



Tip the seat forward. Push the tabs between the seat back and bottom.

Install Seat Cover

Pull tight and secure at the back.



Fasten with the StringLock (see next page)

Make sure this side lever is exposed and the cover is tucked behind it.



Pull on the headrest cover with the tab facing the front.

Tuck the strings between the metal seat frame and the seat cushion.



Tuck the tab between the headrest and seat back.



Secure up inside the back of the headrest cover.

Run both strings out behind the seat as shown.



You're finished!

THE STRINGLOCK

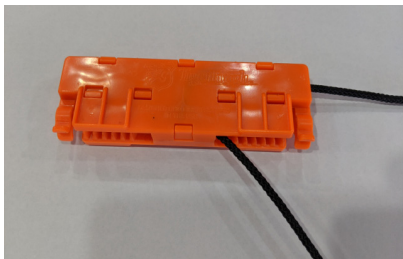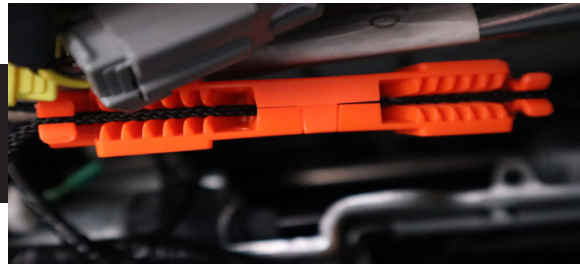

①

Run one string through the channel on the end of the StringLock.



②

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.



③

Run the second string through the StringLock just like the other one.



④

Pull the loose end of the second string until everything is tight and lock it into place as well.



Watch the video
ttcovers.com/stringlock