

Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email ordersetigertough.com.

PART NUMBER S0324002

PRODUCT TYPE SINGLE SEAT COVER

- PIECES (1) SEAT BACK
 - (1) SEAT BOTTOM
 - (1) ARMREST
 - (1) STRINGLOCK



Basically, you break it, we buy it. Seriously.

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
- 5. Do not use bleach.



1.2- Cover inside out and on



1.3- Pull cover over seat back



1.4- Fasten flaps under arm rest



1.4- Fasten flaps under arm rest



1.5- Push flap through to back



1.6- Fasten flap to back of seat



2.1- Put cover on seat bottom



2.2- Push flap through to back



2.3- Front of bottom tipped up



2.4- Work handle through hole



2.6- Push flap over round bar



2.7- Tip seat bottom up



2.8.2- Fasten string with String-Lock (see page above)



2.9- Pull flap from front tight



2.9- Fasten flap from front



2.10- Put seat bottom down



3.1- Put armrest cover on



3.2- "Unroll" armrest cover



3.3- Fasten Velcro Strips

THE STRINGLOCK





Run one string through the channel on the end of the StringLock.



Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.



Run the second string through the StringLock just like the other one.



Pull the loose end of the second string until everthing is tight and lock it into place as well.

NOV Mol 100

