


Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

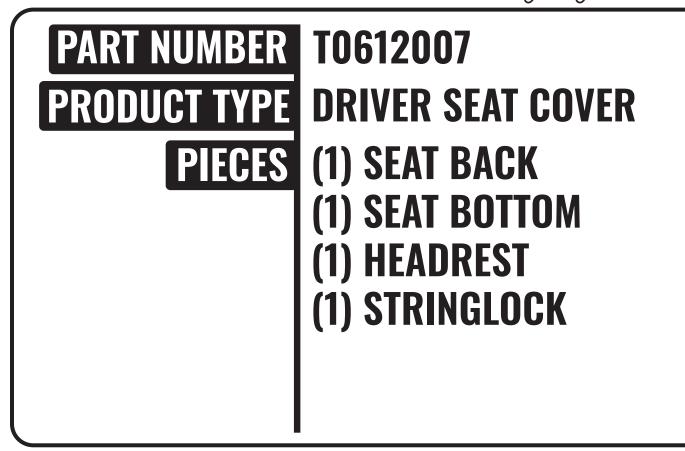



Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right.

Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

- 1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
- 2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
- 3. Soil may be removed with spray cleaner or detergent and water.
- 4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.

IMPORTANT: AIRBAG COMPATABILITY

YOUR SEAT HAS SEAT SIDE AIRBAGS. For maximum safety in the event of a crash, these airbags **MUST NOT** be restricted.

Your cover has been engineered with a tearaway flap (stitched with white thread) that will allow the airbag to deploy. Ensure that this flap & the orange TigerTough tag are facing the door.

TigerTough is not responsable for any issues resulting from incorrectly installed seat covers.

5. Do not use bleach.

1 - Preparation



- 1.1 Slide seat forward and raise to highest position, if possible. Remove Headrest
- □ 1.2 Push button in side of headrest and pull up.
- □ 1.3 Turn plastic bezels counter clockwise and pull up.
- 1.4 Use a flat screwdriver or similar tool to push small metal loop back. (Loop will be on driver's side of headrest posts)
- □ 1.5 While holding loop back, pull headrest up to release from clip.
- □ 1.6 Repeat 1.3 1.5 for both sides of headrest.
- □ 1.7 Pull headrest out of seat back.

2 - Install Seat Back Cover



- □ 2.1 Turn seat back cover 3/4 of the way inside out and pull over seat back.
- □ 2.2 Line holes in cover up with headrest holes.
- **2**.3 Continue pulling the cover down over the seat, unrolling it as you go.
- □ 2.4 Push front flap between seat back and seat bottom.
- □ 2.5 Pull front flap tight and fasten to Velcro on seat back.

3 - Install Seat Bottom Cover





- □ 3.1 Put cover over seat bottom.
- □ 3.2 Tuck cover behind plastic trim.
- □ 3.3 Tuck outside string between seat bottom and trim, where the back and bottom meet. The inside string goes under the seat.
- □ 3.4 Pull strings tight.



- **3.5** Secure strings with StringLock. See next page for StringLock instructions.
- □ 3.6 Push top flap between seat back and seat bottom.
- □ 3.7 Run front flap over seat adjustment lever, wires, and brackets.
- □ 3.8 Pull front flap tight and fasten to Velcro on top flap.

4 - Install Headrest Cover







- □ 4.1 Push headrest back in seat.
- □ 4.2 Push plastic bezels back in place and turn clockwise to secure.
- □ 4.3 Pull cover over head rest with "loop" Velcro in front and "hook" Velcro in rear.
- □ 4.4 Work hole in cover around buttom trim.
- □ 4.5 Fasten Velcro tabs together under headrest.

THE STRINGLOCK







Run one string through the channel on the end of the StringLock.

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.



Run the second string through the StringLock just like the other one.



Pull the loose end of the second string until everthing is tight and lock it into place as well.



Watch the video ttcovers.com/stringlock

