

INSTALLATION GUIDE



T52217 Tactical Driver's Bucket
FORD INTERCEPTOR UTILITY (2020)



BILL OF MATERIALS

ITEM	QUANTITY
Driver Seat Back Cover	1
Driver Seat Bottom Cover	1
Headrest Cover	1

Seat Backs & Bottoms have tag signifying Driver or Passenger.

Ensure airbag patch (same side as the TigerTough tag) goes on the outside edge of the seat.

Watch the installation video at ttcovers.com/t52217video

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
Drip dry or machine tumble dry on a no heat cycle.
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

1 - Preparation




- 1.1 - Slide seat forward and raise to highest position, if possible.
- 1.2 - Push button at base of headrest and pull headrest up.

2 - Install Seat Back Cover



- 2.1 - Unhook plastic clips holding seat back flap down, from under seat bottom.
- 2.2 - Flip up flap on seat back.
- 2.3 - Turn seat back cover 3/4 of the way inside out and pull over seat back.
- 2.4 - Continue pulling the cover down over the seat, unrolling it as you go.
- 2.5 - Push front flap between seat back and seat bottom.
- 2.6 - Pull front flap tight and fasten to Velcro on seat back.
- 2.7 - Fasten top flap by running it under the headrest, pulling tight, and fastening Velcro inside the seat back

3 - Install Seat Bottom Cover

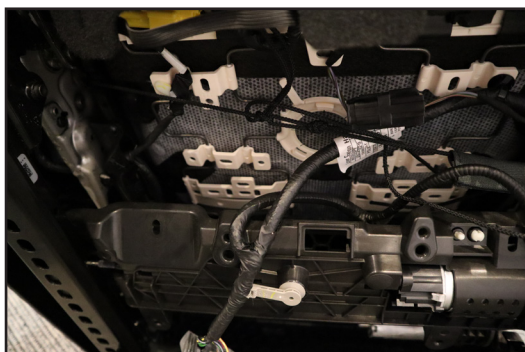

- ❑ 3.1 - Put cover over seat bottom.
- ❑ 3.2 - Tuck cover behind plastic trim around seat bottom.
- ❑ 3.3 - Tuck outside string between seat bottom and trim, where the back and bottom meet. Inside string will go under seat bottom, in front of rear seat mount.
- ❑ 3.4 - Push top flap between seat back and seat bottom.
- ❑ 3.5 - Run front flap over seat adjustment lever, wires, and brackets.
- ❑ 3.6 - Pull front flap tight and fasten to Velcro on top flap.
- ❑ 3.7 - Ensure both strings are in front of rear seat mounts when pulled under the seat.
- ❑ 3.8 - Tie a loop in one string. Run the other string through the loop, pull tight, and tie string back on itself. It is important to pull tight as this is what keeps your cover from shifting.

For assistance with installation, call us at 507.246.3545



4 - Install Headrest Cover



- ❑ 4.1 - Pull cover over head rest with “loop” Velcro in front and “hook” Velcro in rear.
- ❑ 4.2 - Pull front flap tight under headrest, tuck inside rear of headrest and fasten to Velcro.

