



Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

PART NUMBER

W0521038

PRODUCT TYPE

BUCKET SEAT COVERS

PIECES

(1) DRIVER BACK

(1) DRIVER BOTTOM

(1) PASSENGER BACK

(1) PASSENGER BOTTOM

(2) HEADRESTS

(2) STRINGLOCKS



*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right.

Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.


IMPORTANT: AIRBAG COMPATIBILITY

YOUR SEAT HAS SEAT SIDE AIRBAGS. For maximum safety in the event of a crash, these airbags **MUST NOT** be restricted.

Your cover has been engineered with a tearaway flap (stitched with white thread) that will allow the airbag to deploy. Ensure that this flap & the orange TigerTough tag are facing the door.

TigerTough is not responsible for any issues resulting from incorrectly installed seat covers.

1 - Preparation

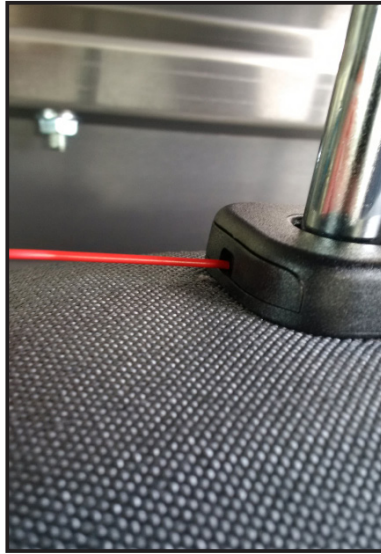


- 1.1 - Slide seat forward and raise to highest position, if possible.
- 1.2 - Remove headrest by pressing in tabs at base of headrest and pulling up. Press the small tab on the inside of the headrest mount with a paperclip or small clip.

2 - Install Seat Bottom Cover



- 2.1 - Ensure the tag inside the cover corresponds with the seat you are working on.
- 2.2 - Lean seat back.
- 2.3 - Undo elastic straps from under seat bottom to release seat back flap.
- 2.4 - Push flap on top of cover between seat back and seat bottom.
- 2.5 - Tuck sides of cover behind plastic trim.
- 2.6 - Push strings between seat bottom and plastic trim. They will go through where the seat back and bottom meet.
- 2.7 - Pull strings tight under the seat, and secure using the StringLock device (see next page). The tighter, the better.
This is what keeps your cover from shifting
- 2.8 - Pull bottom flaps from front of seat bottom and attach to top flap under the rear of the seat.
- 2.9 - Flaps **MUST** run OVER bars and brackets under seat.
- 2.10 - Repeat on other side.

THE STRINGLOCK

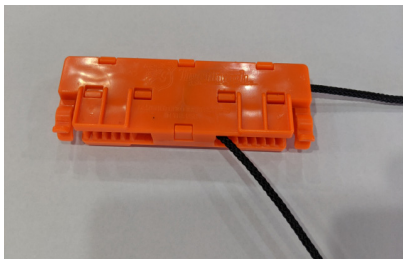


1

Run one string through the channel on the end of the StringLock.




2

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

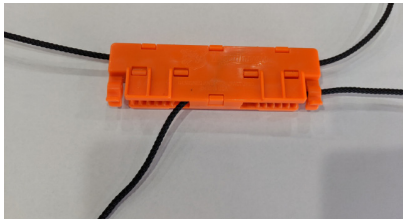


3

Run the second string through the StringLock just like the other one.

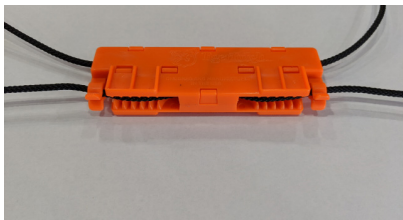

4

Pull the loose end of the second string until everthing is tight and lock it into place as well.

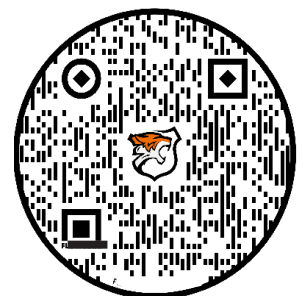

Watch the video
ttcovers.com/stringlock

3 - Install Seat Back Cover



- 3.1 - Turn cover 3/4 of the way inside out.
- 3.2 - Pull cover over seat back, pulling tight against the top of the seat.
- 3.3 - Align the holes in the cover with the headrest holes on the seat back.
- 3.4 - Work the plastic trim around the headrest holes through the holes in the seat cover.
- 3.5 - Pull the cover down over the seat, unrolling as you go.
- 3.6 - Attach the Velcro flaps underneath of the armrest.
- 3.7 - Push the front flap of the cover between the seat back and seat bottom.
- 3.8 - Pull flap tight and fasten to Velcro under seat bottom.
- 3.9 - Re-attach elastic straps under seat bottom.
- 3.10 - Pull the rear flap tight and fasten to Velcro under seat bottom.
- 3.11 - Repeat on other side.

4 - Install Passenger's Seat Bottom Cover



- 4.1 - Ensure the tag inside the cover corresponds with the seat you are working on.
- 4.2 - Lean seat back.
- 4.3 - Undo elastic straps from under seat bottom to release seat back flap.
- 4.4 - Push flap on top of cover between seat back and seat bottom.
- 4.5 - Tuck sides of cover behind plastic trim.
- 4.6 - Push strings between seat bottom and plastic trim. They will go through where the seat back and bottom meet.
- 4.7 - Pull strings tight and secure with StringLock device in the same way as the driver's seat..
- 4.8 - Pull bottom flaps from front of seat bottom and attach to top flap under the rear of the seat.
- 4.9 - Flaps MUST run OVER bars and brackets under seat.

7 - Install Headrest Cover



- ❑ 7.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- ❑ 7.2 - Pull cover over headrest with "loop" Velcro in front and "hook" Velcro in rear.
- ❑ 7.3 - Fasten Velcro tabs together under headrest.