



Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

PART NUMBER

W0555052

PRODUCT TYPE

60/40 SEAT COVER

PIECES

(1) 60 BACK

(1) 60 BOTTOM

(1) 40 BACK

(1) 40 BOTTOM

(3) HEADRESTS

(1) ARMREST

VIDEO INSTRUCTIONS

case sensitive link

ttcovers.com/55552video





*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

 
 
1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

1 - Preparation



- ❑ 1.1 - Remove headrests by pressing in tabs at base of headrest and pulling up

2 - Install Seat Back Cover

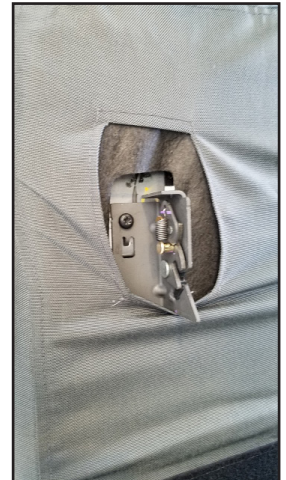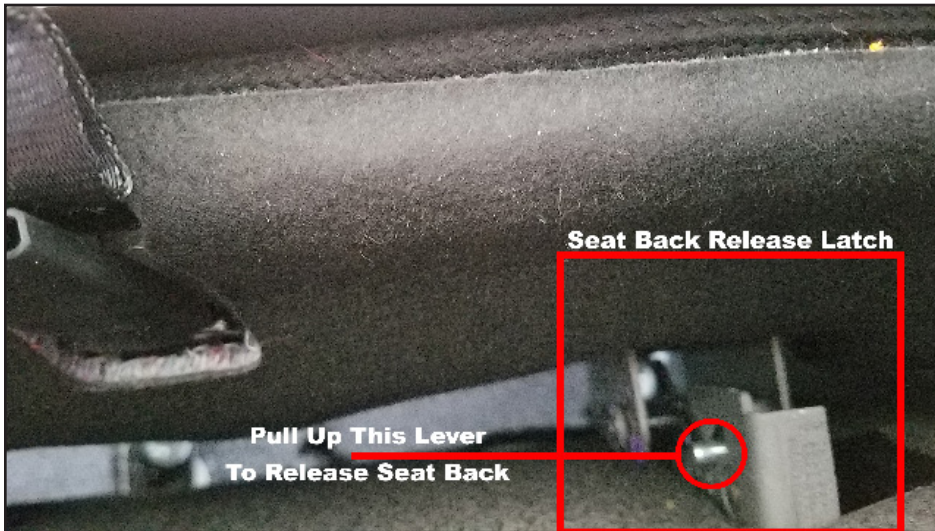

60 Portion - Driver's Side

- 2.1 - Tip seat bottom up
- 2.2 - Release the seat back from the rear of the cab by reaching behind the seat (near where the outside headrest was) and pulling up on the lever to release the latch. See pictures for detail.
- 2.3 - Tip seat back forward.
- 2.4 - Tip seat bottom back down.
- 2.5 - Slide cover behind seat belt and place over seat back.
- 2.6 - Work holes in cover around plastic trim for headrests.
- 2.7 - Pull cover tight against top of seat back and work down over the seat.
- 2.8 - Push front flap between seat back and seat bottom.
- 2.9 - Tip seat bottom up.
- 2.10 - Pull front flap tight and fasten to Velcro on seat back.
- 2.11 - Tip armrest down.
- 2.12 - Pull cover over armrest, lining holes up with cup holders.
- 2.13 - Fasten Velcro at rear of armrest.

 
2 - Install Seat Back Cover, Continued



40 Portion - Passenger's Side

- 2.1 - Pull loop on side of seat back to tip seat forward.
- 2.2 - Slide cover over seat back.
- 2.3 - Work holes in cover around plastic trim for headrests.
- 2.4 - Pull cover tight against top of seat back and work down over the seat.
- 2.5 - Push front flap between seat back and seat bottom.
- 2.6 - Tip seat bottom up.
- 2.7 - Pull front flap tight and fasten to Velcro on seat back.

3 - Install Seat Bottom Cover

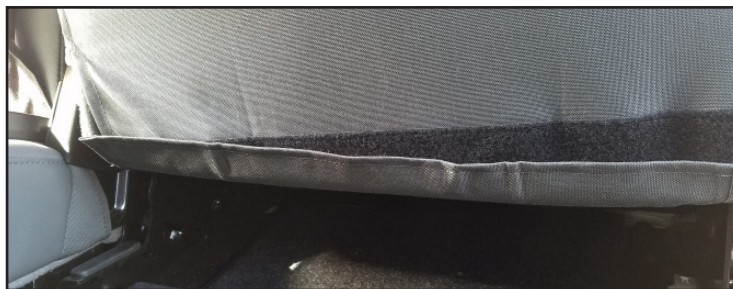

60 Portion - Driver's Side

- 3.1 - Tip seat bottom up.
- 3.2 - Pull cover over seat bottom.
- 3.3 - Ensure that the metal car seat restraint loops go through the holes in the cover.
- 3.4 - Push top flap between seat back and bottom.
- 3.5 - Pull Velcro side flaps tight and fasten to the bottom of the seat.
- 3.5 - Tip seat bottom up.
- 3.6 - Pull top and bottom flaps tight and fasten together.

Repeat for 40 Portion - Passenger's Side

4 - Install Headrest Cover



- 4.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- 4.2 - Pull cover over head rest with “loop” Velcro in front and “hook” Velcro in rear.
- 4.3 - Fasten Velcro tabs together under headrest.



TigerTough.