



Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

PART NUMBER

W0723042

PRODUCT TYPE

40/20/40 SEAT COVER

PIECES

(1) DRIVER BACK

(1) DRIVER BOTTOM

(1) PASSENGER BACK

(1) PASSENGER BOTTOM

(1) CONSOLE BACK

(1) CONSOLE BOTTOM

(2) SEAT HEADREST

(2) STRINGLOCKS



*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right.

Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

IMPORTANT: AIRBAG COMPATIBILITY

YOUR SEAT HAS SEAT SIDE AIRBAGS. For maximum safety in the event of a crash, these airbags **MUST NOT** be restricted.

Your cover has been engineered with a tearaway flap (stitched with white thread) that will allow the airbag to deploy. Ensure that this flap & the orange TigerTough tag are facing the door.

TigerTough is not responsible for any issues resulting from incorrectly installed seat covers.

1 - Preparation



- 1.1 - Slide seat forward and raise to highest position, if possible.
- 1.2 - Remove headrest by pressing in tabs at base of headrest and pulling up

2 - Install Seat Bottom Cover





Under seat, from front. Flap goes over all bars & wires.



- 2.1 - Unhook plastic clips holding seat back flap down, from under seat bottom.
- 2.2 - Flip up flap on seat back.
- 2.3 - Place cover over seat bottom.
- 2.4 - Push top flap between seat back and seat bottom.
- 2.5 - Run outside string straight down between seat bottom and plastic trim, where seat back and bottom meet.
Inside string goes under seat, in front of rear seat mount.
- 2.6 - Tuck side of cover behind plastic trim on outside of seat.
- 2.7 - Pull strings under seat and pull tight.
Secure with StringLock (see next page)
- 2.8 - Run flap from front of seat under the seat and over all brackets and wiring, except last round bar.
Flap must run under the last bar.
- 2.9 - Pull flap as tight as possible and fasten to Velcro on top flap.

THE STRINGLOCK

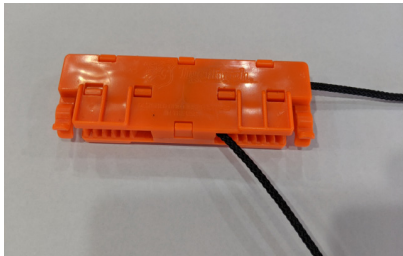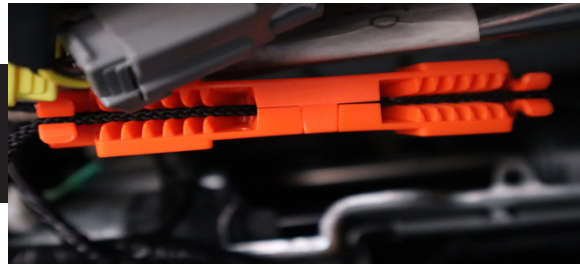


①

Run one string through the channel on the end of the StringLock.



②

Pull the string tight, pulling the StringLock towards one edge of the seat. Press the string into the clamp, locking it in place.

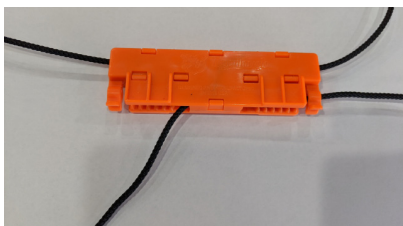

③

Run the second string through the StringLock just like the other one.



④

Pull the loose end of the second string until everthing is tight and lock it into place as well.



Watch the video
ttcovers.com/stringlock

3 - Install Seat Back Cover




Seat back flap, fastened under rear of seat.



- 3.1 Turn cover 3/4 of the way inside out.
- 3.2 Pull cover over seat back, pulling tight against the top of the seat.
- 3.3 Align the holes in the cover with the headrest holes on the seat back.
- 3.4 Work the plastic trim around the headrest holes through the holes in the seat cover.
- 3.5 Pull the cover down over the seat, unrolling as you go.
- 3.6 Push the front flap of the cover between the seat back and seat bottom.
- 3.7 Pull flap tight and fasten to Velcro under seat bottom.
- 3.8 Pull the rear flap tight and fasten to Velcro under seat bottom.

4 - Install Headrest Cover

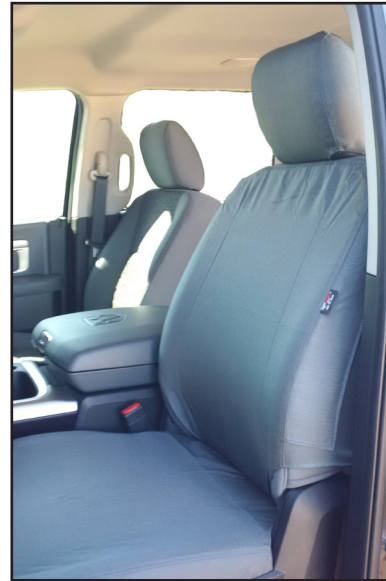

- 4.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- 4.2 - Pull cover over head rest with "loop" Velcro in front and "hook" Velcro in rear.
- 4.3 - Fasten Velcro tabs together under headrest.

5 - Install Center Console Back

- 5.1 - Lay console down.
- 5.2 - Tip lid up.
- 5.3 - Pull cover over lid, lining latch handle up with hole in cover.
- 5.4 - Close lid and tip console up.
- 5.5 - Pull cover between seat back and bottom.
- 5.6 - Pull cover up and over seat back.
- 5.7 - Lay console down.
- 5.8 - Pull rear side straps tight and fasten to rear of console.
- 5.9 - Lay console down.
- 5.10 - Open console.
- 5.11 - Fasten side straps behind hole for lid latch.

6 - Install Center Console Bottom, With Storage

- 6.1 - Tip seat bottom up.
- 6.2 - Pull cover over seat bottom.
- 6.3 - Pull side flaps tight and fasten to bottom of seat cushion.
- 6.4 - Push top flap between seat back and seat bottom.
- 6.5 - Pull flap tight and fasten to Velcro on bottom of seat cover.

