



Hey there!

It's not rocket science, but following the instructions will make installing your seat covers a lot easier. We promise.

If you have any questions, comments, or issues, we're here to help! You can reach us at 507.246.3545 (call or text) or email orders@tigertough.com.

PART NUMBER

W0755014

PRODUCT TYPE

60/40 SEAT COVER

PIECES

(1) 60 BACK

(1) 60 BOTTOM

(1) 40 BACK

(1) 40 BOTTOM

(2) HEADRESTS

(1) ARMREST



*Basically, you break it, we buy it.
Seriously.*

Your new seat covers are covered by a two-year, unconditional, no B.S. warranty.

That means that if you manage to abuse them to a point that they can't perform like they're supposed to within two years of when you bought them, we'll make it right. Depending on what is more practical, we'll either repair or replace the damaged cover.

General care instructions:

 
 
1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent. Drip dry or machine tumble dry on a no heat cycle. Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

1 - Preparation



- 1.1 - Tip seat bottom up.
- 1.2 - Remove headrests by pressing in tabs at base of headrest and pulling up
- 1.3 - Remove seat belt receptacles from the elastic straps.

2 - Install Seat Back Cover

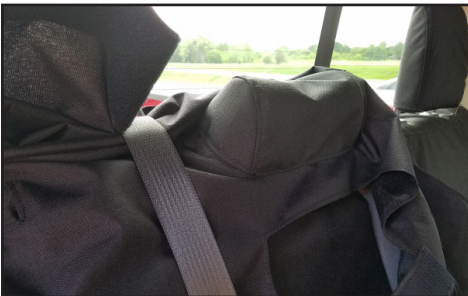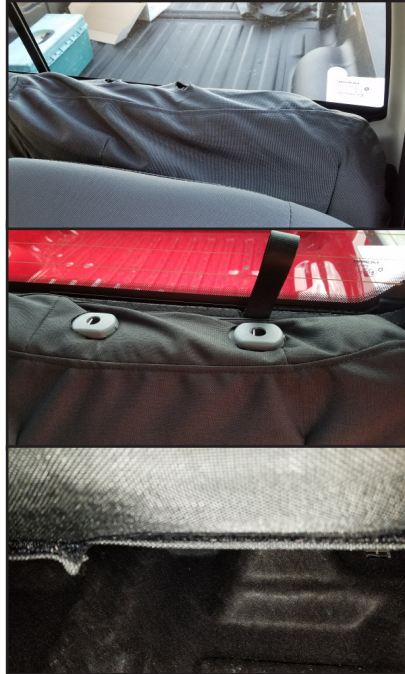

40 Portion - Driver's Side

- 2.1 - Push center flap behind seat back, between the brackets.
- 2.2 - Push outside flaps down on outside of brackets.
- 2.3 - Reach up behind seat from bottom and pull flaps down.
- 2.4 - Pull cover down over seat back.
- 2.5 - Tip seat bottom 1/2 way down and push front flaps between seat back and bottom.
- 2.6 - Tip seat bottom up. Pull front and back flaps tight and fasten together.
- 2.7 - Line holes in cover up with headrest holes and work holes around plastic trim.
- 2.8 - Push front flap between seat back and seat bottom.
- 2.9 - Pull front flap tight and fasten to Velcro on seat back.

60 Portion - Passenger's Side

- 2.1 - Push seat cover behind seatbelt.
- 2.2 - Push center flap behind seat back, between the brackets.
- 2.3 - Push outside flaps down on outside of brackets.
- 2.4 - Reach up behind seat from bottom and pull flaps down.
- 2.5 - Pull cover down over seat back.
- 2.6 - Tip seat bottom 1/2 way down and push front flaps between seat back and bottom.
- 2.7 - Tip seat bottom up. Pull front and back flaps tight and fasten together.
- 2.8 - Line holes in cover up with headrest holes and work holes around plastic trim.
- 2.9 - Push front flap between seat back and seat bottom.
- 2.10 - Pull front flap tight and fasten to Velcro on seat back.
- 2.11 - Tip armrest down.
- 2.12 - Pull cover over armrest, lining holes up with cup holders.
- 2.13 - Fasten Velcro at rear of armrest.

3 - Install Seat Bottom Cover



40 Portion - Driver's Side

- 3.1 - Tip seat bottom 1/2 way up.
- 3.2 - Pull cover over seat bottom. Pull tight, tucking cover behind plastic trim at rear of seat bottom.
- 3.3 - Ensure that the metal restraint loops go through the holes in the cover.
- 3.4 - Push top flap between seat back and bottom.
- 3.5 - Tip seat bottom up.
- 3.6 - Pull top and bottom flaps tight and fasten together.
- 3.7 - Feed seat belt receptacles back through the space between the seat bottom and seat back.

Repeat for 60 Portion - Passenger's Side

4 - Install Headrest Cover



- 4.1 - Put headrest back in seat by pressing plastic tabs and pushing down on headrest.
- 4.2 - Pull cover over head rest with “loop” Velcro in front and “hook” Velcro in rear.
- 4.3 - Fasten Velcro tabs together under headrest.