OPERATING MANUAL CORDLESS DRILL



18V/21V

SPECIFICATIONS

CHUCK:

3/8"(10mm)

Rated Voltage: 18V/21V

No-Load Speed I: 0-350rpm

Speed II: 0-1400rpm



Read through carefully and understand these instructions before use.

APPLICATIONS

- Driving in and loosening screws in wood, metal, ceramic and plastic.
- Drilling in wood, metal, ceramic and plastic.

SPECIFICATIONS


| Power (DC) | | 18V/21V |
|------------------------|------------------|------------|
| Max. Clamping Capacity | | 10 mm |
| Max. Screw Diameter | | 7 mm |
| Battery | Туре | Li-lon |
| No Load Speed | No-Load Speed I | 0-350 rpm |
| | No-Load Speed II | 0-1400 rpm |
| Max. Drilling Capacity | Steel | Ø10 mm |
| | Wood | Ø20 mm |
| Drill Spindle Threads | | 1/2-20UNF |
| Net Weight | | 1.1 kg |

Due to the continuing program of research and development, the specifications herein are subject to change without prior notice.

ADDITIONAL SAFETY RULES

- To be safe, disabled, retarded, untrained people or people disable to operate independently, including young children, are discouraged to operate the tool without supervision. Young children should be supervised to ensure that they do not play with the tool.
- Check the tool and battery carefully before putting it into use. Stop operation immediately when malfunctions be found and send the tool to be repaired by qualified serviceman. Do not open the tool yourself.
- 3. Use only original LB10813-1type rechargeable Li-Ion battery for this tool and recharge only with the FFDC108-1 type charger supplied with the tool. Use of other type of battery or charger, e.g. imitated, modified or with other brand, may result in a risk of battery burst causing personal injury and property damage.
- 4. Be sure that the battery is installed correctly and tightly before operating the tool.
- 5. Always wear protective devices to avoid personal injury.
- 6. Hold tool by insulated gripping surfaces when performing an operation on wall and floor where the cutting tool may contact hidden wiring. Contact with a "live" wire will also make exposed metal parts of the tool "live" and shock the operator.
- Use appropriate detectors to determine if utility lines, such as electric lines, gas lines and water lines, are hidden in the work area before screwing or drilling on the wall, floor or ceiling.
- Keep working area well ventilated. Non-specified or damaged battery may produce poisonous gases causing personal injury.
- 9. Always be sure to have a firm footing and hold the tool firmly.
- 10. Be sure no one is below when using the tool in high locations.

GENERAL DESCRIPTIONS

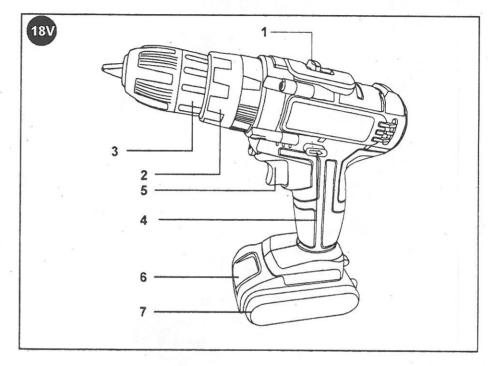

1. Speed Selector

5. Switch

2. Torque Setting Ring

6. Battery Unlocking Button

3. Keyless Chuck


- 7. Battery
- 4. Reversing Switch Lever

INSTRUCTIONS FOR OPERATION

Battery Charging

CAUTION:

- Make sure that the AC voltage of the power source meets the requirement specified on the nameplate of the charger.
- Fully charge the battery indoors before operating the tool with it. The battery was only partially charged before leaving factory.
- A significantly reduced working period after charging indicates a used up battery that must be replaced.

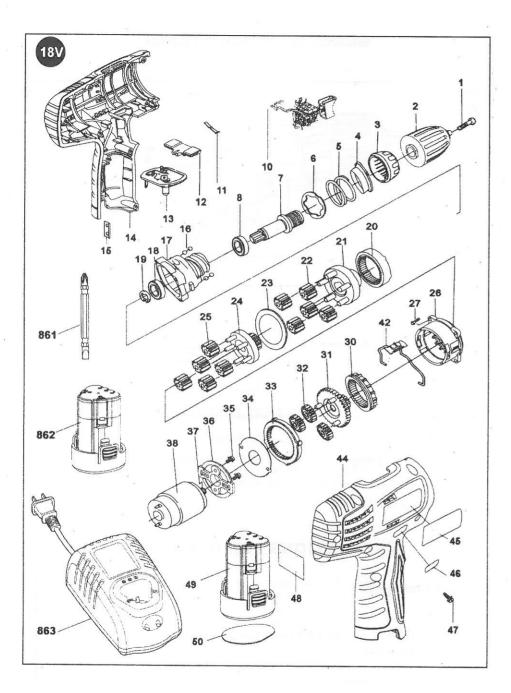

EXPLAINATION OF GENERAL VIEW

| | | Т | |
|-----|--------------------------------|-----|--|
| 1 | Pan Head Screw M6×20 | 30 | 2# Annular Gear |
| 2 | Keyless Drill Chuck | 31 | 1# Planet Carrier |
| 3 | Torque Setting Ring | 32 | 1# Planet Gear |
| 4 | Adjusting Nut | 33 | 1# Annular Gear |
| 5 | Compression Spring | 34 | Shim |
| 6 | Shim | 35 | Pan Head Screw M3 × 6 (with Spring and Flat Washers) |
| 7 · | Drill Spindle | 36 | Gear Case Cover |
| 8 | Ball Bearing 618-2RZ | 37 | Driving Gear |
| 10 | Switch | 38 | Motor |
| 11 | Click Plate | 42 | Speed Selector |
| 12 | Reversing Switch Lever | 44 | Right-half Housing Set |
| 13 | Terminal Block | 45 | Nameplate |
| 14 | Left-half Housing Set | 46 | Fuel Indicator Label |
| 15 | Clip Board | 47 | Pan Hd. Tapping Screw ST2.9×13 |
| 16 | Steel Ball | 48 | Battery Pack Label |
| 17 | Front Gear Case | 49 | Battery Pack |
| 18 | Ball Bearing 618-2RZ | 50 | Battery Base Label |
| 19 | Circlip for Shaft | 861 | Driver Bit |
| 20 | 3# Annular Gear | 862 | Battery |
| 21 | 3# Planet Carrier | 863 | Battery Charger |
| 22 | 3# Planet Gear | | |
| 23 | Washer | | : |
| 24 | 2# Planet Carrier | | |
| 25 | 2# Planet Gear | | |
| 26 | Rear Gear Case | | |
| 27 | Pan Hd. Tapping Screw ST2.9×13 | | |
| | | | |