

KENWOOD NX-1200 QUICK REFERENCE GUIDE



S - Squelch

Press to select squelch and use the B and C buttons to adjust. Press S to save.

A - Button Lock

Press to Lock/Unlock radio on selected channel and zone.

<B - Bank Down

Switches DOWN between channel banks.

C> - Bank Up

Switches up between channel banks.

Press to return to Home Channel. Press and hold on your designated frequency until you hear a beep to set as your Home Channel.

O - Direct Channel 1

Press to return to the selected direct channel. Press and hold on your designated frequency until you hear a beep to set as your direct channel.



562-427-8177



www.pciraceradios.com



6185 Phyllis Drive, Cypress, CA 90630





