

KENWOOD TK-7360/NX-1700 QUICK REFERENCE GUIDE





 - Power

+ / ^ - Volume UP

- / v - Volume DOWN

  - Channel UP

  - Channel DOWN

 - Monitor

Opens squelch completely while holding to receive weaker signals

S - Squelch

Press to enter squelch mode, use the B & C buttons to adjust and press S to save

A - LCD Brightness

Tap to adjust screen brightness

<B - Bank Down

Switches DOWN between channel banks

C> - Bank Up

Switches UP between channel banks

 - Home Channel

Takes you to Channel 1 Bank 1 "WXMAN"



562-427-8177



www.pciraceradios.com



6185 Phyllis Drive, Cypress, CA 90630

