


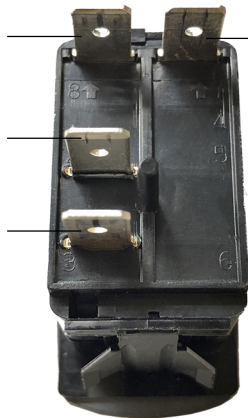

PIN 8: Run jumper to Pin 3 so LED is lit when switch is turned ON.

PIN 2: 12V Positive IN from Battery.

PIN 3: 12V OUT to RaceAir Positive



PIN 7: RaceAir and Battery ground.

NOTE: RACEAIR BOOST IS POLARITY SENSITIVE. IF YOU REVERSE, YOU WILL DAMAGE UNIT.

(Red Positive+ Black Negative-)

Standard Raceair motors with 2 black wires are not polarity sensitive, use one black wire for ground and the other to power motor.

FOR ADDITIONAL HELP, PLEASE CALL US AT: (800) 869-5636
WWW.PCIRACERADIOS.COM