

KENWOOD TK-7360 BUTTON DIAGRAM



- ⏻ - Power
- ^ - Volume UP
- v - Volume DOWN
- △ - Monitor
- S - Squelch
- A - LCD Brightness
- <B - Zone DOWN
- C> - Zone UP
- - Home Channel
- ⏶ - Channel UP
- ⏷ - Channel DOWN



562-427-8177



www.pciraceradios.com



6185 Phyllis Drive, Cypress, CA 90630

