



KENWOOD TK-7360 BUTTON DIAGRAM



 - Power

^ - Volume UP

v - Volume DOWN

 - Channel UP

 - Channel DOWN

 - Monitor

Opens squelch completely while holding to receive weaker signals

S - Squelch

Tap to enter squelch mode, use the B and C buttons to adjust and tap S to save

A - LCD Brightness

Tap to adjust screen brightness

<B - Zone Down

Switches DOWN between banks of channels

C> - Zone Up

Switches UP between banks of channels

 - Home Channel

Takes you to Channel 1 Bank 1 "WXMAN"



562-427-8177



www.pciraceradios.com



6185 Phyllis Drive, Cypress, CA 90630

