




PRECISION

OPERATING INSTRUCTIONS CHRONOGRAPH


Movement Cal. 5030.D & 5021.D

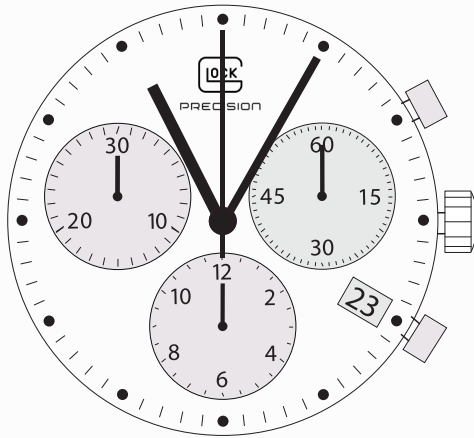


DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Display Elements

Control Buttons

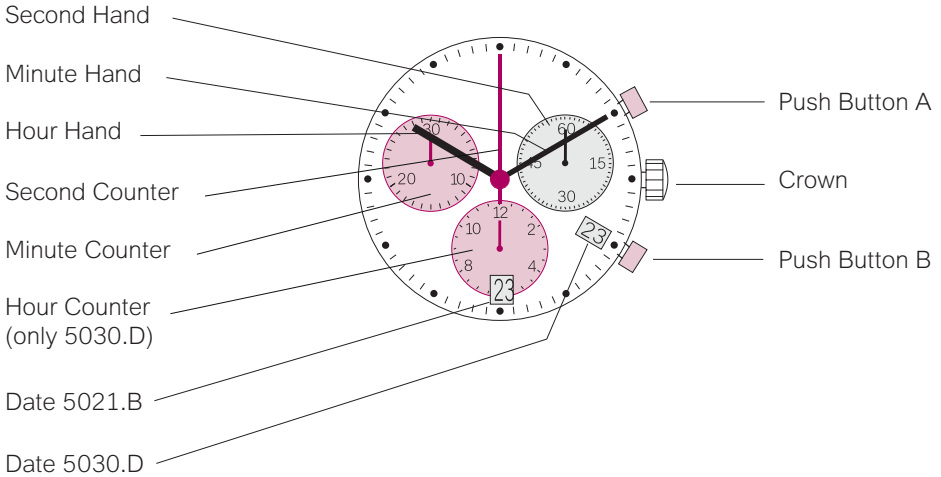



SETTING THE TIME

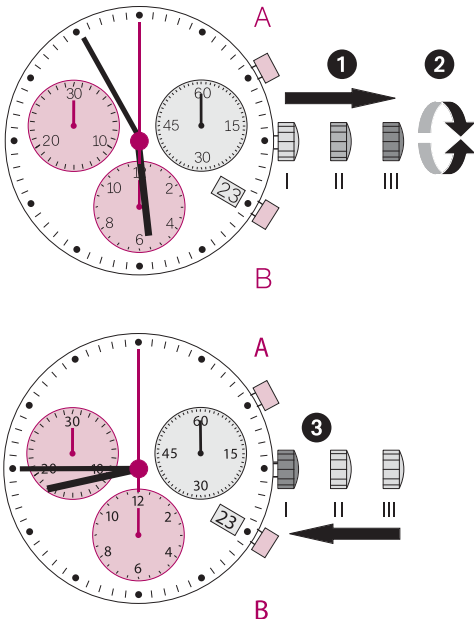

- 1** * Pull out the crown to position III (the watch stops).
- 2** Turn the crown until you reach the correct time, **8:45**.
- 3** * Push the crown back into position I.

Please note: * In order to set the time to the exact second, **1** must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, **3** must be pushed back into position I at the exact second.

SETTING THE DATE (QUICK MODE)

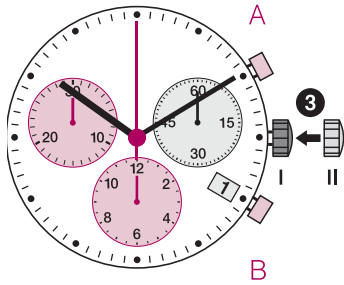
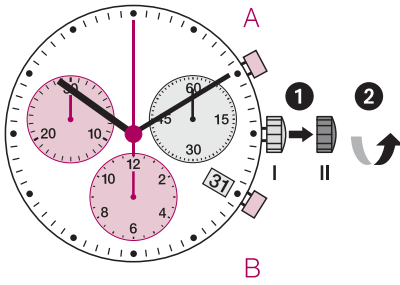


Example:

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date **1** appears.
- 3 Push the crown back into position I.


Please note: During the date-changing phase between approx. 9 PM and midnight, the date must be set to the date of the following day.

SETTING THE DATE/TIME FOLLOWING A BATTERY CHANGE

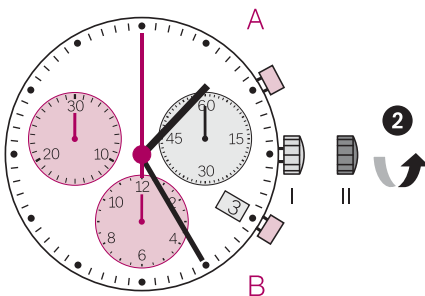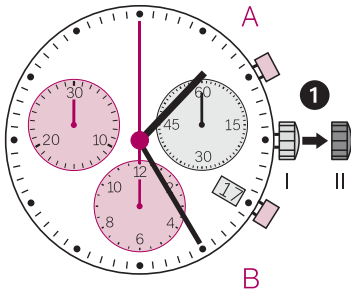


Example:

- Date/time on the watch: **17** /1:25 AM
 - Present date/time: **4** /8:30 PM
- 1 Pull out the crown to position II (the watch continues to run).
 - 2 Turn the crown until yesterday's date appears **3**.

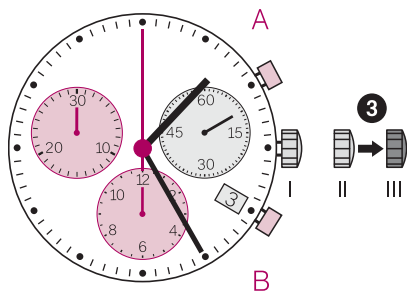


- 3 * Pull out the crown to position III (the watch stops).
- 4 Turn the crown until the correct date **4** appears.
- 5 ** Continue to turn the crown until the correct time of 8:30 PM appears.
- 6 Push the crown back into position I.

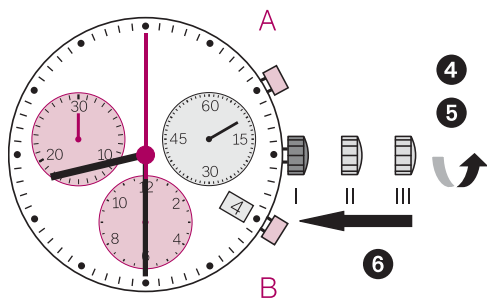

Please note: * To set your watch to the exact second, please refer to the chapter entitled «SETTING THE TIME».


** Please observe the AM/PM clock rhythm.

BASIC FUNCTION (START/STOP/RESET)


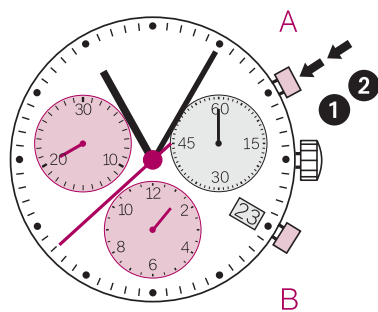


Example:

- 1 **Start:** Press push button **A**.
- 2 **Stop:** To stop the timing, press push button **A** once more and read the chronograph hands: **1 h/20 min/38 sec**.
- 3 **Zero positioning:** Press push button **B**. (The chronograph hands will be reset to their zero positions.)

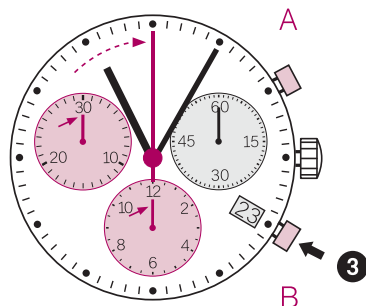

ACCUMULATED TIMING

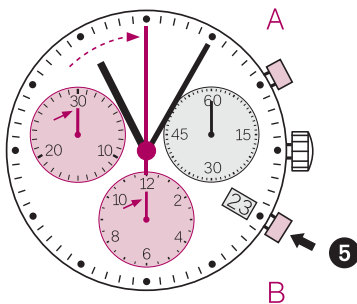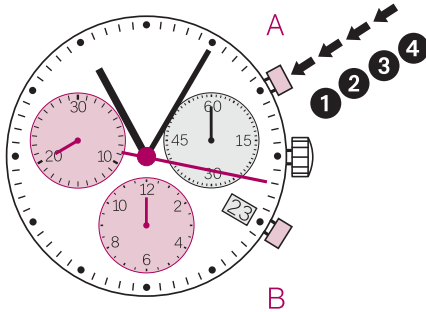

Example:



- 1 **Start:** (start timing)
- 2 **Stop:** (e.g., 15 min 5 sec following 1)
- 3 **Restart:** (timing is resumed)
- 4 ***Stop:** (e.g., 5 min 12 sec following 3)
= 20 min 17 sec

(The accumulated measured time is shown.)

- 5 **Reset:** The chronograph hands are returned to their zero positions.

Please note: * Following 4, the accumulation of the timing can be continued by pressing **push button A** (Restart/Stop, Restart/Stop, ...).

INTERMEDIATE OR INTERVAL TIMING

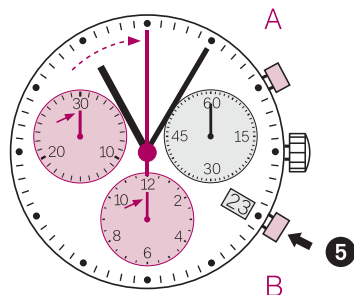
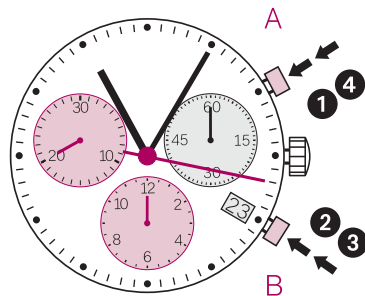


Example:

- 1 **Start:** (start timing)
- 2 **Display interval:** e.g., 20 min 17sec
(timing continues in the background)
- 3 *** Making up the measured time:**
(The chronograph hands are quickly advanced to the ongoing measured time.)
- 4 **Stop:** (Final time is displayed)
- 5 **Reset:** The chronograph hands are returned to their zero position.

Please note: *Following 3, further intervals or intermediates can be displayed by pressing **push button B** (display interval/make up measured time, ...).

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

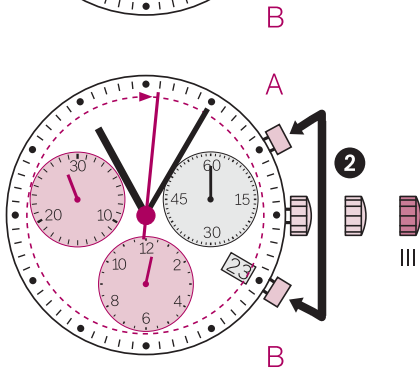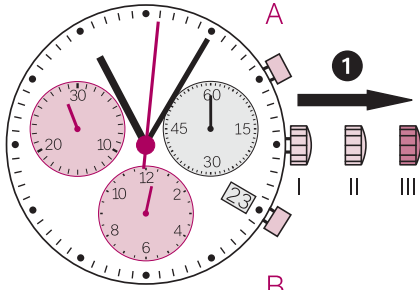

Example:

One or several chronograph hands are not in their correct zero position and have to be adjusted (e.g., following a battery change).

- 1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- 2 Keep push buttons **A and B** depressed **simultaneously** for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).



Adjusting the second counter hand

Single step ↙ A **1 x short**
 Continuous ↙ A **long**



Adjusting the next hand B ↙

Adjusting the hour counter hand at 5030.D (position 6h)


Single step ↙ A **1 x short**
 Continuous ↙ A **long**



Adjusting the next hand B ↙

Adjusting the minute counter hand (position 9h)

Single step ↙ A **1 x short**
 Continuous ↙ A **long**

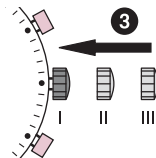

3 Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).