 




Wego 13A



Talk Pad Wego 10



Talk Pad Wego 8



Change button label, image and messages

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎.
2. Select button to edit > **Edit Cell**.
3. Make the button speak by adding OR editing the “Write” command:
 - a. *Add*: **Add Command** > **Chat and Writing** > **Write** > type spoken message > **Done**.
 - b. *Edit*: Select text area within the “Write” command > type the new spoken message.
4. Keep the message and label the same or make them different within the “Write” command:
 - a. *Keep the same*: Toggle on **Same as Cell Label** OR...
 - b. *Make different*: Toggle off **Same as Cell Label** > change the button label by selecting the current label on the cell > type new label > **Done**.
5. Change the button image by selecting the current image on the cell > choose a different symbol or **Find Picture** for more options > select one of the following:
 - a. *Symbols*: Type label name or word to search symbols > select desired symbol.
 - b. *Photo Library*: Select folder containing image > select desired photo.
 - c. *Web Search*: Type label name or word to search web > select desired image.
 - d. *Camera*: Select front or back camera > press **Capture** to take photo.
6. Select **Done** > **Finish Editing** to save changes and exit *Edit Mode*.

Edit/add to word lists

1. Navigate to the desired grid/page.
2. Enter *Edit Mode* by selecting **Options** *** > **Edit Word List** ☰.
3. Select **+** to add new word.
4. Type the new word into the text box.
5. Select **Find Picture** to add a symbol or picture to the button.
6. Select **Word List** to return to main page > **Done**.

Note: Word List buttons are generally a peach colored button on a category page.

Link/jump to grid/page from new button

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎.
 2. Select blank cell > **Jump to Another Grid** >
 - a. Select the existing grid/page you want to link/jump to OR...
 - b. Select **Copy Grid** > choose “.new page template” > rename grid/page > **Done**.
- Note: Not for Word List pages.*

Link/jump to grid/page from existing button

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎.
2. Select button you want to link/jump from > **Edit Cell** > **Add Command** > **Jumps** > **Jump To** >
 - a. Select the existing grid/page you want to link/jump to OR...
 - b. Select **Copy Grid** > choose “.new page template” > rename new grid/page > **Done**.

Change pronunciation

1. Open Settings by selecting **Options** *** > **Settings** ⚙️.
2. Speech > Pronunciation > select **+** to add new word.
3. In the *Word* box: type the word with the correct spelling (e.g. fajita).
4. In the *Pronunciation* box: type the word as you want it pronounced (e.g. faheeta).
5. Select **Test** to hear how the word sounds.
6. When finished, select **Save** > **Done**.

Copy/paste button

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎.
2. Select desired button > **Select** > **Copy** > select new location(s) > **Paste** > **Done**.

Note: Not for Word List pages.

Tip: You can also enter the button selection menu by pressing and holding the desired button until it is activated.

Hide/show cells

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎.
2. Select desired button > **Select** > select more buttons if desired.
3. Open *Style* menu by selecting ✎ > **Cell Accessibility** > **Hidden** > **Done**.
4. Select **Finish Editing** to save changes and exit *Edit Mode*.

Note: Not for Word List pages.

Guided Access

All dedicated devices come with *Guided Access* enabled.

1. Open *Guided Access* menu by quickly triple-clicking the home button. If your device does not have a home button, use the power button.
2. Enter passcode: default password is all **1s (1111 or 111111)**.
3. To continue *Guided Access*: press **Resume** (top right).
4. To turn off *Guided Access*: press **End** (top left).
5. *Lock Menu* (restrict use of specific buttons/categories): open *Guided Access* menu > draw a circle around buttons to restrict > **Resume**.



Important Note: If these instructions do not match your current vocabulary set, please contact Technical Support for assistance.



Wego 13A



Talk Pad 10: Wego Edition



Talk Pad 8: Wego Edition



Edit/change vocabulary categories

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎
2. Select button to edit > **Edit Cell**.
3. To change the label of the button, select the label on the cell > type new label.
4. To change the picture of the button, select the picture on the cell > choose a different symbol or **Find Picture** for more options > select one of the following:
 - a. *Symbols*: Type label name or word to search symbols > select symbol.
 - b. *Photo Library*: Select folder containing image > select desired photo.
 - c. *Web Search*: Type label name or word to search web > select image.
 - d. *Camera*: Select front or back camera > press **Capture** to take photo.
5. Select **Done** > **Finish Editing** to save changes and exit *Edit Mode*.

Save phrases on category pages

Independently program the vocabulary without entering *Edit Mode*.

1. Select **Keyboard** > type the message you want to save to a button.
2. Select **myPhrases** > select the category you want to save you message under.
3. Select **Save** > touch inside the new button that appears.
*Note: To delete, select **Delete** > touch inside the button you want to delete.*

Edit/add words to word list within category

Add several words to a category at once.

1. Navigate to the desired grid/page.
2. Enter *Edit Mode* by selecting **Options** *** > **Edit Word List** ≡
3. Select **+** to add new word.
4. Type the new word into the text box.
5. Select **Word List** to return to main page > **Done**.

Link/jump to grid/page from new button

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎
2. Select blank cell > **Jump to Another Grid** >
 - a. Select the existing grid/page you want to link/jump to OR...
 - b. Select **Copy Grid** > choose ".new page template" > rename grid/page > **Done**.
Note: Not for Word List pages.

Link/jump to grid/page from existing button

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎
2. Select button you want to link/jump from > **Edit Cell** > **Add Command** > **Jumps** > **Jump To** >
 - a. Select the existing grid/page you want to link/jump to OR...
 - b. Select **Copy Grid** > choose ".new page template" > rename new grid/page > **Done**.

Change pronunciation

1. Open Settings by selecting **Options** *** > **Settings** ⚙️
2. Speech > Pronunciation > select **+** to add new word.
3. In the *Word* box: type the word with the correct spelling (e.g. fajita).
4. In the *Pronunciation* box: type the word as you want it pronounced (e.g. faheeta).
5. Select **Test** to hear how the word sounds.
6. When finished, select **Save** > **Done**.

Copy/paste button

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎
2. Select desired button > **Select** > **Copy** > select new location(s) > **Paste** > **Done**.
Note: Not for Word List pages.
Tip: You can also enter the button selection menu by pressing and holding the desired button until it is activated.

Hide/show cells

1. Enter *Edit Mode* by selecting **Options** *** > **Edit Grids** ✎
2. Select desired button > **Select** > select more buttons if desired.
3. Open *Style* menu by selecting ✎ > **Cell Accessibility** > **Hidden** > **Done**.
4. Select **Finish Editing** to save changes and exit *Edit Mode*.
Note: Not for Word List pages.

Guided Access

All dedicated devices come with *Guided Access* enabled.

1. Open *Guided Access* menu by quickly triple-clicking the home button. If your device does not have a home button, use the power button.
2. Enter passcode: default password is all **1s (1111 or 111111)**.
3. To continue *Guided Access*: press **Resume** (top right).
4. To turn off *Guided Access*: press **End** (top left).
5. *Lock Menu* (restrict use of specific buttons/categories): open *Guided Access* menu > draw a circle around buttons to restrict > **Resume**.



Important Note: If these instructions do not match your current vocabulary set, please contact Technical Support for assistance.