



Wego 13A



Talk Pad Wego 10




Talk Pad Wego 8



Wego 5A



## Edit a Button Message and Image

1. **Menu > Edit Page** > select button to edit > **Edit This Button**.
2. **Button Label:** In text box below *Button Label*, type text to display on button > **Done** (keyboard).
3. **Button Message:** In text below *Button Message*, type message. Button should speak when pressed > **Done** (keyboard).
4. Select, import, or take a new button image:  
*Choose a symbol:* **Select Image** > tap magnifying glass  > type word to search > **Search** > select symbol > **Save** > **Done**.  
*Import photo:* **Import Image** > **Image Library** > select picture from photo library > **Use** > **Save** > **Done**.  
*Take a picture:* **Import Image** > **Camera** > press white circle on screen to take a picture > **Use Photo** > **Save** > **Done**.

## Add a Button Action > NAVIGATE

1. **Menu > Edit Page** > tap button to edit > **Edit This Button**.
2. Scroll down to *Button Actions* > **Add** > **Navigate**.
3. Select page to navigate to > select **No Animation** or animation type > **Save** > **Done**.

## Create a New Page from a Template

1. **Menu > Edit Page**.
2. **Menu > Load Another Page** > choose ".template" > **Done**.
3. **Menu > Import/Copy Pages** > **Duplicate this Page**.
4. **Menu > Load Another Page** > choose ".template (Copy)" > **Done**.
5. **Menu > Edit Page Layout** > under *Page Name*, type new page name > **Save** > **Done**.
6. Connect the new page to a button by following *Add a Button Action* > *NAVIGATE* Steps 1-3.

## Copy and Paste Buttons

1. **Menu > Edit Page** > select button to copy > **Copy Button**.
2. Tap location to paste button > **Paste Button**.
3. To copy button style only, follow above instructions, but select **Paste Button Style** on Step 2.
4. To copy a button and have all of its changes reflect across all pages, follow the above instructions but select **Use Same Button** on step 2. Use this only for buttons you want to be exactly the same throughout your page set.

## Change the Pronunciation of a Word

1. **Menu > Edit Pronunciations**.
2. Tap the + icon.
3. In the *Word* text box, type word you would like to edit (e.g. fajita).
4. In the *Pronounce As* text box, type the word's proper pronunciation (e.g. fuhheeta).
5. Select **Pronounce** to hear pronunciation.
6. **Save** > **Done**.

## Hide Mode

1. **Menu > Edit Page** > **Menu > Hide Mode**. The task bar will turn green.
2. Select buttons to hide > **Done**.
3. To unhide buttons: **Menu > Edit Page** > **Menu > Hide Mode** > select buttons to unhide > **Done**.

## Guided Access

All dedicated devices come with *Guided Access* enabled.

1. Open *Guided Access* menu by quickly triple-clicking the home button. If your device does not have a home button, use the power button.
2. Enter passcode: default password is all **1s (1111 or 111111)**.
3. To continue *Guided Access*: press **Resume** (top right).
4. To turn off *Guided Access*: press **End** (top left).
5. *Lock Menu* (restrict use of specific buttons/categories): open *Guided Access* menu > draw a circle around buttons to restrict > **Resume**.



*Important Note: If these instructions do not match your current vocabulary set, please contact Technical Support for assistance.*