


ECOMAX[®]

INSTRUCTION MANUAL 18V CORDLESS HEDGE TRIMMER

Model: ELG06

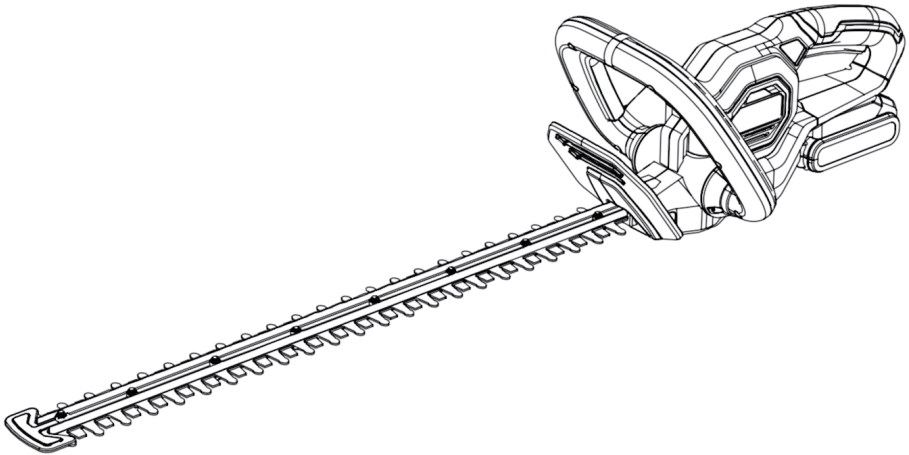

WARNING: Read carefully and understand all INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury. Save this instructions in a safe place and on hand so that they can be read when required.

CONTENTS









PURPOSE	01
DESCRIPTION OF SYMBOLS	01
SYMBOLS	03
ACCESSORY INFORMATION	03
TECHNICAL DATA	04
COMPONENTS	04
OPERATION	05
CHARGING & BATTERY	08
TRANSPORTATION AND STORAGE	11
IMPORTANT SAFETY INSTRUCTIONS	12
BATTERYOPERATED POWER TOOLS	13
HEDGE TRIMMER SAFETY WARNINGS	15
CHILD SAFETY	15
RECYCLE	16
TROUBLESHOOTING	17
WARRANTY	18

PURPOSE

This machine is intended for cutting and trimming edges and bushes in domestic use. It is not intended to be used for cutting above shoulder level.

DESCRIPTION OF SYMBOLS

The rating plate on your tool may show symbols. These represent important information about the product or instructions on its use.

	Read and understand all instructions before operating the product, and follow all warnings and safety instructions.
	Precautions that involve your safety.
	Always wear eye protection with side shields marked to comply with ANSI Z87.1 when operating this equipment.
	Thrown objects can ricochet and result in personal injury or property damage. Wear protective clothing and boots.
	Wear non-slip, heavy duty gloves.
	Danger- keep hands and feet away from blade. v
	Do not expose the product to rain or moist conditions.
	Keep all bystanders at least 50 feet away.



Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn.




Li-ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



Positive terminal.




Negative terminal.

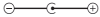

The output plug is with positive center pole and negative outer pole.

SYMBOLS

The label on your tool may include the following symbols. The symbols and their definitions are as follows:

V	Voltage
A	Ampere(Current)
W	Watt(Power)
min	Time
/min	Cutting strokes/minimum
	Direct current
HZ	Hertz
~	Alternating current
Kg	Kilograms
n _o	No load speed
mm	Millimetres
dB	Decibel
°C	Degrees centigrade
Li-ion	Lithium ions
Wh	Watt-hours

ACCESSORY INFORMATION

Battery pack	1pcs 2.0Ah Li-ion battery
Charger	1pcs quick charger
Accessories	1pcs sheath

We recommend that you purchase your accessories from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

TECHNICAL DATA

Voltage	18V DC
No load speed	2000±10%min ⁻¹
Blade length	560mm
MAX Cutting capacity	Φ18mm
Weight (without battery pack)	2.5Kg
Measuered sound pressure level	88.6dB(A), KPA=3dB(A)
Guaranteed sound power level	92dB(A)

⚠ WARNING! Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

 
Save all warnings and instructions for future reference.

The term " power tool "in the warnings refers to your mainsoperated(corded) power tool or battery-operated (cordless) power tool.

COMPONENTS

Refer to fig. A and the other figures attached to these instructions.

- ① Blade
- ② Guard
- ③ Front handle
- ④ Front control switch trigger
- ⑤ The machine bod
- ⑥ Rear control switch trigger
- ⑦ Rear handle
- ⑧ Battery pack mounting slot

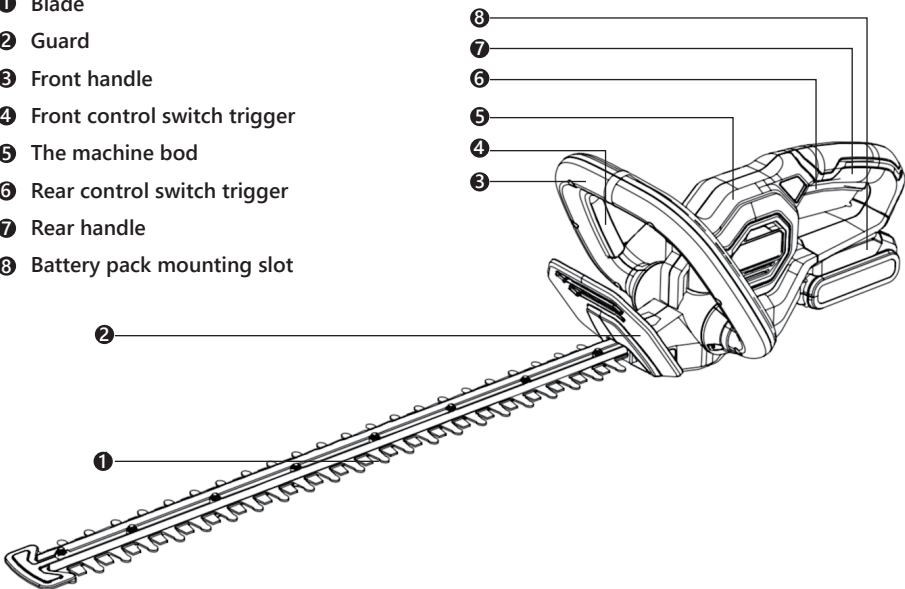


OPERATION

⚠ WARNING! Before any replacements, switch the tool off, wait for it to come to a standstill, and take the battery out of the tool.

⚠ WARNING! It is not necessary to assemble the machine.

1. INSTALL THE BATTERY PACK

- 1). Align the lift ribs on the battery pack with the grooves in the battery compartment.
- 2). Push the battery pack into the battery compartment until the battery pack locks into place.
- 3). When you hear a click, the battery pack is installed.

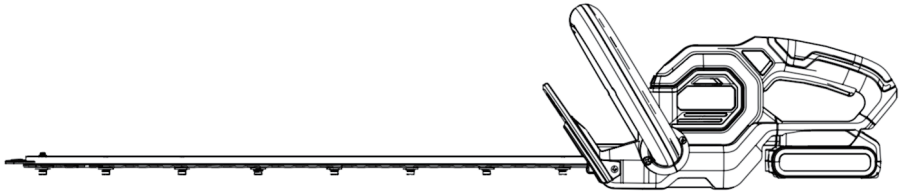

⚠ WARNING! If the battery pack or charger is damaged, replace the battery pack or the charger.

⚠ WARNING! Stop the machine and wait until the motor stops before you install or remove the battery pack

⚠ WARNING! Read and understand the instructions in the battery and charger manual.


2. REMOVE THE BATTERY PACK

- 1). Push and hold the battery release button.
- 2). Remove the battery pack from the machine.

3. START THE MACHINE


Turn on "4" and "6" at the same time, and the machine starts to run.

⚠ WARNING! Hold the machine with hands during operation.

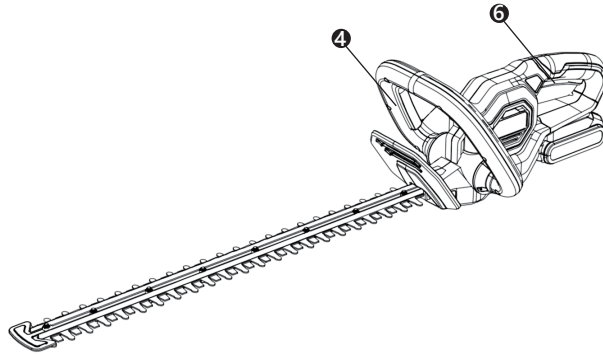

4. STOP THE MACHINE

Release the trigger(component 6)to stop the machine.

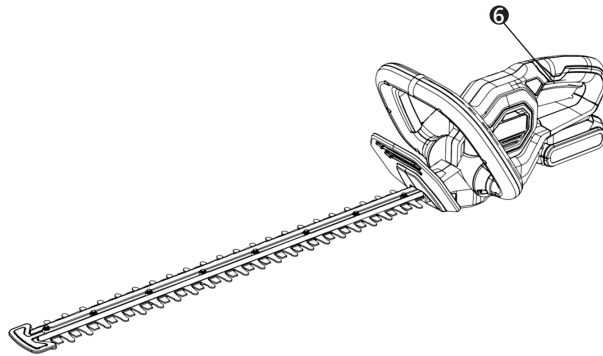

5. OPERATION WARNING

- Do not put your fingers into the notches or in position where they can get cut
- Do not touch the blade unless you remove the battery pack
- Do not use the machine if the blade is damaged or bent
- Remove all objects such as cords, lights, wire, or string which can become entangled in the cutting blade and create a risk of personal injury.

⚠ WARNING! If the blade jams on an electrical cord or line, DO NOT TOUCH THE BLADE! IT CAN BE LIVE AND DANGEROUS. Do the steps below:

- 01) Hold the insulated rear handle or put the machine down and away from you.
- 02) Disconnect the electrical service to the damaged line or cord before you try to free the blade.

6. MAINTENANCE

- ⚠ **CAUTION!** Do not let brake fluids, gasoline, petroleum-based materials touch the plastic parts. Chemicals can cause damage to the plastic, and make the plastic unserviceable.
- ⚠ **CAUTION!** Do not use strong solvents or detergents on the plastic housing or components.
- ⚠ **WARNING!** Remove the battery pack from the machine before maintenance.

7. CLEAN THE MACHINE

- ⚠ **WARNING!** Keep the machine and the motor free of leaves, branches or excessive oil to prevent fire risks.
- Use a moist cloth with a mild detergent to clean the machine.
- Clean all moisture with a soft dry cloth.
- Use a small brush to clean the air vents.

8. LUBRICATE THE BLADE

To increase the efficiency and life of the blades, lubricate them carefully after each work session:

- Put the machine on a flat and smooth surface.
- Use a soft cloth to clean the blades and a brush to remove more dirt.
- Use a light layer of oil to lubricate the blades along the top edge of the blade.

⚠ **Note:** We recommend to use the non-pollutant type oil .

9. OVERLOAD PROTECTION

When overloaded, the motor comes to a stop.

Relieve the load on the machine immediately and allow cooling for approx. 30 seconds.

10. TEMPERATURE DEPENDENT OVERLOAD PROTECTION

When using as intended the power tool cannot be subject to overload. When the load is too high or the allowable battery temperature of 75 C is exceeded, the electronic control switches off the power tool until the temperature is in the optimum temperature range again.

11. PROTECTION AGAINST DEEP DISCHARGING

The Li-ion battery is protected against deep discharging by the "Discharging Protection System. When the battery is empty, the machine is switched off by means of a protective circuit:

The inserted tool no longer start.

CHARGING & BATTERY



CHARGING THE BATTERY

1. REMOVING THE BATTERY

If the Battery does not slide into the charger easily, do not force it. Instead, slide the Battery out of the charger again, check the top of Battery and the tool battery slot are clean and undamaged and that the contacts are not bent.

Setting up the battery charger.

- 1). If fitted, remove any Battery(B)from the Battery Charger(A).
- 2). Insert the Battery Charger mains plug into a suitable mains socket.

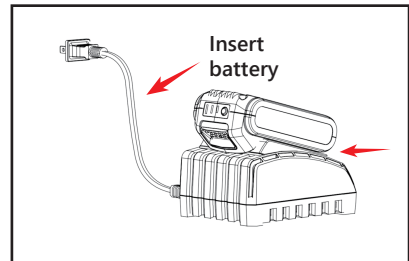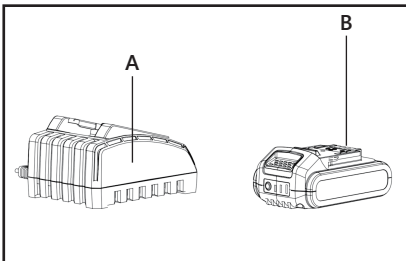

- ⚠ **WARNING!** Use this charger only to charge the supplied battery or additional purchased batteries that are specifically designed for this tool.
- ⚠ **WARNING!** The charger is designed for indoor use only, and must not be used in damp or wet conditions.

2. PUT IN THE BATTERY TO CHARGER

⚠ WARNING! Failure to follow the correct procedure when charging batteries will result in permanent damage.

⚠ Note: Normal charging time is approximately 7 minutes for a recently discharged 2.0Ah capacity battery. However, if the Battery has been left in a discharged state for some time, it may take additional time to charge.

LED indicate			
Nummer	Charger status	LED status	
		Red light	Green light
1	Charging	ON	OFF
2	Finished charging	OFF	ON
3	Battery failure	OFF	OFF

Remark battery operating temperature $0\pm 3^{\circ}\text{C} < T < 50\pm 3^{\circ}\text{C}$

NOTE: ABOUT BATTERY CHARGING:

- 01) The battery should be charged at ambient temperatures between 10 and 40°C. (ideally around 20°C).
- 02) After discharging the battery, please wait 10 minutes for the battery to cool down before charging.
- 03) After charging, allow 15 minutes for the battery to cool before use.
- 04) Ensure that the charger is disconnected from the mains supply after use, and is stored correctly.
- 05) Do not leave batteries on charge for extended periods and never store batteries on charging.
- 06) The Battery Charger monitors battery temperature and voltage while charging. Remove the battery once charging is complete to maximise charge cycles of the battery and not waste power.
- 07) Batteries can become faulty over time, individual cells in the battery can fail and the battery could short. The charger will not charge faulty batteries. Use another battery if possible, to check correct functionality of the charger and purchase a replacement battery if a faulty battery is indicated.

- 08) Do not store lithium-ion battery packs in a discharged state over a long period as this can damage the lithium-ion cells.
- 09) For long-term storage, store batteries in a high charge state
- 10) disconnected.

The capacity of batteries will reduce over time. After 100 charge cycles, the battery's operation time and the maximum torque performance of the driver will slightly reduce. This decline will continue until the battery has minimal capacity after 250 charge cycles. This is normal and not a fault with the battery pack.


- 11) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- 12) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- 13) If the tool will not be used for long periods of time, charge the battery every 3-6 months.

ADDITIONAL SAFETY NSTRUCTIONS FOR YOUR BATTERY CHARGER

01. Before charging, read the instructions.
02. For charging Li-ion battery packs only.
03. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
04. After charging, disconnect the battery charger from the supply mains. Then remove the chassis connection and then the battery connection.
05. Do not charge a leaking battery.
06. Do not use chargers for work other than those for which they are designed.
07. Before charging ensure your charger matches the local AC supply.
08. The charging device must be protected from moisture.
09. Do not use the charging device in the open.
10. Do not short out the contacts of battery or charger.
11. Respect the polarity "+/-" when charging.
12. Do not open the unit and keep out of the reach of children.
13. Do not charge the batteries of other manufactures or ill-suited models.

14. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.
15. Keep battery chargers slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
16. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
17. Do not recharge non-rechargeable batteries, as they can overheat and break.
18. Charge only battery pack of the same model provided by ECOMAX and of models recommended by ECOMAX.

TRANSPORTATION AND STORAGE

 **WARNING!** Remove the battery pack from the machine before transportation and storage.

STORE THE MACHINE

- Clean the machine before storage.
- Make sure that the motor is not hot when you store the machine.
- Make sure that the machine does not have loose or damaged parts. If it is necessary, do these steps.

INSTRUCTIONS:

- Replace the damaged parts.
- Tighten the bolts.
- Speak to a person of an approved service center.
- Store the machine in a dry area.
- Make sure that children cannot come near the machine.

The recommended ambient temperature range:

Item	Temperature
Hedge trimmer storage temperature range	-4°F(-20°C) - 158°F(70°C)
Hedge trimmer operation temperature range	-4°F(-20°C) - 104°F(40°C)
Battery charging temperature range	39°F(4°C) - 104°F(40°C)
Charger operation temperature range	39°F(4°C) - 113°F(45°C)
Battery storage temperature range	1 year:32°F(0°C) - 73°F(23°C)
	3 months:32°F(0°C)113°F(45°C)
	1 months:32°F(0°C)140°F(60°C)
Battery discharging temperature range	6.8°F(-14°C) - 113°F(45°C)

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING (THIS POWER TOOL)

⚠ WARNING! Read and understand all instructions before using this product. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury. When using an electrical appliance, basic precaution should always be followed, including the following:

- Do not use on wet surfaces.
- Do not charge the unit outdoors.
- For household use.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers and all body parts away from openings and moving parts.
- Use extra care when cleaning on stairs.
- Do not operate power tools in an explosive atmosphere, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks that may ignite the dust or fumes.
Store indoors. Do not expose to rain or water. Avoid direct sunshine.
- Never allow children to operate the equipment. Never allow adults to operate the equipment without proper instruction.
- Wear heavy long pants, boots, and gloves. Avoid loose garments or jewellery that could get caught in moving parts of the machine or its motor.
- Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
- Keep firm footing and balance. Do not overreach. Overreaching can result in loss of balance.
- Do not use a tool if it does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Do not operate this unit when you are tired, ill, or under the influence of alcohol, drugs, or medication.
- Do not operate in poor lighting.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without collection bag, gate or tubes in place (if applicable).
- Check the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the machine.
- Use only identical manufacturer's replacement parts and accessories. Use of any other parts may create a hazard or cause product damage.

BATTERY OPERATED POWER TOOLS

- Do not use battery-operated appliance in rain.
- Turn off all controls before removing the battery.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- Use only the charger supplied by the manufacturer to recharge.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carry the power tool with your finger on the switch or energize power tool that have the switch on invites accidents.
- Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing the power tool. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery: avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 265°F(130°C) may cause an explosion.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained
- Don't modify or attempt to repair the appliance or the battery pack(as applicable)except as indicated in the instructions for use and care.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

HEDGE TRIMMER SAFETY WARNINGS

- Use both hands when operating the hedge trimmer. Using one hand could cause loss of control and result in serious personal injury.
- Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Blades coast after turn off. Make sure the switch is off when clearing jammed material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover.
- Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
- Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring. Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- DANGER-KEEP hands away from blade. Contact with blade will result in serious personal injury.
- Keep cable away from cutting area. During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.
- Always store idle power tools indoors. When not in use, power tools should be stored indoors in a dry place, out of reach of children.


CHILD SAFETY


Tragic accidents can occur if the operator is not aware of the presence of children.

- Keep children out of the working area and under the watchful care of a responsible adult.
- Do not allow children under the age of 14 to operate this machine. Children who are 14 years of age and older must read and understand the operating instructions and safety rules in this manual and must be trained and supervised by a parent.
- Stay alert, and turn the machine off if a child or any other person enters the working area.
- Use extreme care when approaching blind corners, doorways, shrubs, trees, or other objects that may obscure your view of a child who may run into the path of the machine.

RECYCLE

The toxic and corrosive materials below are in the batteries used in this machine: Lithium-Ion, a toxic material.

 **WARNING!** Discard all toxic materials in a specified manner to prevent contamination of the environment. Before discarding, damaged or worn out Li-ion batter contact your local waste disposal agency, or the local Environmental Protection Agency for information and specific instructions. Take the batteries to a local recycling an/or disposal center, certified for lithiumion disposal.

 **WARNING!** If the battery pack cracks or breaks, with or without leaks, do not recharge it and do not use. Discard it and replace with a new battery pack. **DO NOT TRY TO REPAIR IT!** To prevent injury and risk of fire, explosion, or electric shock, and to avoid damage to the environment:

- Cover the terminals of the battery with heavy-duty adhesive tape.



Separate collection. You must not scar with usual household waste. If it is necessary to replace the machine, or it is no more use to you, do not discard it with household waste. Make this machine available for separate collection.



Separate collection of used machine and packaging let you recycle materials and use them again. Use of the recycled materials helps prevent environmental pollution and decreases the requirements for raw materials.



At the end of their useful life discard batteries with a precaution for our environment. The battery contains materials that is dangerous to you and the environment. You must remove and discard these materials separately at a equipment that accepts lithium-ion batteries.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The motor does not start when you pull the trigger.	The battery pack is not installed tightly.	Make sure that you tightly install the battery pack in the machine.
	The battery pack is out of power.	Charge the battery pack.
The machine smokes during operation.	The battery pack is out of power.	<ol style="list-style-type: none"> 1. Immediately stop the machine. 2. Remove the battery pack. 3. Speak to service center.
The motor is on blades do not move.	The machine has damage.	Do not use the machine and speak to service center.
	The blades are blocked.	Remove battery pack then clear blockage from the blades.
There is too much noise and/or vibration during operation.	The parts are loosen.	<ol style="list-style-type: none"> 1. Stop the machine 2. Remove the battery 3. spect for damage 4. Check and tighten loose parts
	The parts have damage.	Do not use the machine and speak to service center.

WARRANTY

ALTON INDUSTRY LTD. GROUP 2-YEAR LIMITED WARRANTY

This warranty covers any defects in materials or workmanship of the enclosed product. Alton Industry Ltd. Group will repair or replace any defective materials due to craftsmanship of the product. This warranty does not cover any problem caused by misuse, abuse, accidents or acts of God, such as floods or hurricanes. Consequential and incidental damages are not covered under this warranty. Coverage terminates if you sell or otherwise transfer the ownership. If you feel you have a defective product, please submit a copy of your receipt to the address below and call 1-888-899-0146 for instructions prior returning this item to the store or sending back to:


Alton Industry Ltd. Group
643 Innovation Drive
West Chicago, IL 60185

We will inspect the product and contact you within 72 hours to give you the results of our inspection. We reserve the right to repair or replace the product at our discretion. However, we may replace the product with one of similar but not exact features. **Parts and Service Information available call Alton Industry at 1-888-899-0146.** This warranty gives you specific legal rights. You may have other rights which vary from state to state.

ALTON INDUSTRY LTD. GROUP

 643 Innovation Drive West Chicago, IL 60185

 <https://www.altonindustries.com>

 [info @ altonindustries.com](mailto:info@altonindustries.com)

MADE IN CHINA

