Unzip the IoT Flash Tool Open "FlashTool"

IoT_Flash_Tool_Windows_V2.9.3_2020051511.rar

Airoha_IoT_SDK_Flash_Tool_Users_Guide	2019/10/29 下午 01:52	Adobe Acrobat	2,972 KB
🔳 coda	2020/5/9 下午 04:03	應用程式	80 KB
🗟 Custom	2019/12/18 下午 01:51	組態設定	1 KB
D3Dcompiler_46.dll	2012/7/26 上午 03:25	應用程式擴充	3,156 KB
🚯 DownloadLib.dll	2020/5/9 下午 04:06	應用程式擴充	697 KB
📴 FlashTool	2020/5/14 下午 05:41	應用程式	438 KB
🗟 FlashTool	2024/1/23 下午 03:12	組態設定	1 KB
GNSS_DL.dll	2018/2/23 上午 11:37	應用程式擴充	132 KB
IoT_Flash_Tool_Console_Mode_on_Wi	2018/4/27 上午 04:05	Adobe Acrobat	537 KB
🗟 libEGL.dll	2015/10/13 上午 03:15	應用程式擴充	11 KB

Airoha loT Flash Tool – 🗆 🗙							\times	
	COM Port	USB 🤇	3 •	🗌 Enable Down	load without B	a	_[
Download	oac Config File V3.6.6_10121541/AHA02_V3.6.6_Test/flash_download.cfg Open Start							
0	Download Information							
Format		Name	Begin Address	End Address	Address Type	File	∋ Path	(4)
\odot		BootLoader	0x08003000	0x0800a7c4	physical	C:/L	Jsers/Al	JT/D€
ReadBack		PartitionTable	0x0800000	0x08000210	physical	C:/L	Jsers/Al	JT/D€
OTP.		DSP_FW	0x08013000	0x0810b2d0	physical	C:/L	Jsers/Al	JT/D€
		MCU_FW	0x08133000	0x082c3e14	physical	C:/L	Jsers/Al	JT/D€
Show UID		NVDM_OTA	0x0832c000	0x08340000	physical	C:/L	Jsers/Al	JT/D€
		ROFS	0x0845f000	0x084a1000	physical	C:/L	Jsers/Al	JT/D€
Logging		NVDM	0x087f6000	0x08800000	physical	C:/L	Jsers/Al	JT/D€
& Gettings	 ① Click"Download" ② Click"Open", and then select the flash_down.cfg "file from "MoerLink(AAD02)_DIFF" ③ Select the USB" from the list of "Com Port" 							
DA)ownloac Agent	 ④ Click"Start", and then plug MoerLink into the PC USB port 							
Chip Infor	_							
-	0%							
About		O KB/S	0 Bytes			00	:00:00	



MoerLink(AAD02)_DIFF

	修改日期	類型	大小
🔁 debug	2024/3/19 下午 08:17	檔案資料夾	
🔓 dongle_abb01.bin	2024/1/19 下午 11:31	BIN 檔案	1,232 KB
🔓 dsp0_headset_ref_design.bin	2024/1/19 下午 11:31	BIN 檔案	595 KB
🔓 flash_download.cfg	2024/1/19 上午 11:28	CFG 檔案	1 KB



