



| FRC29 Barbie Dream Camper Advanced Series | |
|---|--|
| Age Range: | 3 - 7 years |
| Weight Limit: | 130 lbs. |
| Surfaces: | Grass/Hard Surfaces |
| Speed: | 2.5 - 5 MPH Forward 2.5 MPH Reverse |
| Colors: | Pink Body/Black Wheels |
| Intró: | 2018 |
| Suggested Retail: | \$398.00 |
| Box Dimensions: | 31" L x 19" W x 52" H |
| Warranty: | One Year Vehicle Six Months Battery |



| Item | Part # | Description | QTY |
|-----------|------------------|--|----------|
| 1 | 3900-4948 | Motor Gearbox Assembly (left) | 1 |
| 2 | B9785-2229 | 437 Bushing (black) | 2 |
| 3 | 3900-4890 | Front Axle for Mustang | 2 |
| 4 | 3900-6738 | Wheel Driver for Barbie Camper | 2 |
| 5 | 3900-6599 | Front Bumper Support for FRC29 | 1 |
| 6 | 3900-6740 | Front Rim for Barbie Camper FRC29 | 2 |
| 7 | 3900-6784 | Center Hub Cap for Barbie Camper | 4 |
| 8 | FRC29-9029 | Hinge Cap Bag (2) for Barbie Camper | 1 |
| 9 | 3900-6607 | Shelf for Barbie Camper FRC29 (pink) | 1 |
| 10 | 3900-6593 | Counter Top for Barbie Camper | 1 |
| 11 | See Parts Bag | Cooking Pot | 46 |
| 12 | 3900-6596 | Top Rail Left for Barbie Camper | 1 |
| 13 | 3900-6597 | Top Rail Right for Barbie Camper | 1 |
| 14 | 3900-6477 | Rear Axle for Barbie Camper FRC29 | 1 |
| 15 | 3900-6633 | Steering Column for Barbie Camper | 1 |
| 16 | 3900-6785 | Wiring Harness for Barbie Camper | 1 |
| 17 | 3900-4949 | Motor Gearbox Assembly (right) | 1 |
| 18 | 3900-6632 | Steering Wheel Cap for Camper | 1 |
| 19 | 3900-6020 | Shifter Boomerang & Barbie Camper | 2 |
| 20 | J4390-2279 | Left Wheel for Mustang (black) | 2 |
| 21 | See 20 | Left Wheel for Mustang (black) | 2 |
| 22 | J4390-2289 | Right Wheel for Mustang (black) | 2 |
| 23 | See 22 | Right Wheel for Mustang (black) | 2 |
| 24 | 3900-6881 | Footboard Assembly for PW Camper | 1 |
| 25 | See Parts Bag | Smores | 1 |
| 26 | 3900-6735 | Fire Pit for Barbie Camper FRC29 | 1 |
| 27 | 3900-6600 | Microwave for Barbie Camper FRC29 | 1 |
| 28 | 3900-6601 | Door Rear Left (dryer) for FRC29 | 1 |
| 29 | 3900-6602 | Door Rear Right (fridge) for FRC29 | 1 |
| 30 | *3900-6485 | Soundbox FRC29 (dom after 9/26/18*) | 1 |
| 31 | 3900-6589 | Backsplash for Barbie Camper FRC29 | 1 |
| 32 | 3900-6789 | Steering Linkage | 1 |
| 33 | 3900-6606 | Faucet for Barbie Camper FRC29 | 1 |
| 34 | 3900-6592 | Oven Panel for Barbie Camper FRC29 | 1 |

| Item | Part # | Description | QTY |
|-----------|-------------------|--|------------|
| 35 | 3900-6588 | Roof for Barbie Camper FRC29 (pink) | 1 |
| 36 | 3900-6786 | Rear Body Left for Barbie Camper | 1 |
| 37 | 3900-6787 | Rear Body Right for Barbie Camper | 1 |
| 38 | 3900-6586 | Front Pillar Left for FRC29 (pink) | 1 |
| 39 | 3900-6587 | Front Pillar Right for FRC29 (pink) | 1 |
| 40 | 3900-6594 | Dashboard for Barbie Camper FRC29 | 1 |
| 41 | 3900-6585 | Front Bumper w/Lights & Emblem FRC29 | 1 |
| 42 | 3900-6595 | Battery Cover for Barbie Camper FRC29 | 1 |
| 43 | 3900-6483 | Steering Wheel for Barbie Camper FRC29 | 1 |
| 44 | 3900-6739 | Rim Rear for Barbie Camper | 2 |
| 46 | 00801-1620 | Cap (retainer 437) (blk) | 1 |
| 47 | 3900-6598 | Seat for Barbie Camper FRC29 (blue) | 1 |
| 48 | L2170-2689 | Bushing - Upper (black) | 2 |
| | Part # | Description | QTY |
| | 3900-6021 | Battery Retainer for Boomerang FLC33 | 1 |
| | 3900-6658 | Hardware Bag for Barbie Camper FRC29 | 1 |
| | 3900-6608 | Label Sheet for Barbie Camper FRC29 | 1 |
| | 3900-6657 | Manual for Barbie Camper FRC29 | 1 |
| | 3900-6654 | Motor Pinion for Barbie Camper | 2 |
| | 00968-2624 | # 7R Gearbox (18-19-20) | 2 |
| | 3900-6752 | Parts Bag 1 for Barbie Camper FRC29 | 1 |
| | 3900-6753 | Parts Bag 2 for Barbie Camper FRC29 | 1 |
| | 3900-6958 | Footswitch for Barbie Camper | 1 |
| | 3900-6790 | EMU Cover for Barbie Camper | 1 |
| | 3900-6749 | EMU for Barbie Camper FRC29 | 1 |
| | 00801-1681 | Battery 12v 12 Ah (orange top) | 1 |
| | 00801-1778 | 12 Volt Charger w/Probe | 1 |
| | 3900-6732 | Tailights (l & r) for Barbie Camper | 1 |
| | 00801-1565 | 5/32" x 1 1/2" Steering Pin | 1 |
| | 00801-1939 | Cap Nut 437 (black) | 2 |
| | 0801-0196 | 0801-0196 7/16" Washer | 2 |
| | 3900-6024 | Ring Pin for Boomerang FLC33 | 2 |
| | 3900-6790 | Bag (l & r) Connectors for Grill | 1 |

*Please see Service Bulletin 214 - Barbie Camper Soundbox Replacement © 2019 Mattel

Bold and underlined parts are to be purchased and installed by Service Centers only. These items may not be sold directly to consumers by Service Centers or Fisher-Price.