



| GMF65 Barbie Dream Camper Advanced Series | |
|---|--|
| Age Range: | 3 - 7 years |
| Weight Limit: | 130 lbs. |
| Surfaces: | Grass/Hard Surfaces |
| Speed: | 2.5 - 5 MPH Forward 2.5 MPH Reverse |
| Colors: | Pink Body/Black Wheels |
| Intró: | 2019 |
| Suggested Retail: | \$398.00 |
| Box Dimensions: | 34" L x 34" W x 52" H |
| Warranty: | One Year Vehicle Six Months Battery |



| Item | Part # | Description | QTY | Item | Part # | Description | QTY |
|------|------------------|--|-----|-----------------------|---------------------------------------|--|------------|
| 1 | 3900-4948 | Motor Gearbox Assembly (left) | 1 | 35 | 3900-6588 | Roof for Barbie Camper FRC29 (pink) | 1 |
| 2 | B9785-2229 | .437 Bushing (black) | 2 | 36 | 3900-6786 | Rear Body Left for Barbie Camper | 1 |
| 3 | 3900-4890 | Front Axle for Mustang | 2 | 37 | 3900-6787 | Rear Body Right for Barbie Camper | 1 |
| 4 | 3900-6738 | Wheel Driver for Barbie Camper | 2 | 38 | 3900-6586 | Front Pillar Left for FRC29 (pink) | 1 |
| 5 | 3900-6599 | Front Bumper Support for FRC29 | 1 | 39 | 3900-6587 | Front Pillar Right for FRC29 (pink) | 1 |
| 6 | 3900-6740 | Front Rim for Barbie Camper FRC29 | 2 | 40 | 3900-6594 | Dashboard for Barbie Camper FRC29 | 1 |
| 7 | 3900-6784 | Center Hub Cap for Barbie Camper | 4 | 41 | 3900-6585 | Front Bumper w/Lights & Emblem FRC29 | 1 |
| 8 | FRC29-9029 | Hinge Cap Bag (2) for Barbie Camper | 1 | 42 | 3900-6595 | Battery Cover for Barbie Camper FRC29 | 1 |
| 9 | 3900-6607 | Shelf for Barbie Camper FRC29 (pink) | 1 | 43 | 3900-6483 | Steering Wheel for Barbie Camper FRC29 | 1 |
| 10 | 3900-6593 | Counter Top for Barbie Camper | 1 | 45 | 3900-6739 | Rim Rear for Barbie Camper | 2 |
| 11 | See Parts Bag | Cooking Pot | 46 | 00801-1620 | | Cap (retainer .437) (blk) | 1 |
| 12 | 3900-6596 | Top Rail Left for Barbie Camper | 1 | 47 | 3900-6598 | Seat for Barbie Camper FRC29 (blue) | 1 |
| 13 | 3900-6597 | Top Rail Right for Barbie Camper | 1 | 48 | L2170-2689 | Bushing - Upper (black) | 2 |
| 14 | 3900-6477 | Rear Axle for Barbie Camper FRC29 | 1 | | | Parts Not Shown | |
| 15 | 3900-6633 | Steering Column for Barbie Camper | 1 | | Part # | Description | QTY |
| 16 | 3900-6785 | Wiring Harness for Barbie Camper | 1 | 3900-6021 | Battery Retainer for Boomerang FLC33 | 1 | |
| 17 | 3900-4949 | Motor Gearbox Assembly (right) | 1 | 3900-6658 | Hardware Bag for Barbie Camper FRC29 | 1 | |
| 18 | 3900-6632 | Steering Wheel Cap for Camper | 1 | 3900-6608 | Label Sheet for Barbie Camper FRC29 | 1 | |
| 19 | 3900-6020 | Shifter Boomerang & Barbie Camper | 1 | 3900-6657 | Manual for Barbie Camper FRC29 | 1 | |
| 20 | J4390-2279 | Left Wheel for Mustang (black) | 2 | 3900-6654 | Motor Pinion for Barbie Camper | 2 | |
| 21 | See 20 | Left Wheel for Mustang (black) | | 00968-2824 | #7R Gearbox (18-19-20) | 2 | |
| 22 | J4390-2289 | Right Wheel for Mustang (black) | 2 | 3900-6752 | Parts Bag 1 for Barbie Camper FRC29 | 1 | |
| 23 | See 22 | Right Wheel for Mustang (black) | | 3900-6753 | Parts Bag 2 for Barbie Camper FRC29 | 1 | |
| 24 | 3900-6881 | Footboard Assembly for BRB Camper | 1 | 3900-6998 | Footswitch for Barbie Camper | 1 | |
| 25 | See Parts Bag | Smores | | 3900-6790 | EMU Cover for Barbie Camper | 1 | |
| 26 | 3900-6735 | Fire Pit for Barbie Camper FRC29 | 1 | 3900-6749 | EMU for Barbie Camper FRC29 | 1 | |
| 27 | 3900-6600 | Microwave for Barbie Camper FRC29 | 1 | 00801-1661 | Battery 12v 12 Ah (orange top) | 1 | |
| 28 | 3900-6601 | Door Rear Left (dryer) for FRC29 | 1 | 00801-1778 | 12 Volt Charger w/Probe | 1 | |
| 29 | 3900-6602 | Door Rear Right (fridge) for FRC29 | 1 | 3900-6732 | Tailights (lt & rt) for Barbie Camper | 1 | |
| 30 | *3900-6485 | Soundbox FRC29 (dom after 9/26/18)* | 1 | 00801-1565 | 5/32" x 1 1/2" Steering Pin | 1 | |
| 31 | 3900-6589 | Backsplash for Barbie Camper FRC29 | 1 | 00801-1939 | Cap Nut .437 (black) | 2 | |
| 32 | 3900-6789 | Steering Linkage | 1 | 0801-0196 | 0801-0196 7/16" Washer | 2 | |
| 33 | 3900-6606 | Faucet for Barbie Camper FRC29 | 1 | 3900-6024 | Ring Pin for Boomerang FLC33 | 2 | |
| 34 | 3900-6592 | Oven Panel for Barbie Camper FRC29 | 1 | 3900-6790 | Bag (lt & rt) Connectors for Grille | 1 | |

*Please see Service Bulletin 214 - Barbie Camper Soundbox Replacement

Bold and underlined parts are to be purchased and installed by Service Centers only. These items may not be sold directly to consumers by Service Centers or

Fisher-Price.

© 2019 Mattel