


**BATTERY CAM**

ORIGINALITY DESIGN SMART - AND BEAUTIFUL  
.....

# QUICK GUIDE



**HOTLINE FOR  
TECHNICAL SUPPORT: +855 92 999 768  
WWW.iSmart9.com  
FACEBOOK: @iSmart CAMBODIA**

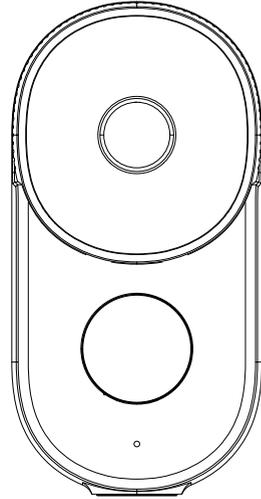

CE FC 


**BATTERY CAM**

ORIGINALITY DESIGN SMART - AND BEAUTIFUL  
.....

# QUICK GUIDE








**HOTLINE FOR  
TECHNICAL SUPPORT: +855 92 999 768  
WWW.iSmart9.com  
FACEBOOK: @iSmart CAMBODIA**

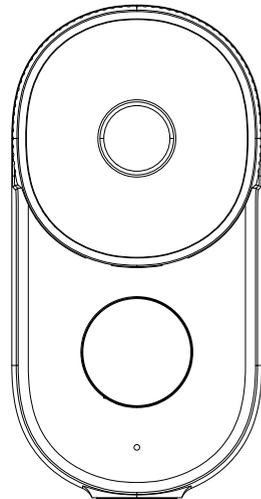

CE FC 

# What's in the box






Please consult this checklist for all parts.

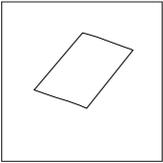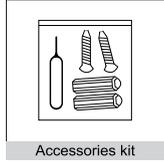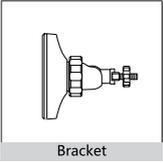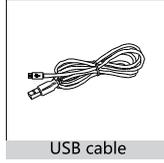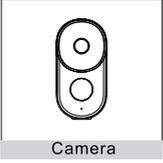

s s s

# What's in the box


Please consult this checklist for all parts.

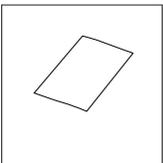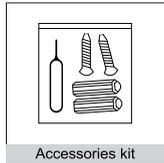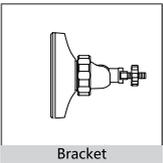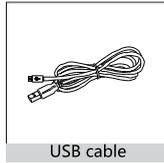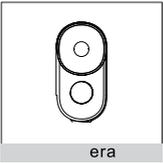

s s

# Warning


1. the camera with built-in battery cannot be put into fire to prevent the battery from exploding;
2. Do not drop the camera on ground and avoid strong impact;
3. Avoid keeping in humid, dusty, extremely hot, extremely cold, strong electromagnetic radiation or other places;
4. Do not put the camera into water;
5. Do not disassemble the product without permission.

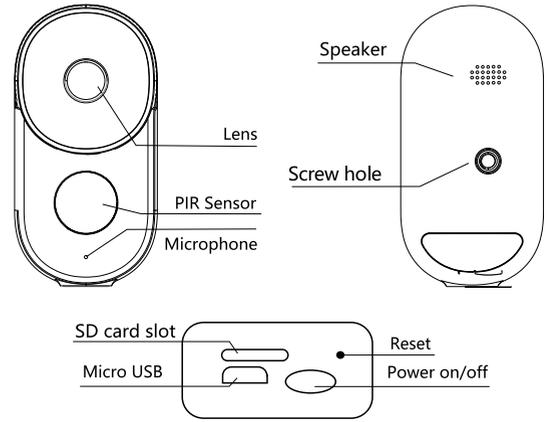

Power Port	DC 5V±10%
Power on/off	Press the button for 3 seconds to turn on/off the camera
Status light	<ul style="list-style-type: none"> <li>• Red light solids on: the camera network is abnormal</li> <li>• Red light blinks: awaiting WiFi connection, or currently connecting (faster blinking)</li> <li>• Blue light solids on: camera running correctly</li> </ul>
SD card slot	Support local SD Card storage (Max.128G) It is recommended to plug in or remove SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And use the tweezers to remove the SD card from the camera.
Reset	Press and hold on for 5 seconds to reset the camera
Battery	Built-in rechargeable battery

# Warning


1. the camera with built-in battery cannot be put into fire to prevent the battery from exploding;
2. Do not drop the camera on ground and avoid strong impact;
3. Avoid keeping in humid, dusty, extremely hot, extremely cold, strong electromagnetic radiation or other places;
4. Do not put the camera into water;
5. Do not disassemble the product without permission.

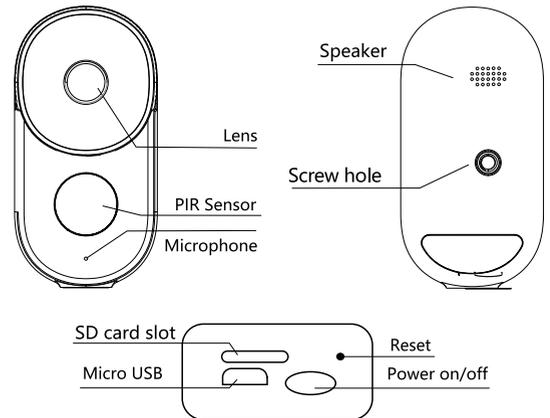

Power Port	DC 5V±10%
Power on/off	Press the button for 3 seconds to turn on/off the camera
Status light	<ul style="list-style-type: none"> <li>• Red light solids on: the camera network is abnormal</li> <li>• Red light blinks: awaiting WiFi connection, or currently connecting (faster blinking)</li> <li>• Blue light solids on: camera running correctly</li> </ul>
SD card slot	Support local SD Card storage (Max.128G) It is recommended to plug in or remove SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And use the tweezers to remove the SD card from the camera.
Reset	Press and hold on for 5 seconds to reset the camera
Battery	Built-in rechargeable battery

# Install

Mode Bracket Installation

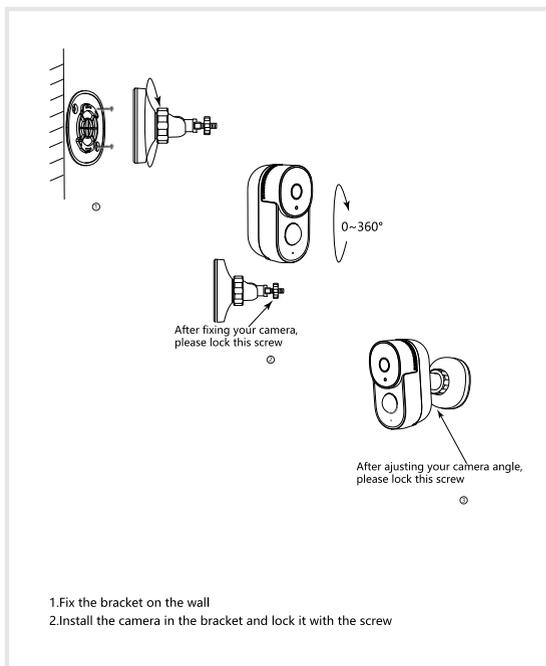

3

## Remote wake-up

the camera will be in a sleep mode to save power; you can have a preview in the App.

## Full-duplex audio

You can see and hear the visitor in your App from the camera.

## PIR

When the camera detects someone stopping by, it sends an alarm message

## Low battery alarm

When the battery power is lower than your set, the App will send a notification to your mobile phone.

## Record

Using SD card or opening the Cloud-Strong service, to keep recording for every moment.

## Day & Night

Power night vision means no interruptions, even in complete darkness.



Daytime




Night

12

# Install

Mode Bracket Installation

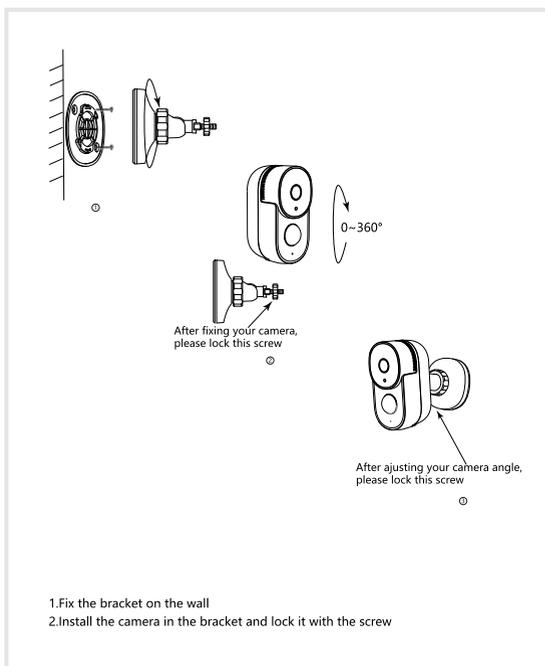

3

## Remote wake-up

the camera will be in a sleep mode to save power; you can have a preview in the App.

## Full-duplex audio

You can see and hear the visitor in your App from the camera.

## PIR

When the camera detects someone stopping by, it sends an alarm message

## Low battery alarm

When the battery power is lower than your set, the App will send a notification to your mobile phone.

## Record

Using SD card or opening the Cloud-Strong service, to keep recording for every moment.

## Day & Night

Power night vision means no interruptions, even in complete darkness.



Daytime



Night

12

# FAQ

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of device after resetting?

A: the reset device on resets the network configuration of the camera, but cannot change the configuration on the app, remove the camera, and must be deleted by the App.

Q: how to cut the camera network to another router?

A: First remove and reset the device on the app and then configura the device again and by the App.

Q: Why Dosen't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that App has been running on the phone, and the relevant reminder function has been opened;Message notificationand authority confirmation in the mobile phone system have been opened.

# FAQ

Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

Q: Why is it still in the list of device after resetting?

A: the reset device on resets the network configuration of the camera, but cannot change the configuration on the app, remove the camera, and must be deleted by the App.

Q: how to cut the camera network to another router?

A: First remove and reset the device on the app and then configura the device again and by the App.

Q: Why Dosen't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that App has been running on the phone, and the relevant reminder function has been opened;Message notificationand authority confirmation in the mobile phone system have been opened.

# Connect

## Download

iSmart Home is available for both ios and Android OS. search the name "iSmart Home " in App Store or android Market, or scan below QR-Code to download the App

Support



Download App(IOS&android)

## Add device

Log in the iSmart Home, select "Add Device ", and add the iSmart camera to the App according to the screen tips(make the iSmart camera close to the router when configuring).



NOTE:If you need to re-select the WiFi network, please press and hold the "RESET" button for 5 seconds, the device will restart, and the indicator will be flashing red.

# Connect

## Download

iSmart Home is available for both ios and Android OS. search the name "iSmart Home " in App Store or android Market, or scan below QR-Code to download the App

Support



Download App(IOS&android)

## Add device


Log in the iSmart Home, select "Add Device ", and add the iSmart camera to the App according to the screen tips(make the iSmart camera close to the router when configuring).




NOTE:If you need to re-select the WiFi network, please press and hold the "RESET" button for 5 seconds, the device will restart, and the indicator will be flashing red.

### Registration process

Step 1 Open the iSmart Home App, Click "Sing Up", Read the "Privacy Policy" and click "Agree".

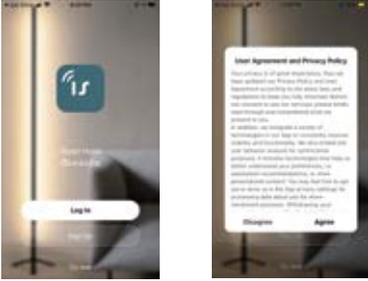


Step 2 Input a legal and valid Mobile number or email address and click "Continue". input Verification Code, then log in the App.

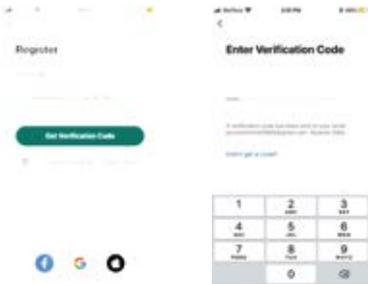

5

# Settings


In "iSmart camera" interface,click" you can set camera common functions.

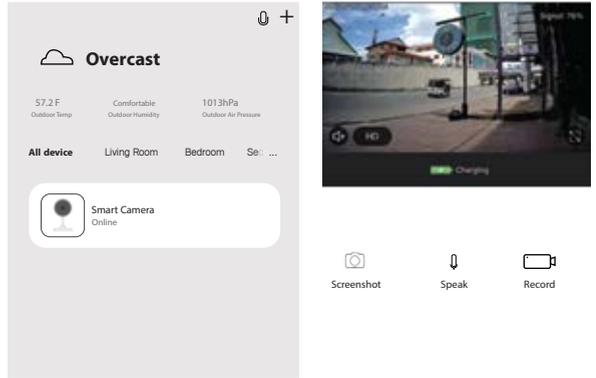


10

### Registration process

Step 1 Open the iSmart Home App, Click "Sing Up", Read the "Privacy Policy" and click "Agree".

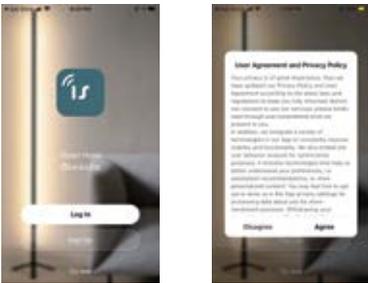


Step 2 Input a legal and valid Mobile number or email address and click "Continue". input Verification Code, then log in the App.

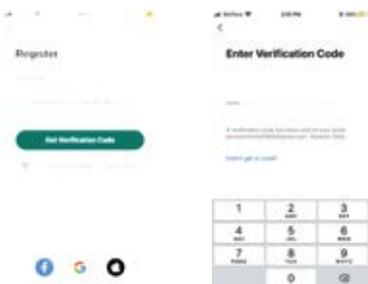

5

# Settings


In "iSmart camera" interface,click" you can set camera common functions.

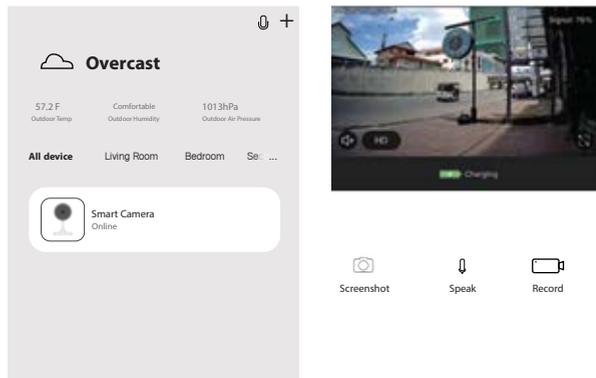


10

# QR Code Configuration

Open the iSmart Home app, click "Create Home", and can customize the Home name and related settings.

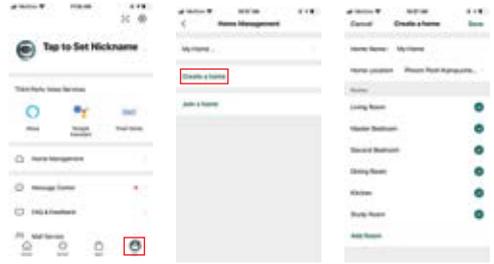

Continue to click "Security & Sensor" >> "iSmart camera", and then choose "Add Device" or "+", ready to add camera.

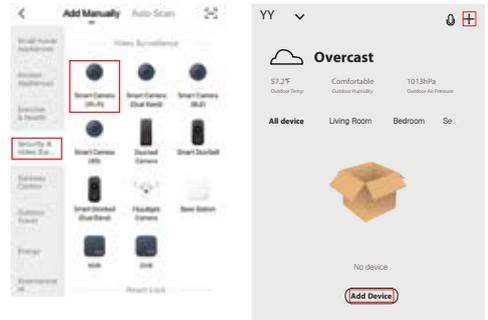


## Device added successfully



## Connecting

Make sure your router, mobile, and device are as close as possible

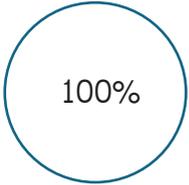


- ✓ Device Found
- ✓ Register device to the smart cloud
- ✓ Initializing device




9

# QR Code Configuration

Open the iSmart Home app, click "Create family", and can customize the family name and related settings.

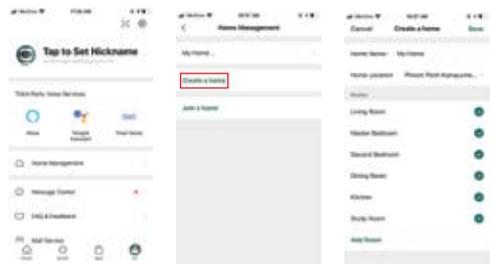

Continue to click "Security & Sensor" >> "iSmart camera", and then choose "Add Device" or "+", ready to add camera.

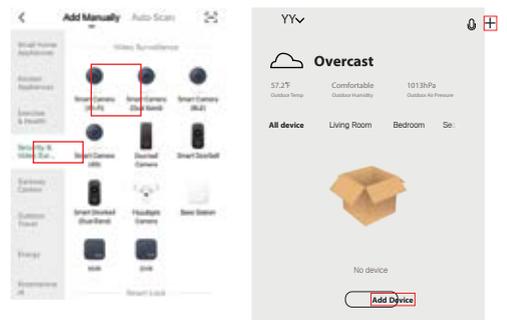


## Device added successfully



## Connecting

Make sure your router, mobile, and device are as close as possible

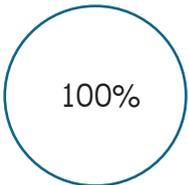

- ✓ Device Found
- ✓ Register device to the smart cloud
- ✓ Initializing device



9

6

In "Add Device" this interface, continue to click "Next step", and then you should input your wifi,s passwords.

### Add Device

Power the device on and make sure the indicator is flashing quickly or a prompt tone is heard



### Enter Wi-Fi Password

Only support 2.4G Wi-Fi network





Note:

- 1) Camera only supports 2.4GHz WiFi network.
- 2) The number of bits in the ssid and passwords of the router should not exceed 24 digits.

In this interface, you should scan the QR code in your Phone with the camera, when the camera comes out "Dong Dong Dong". And you can complete the configuration in about 30s

### Scan with the camera

When you tap CONTINUE, the mobile phone displays a QR code. Hold the camera 15-20 cm in front of the mobilr phone for the camera to scan the QR code.

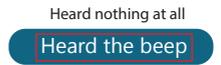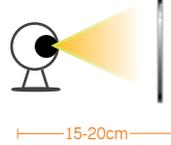

In "Add Device" this interface, continue to click "Next step", and then you should input your wifi,s passwords.



### Add Device

Power the device on and make sure the indicator is flashing quickly or a prompt tone is heard



### Enter Wi-Fi Password

Only support 2.4G Wi-Fi network

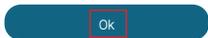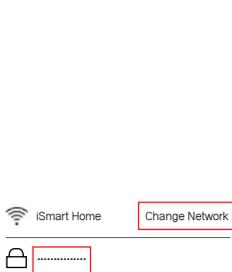

Note:

- 1) Camera only supports 2.4GHz WiFi network.
- 2) The number of bits in the ssid and passwords of the router should not exceed 24 digits.

In this interface, you should scan the QR code in your Phone with the camera, when the camera comes out "Dong Dong Dong". And you can complete the configuration in about 30s

### Scan with the camera

When you tap CONTINUE, the mobile phone displays a QR code. Hold the camera 15-20 cm in front of the mobilr phone for the camera to scan the QR code.

