


H RTP366, H RTP486



Heritage® 36", 48" Wide Slide-In Gas Rangetop

PLANNING GUIDE

H RTP Dimensions

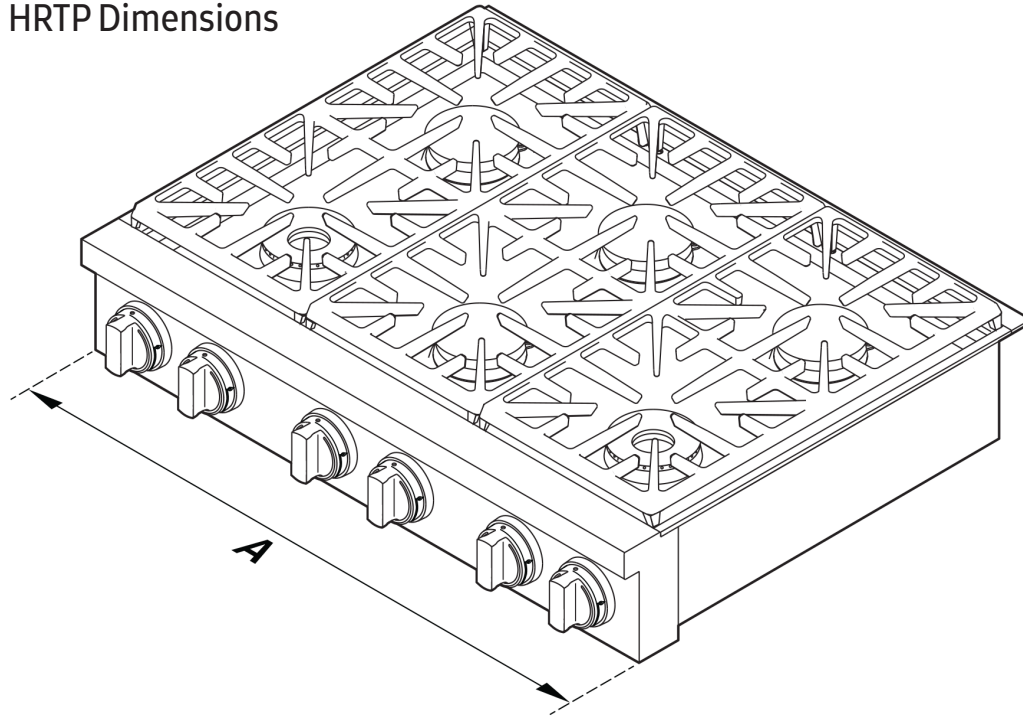


WARNING

- Observe all governing codes and ordinances during planning/installation. (Contact the local building department for details.)
- The rangetop must be installed as instructed in this guide.

Chassis Width


| Model | A |
|----------|--------------------|
| H RTP366 | 35 7/8" (91.1 cm) |
| H RTP486 | 47 7/8" (121.6 cm) |

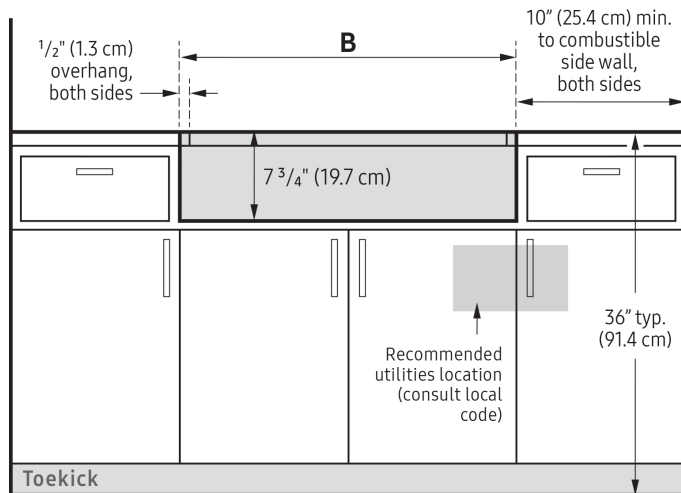

| Model | B | C |
|----------|----------------|-----------------------------------|
| H RTP366 | 36" (91.4 cm) | 36" (91.4 cm)*, 42" (106.7 cm)** |
| H RTP486 | 48" (121.9 cm) | 48" (121.9 cm)*; 54" (137.2 cm)** |

* Minimum ** Recommended

| Note | Description |
|------|-----------------------------------------------------------------------------------------------------|
| 1 | Measured from top of grate to combustible surface. |
| 2 | See Cabinet/Countertop Cutout Dimensions, Pgs. 3 – 4. |
| 3 | Not applicable for cabinets more than a horizontal distance of 10" (25.4 cm) from edge of rangetop. |

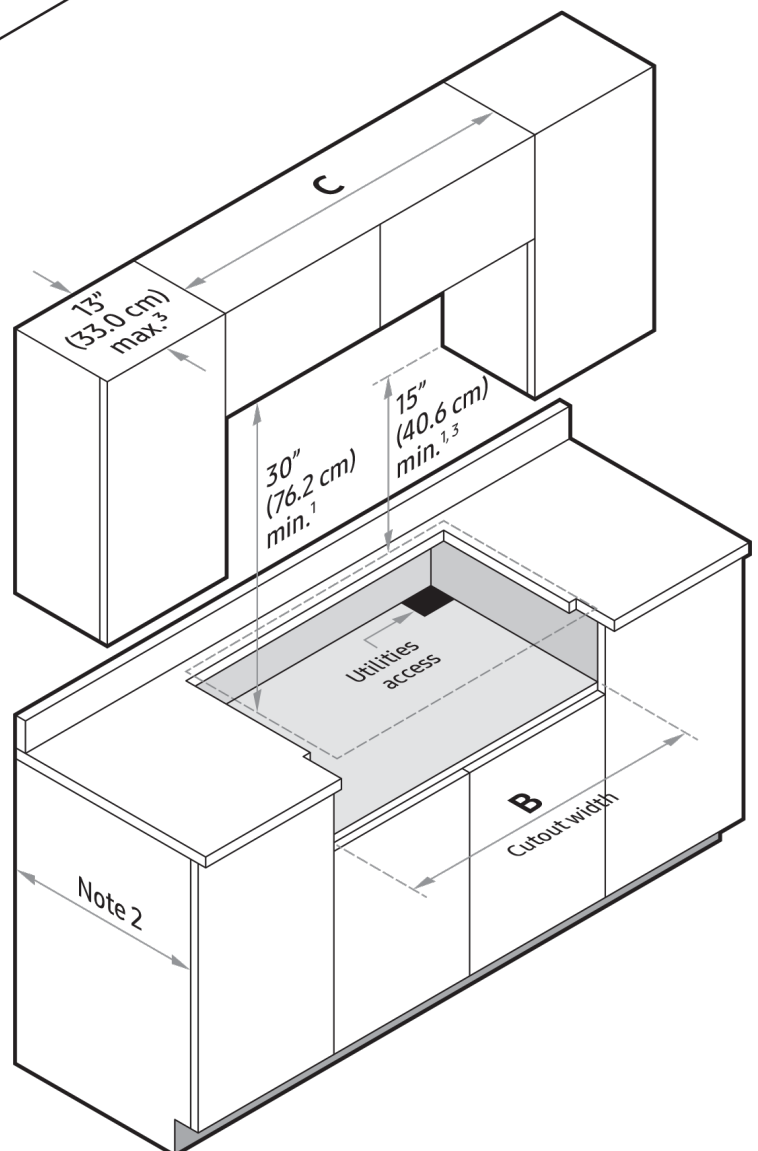





Heritage® 36", 48" Wide Slide-In Gas Rangetop

PLANNING GUIDE

Cabinet/Countertop Cutout Dimensions

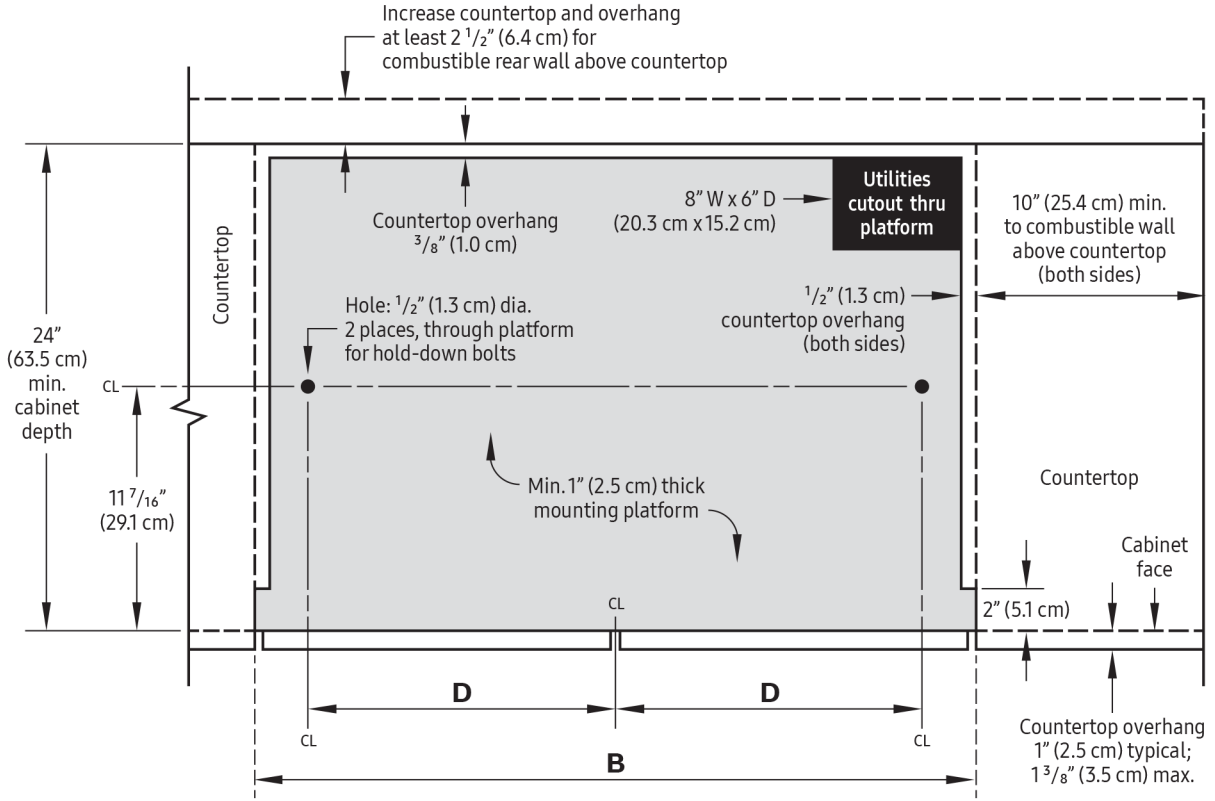

| Model | B (Cutout Width) | D (Hole Offset) |
|----------|------------------|--------------------------------|
| H RTP366 | 36" (91.4 cm) | 16 $\frac{5}{8}"$ (42.2 cm) |
| H RTP486 | 48" (121.9 cm) | 20- $\frac{13}{16}"$ (52.9 cm) |

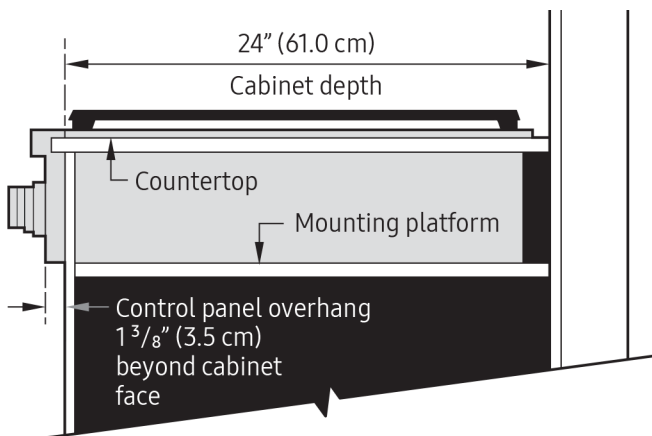


NOTE:
The power cord and gas-supply conduit may be routed through the bottom or back of the rangetop chassis.




Heritage® 36", 48" Wide Slide-In Gas Rangetop

PLANNING GUIDE

Cabinet and Countertop Layout (with downdraft vent)

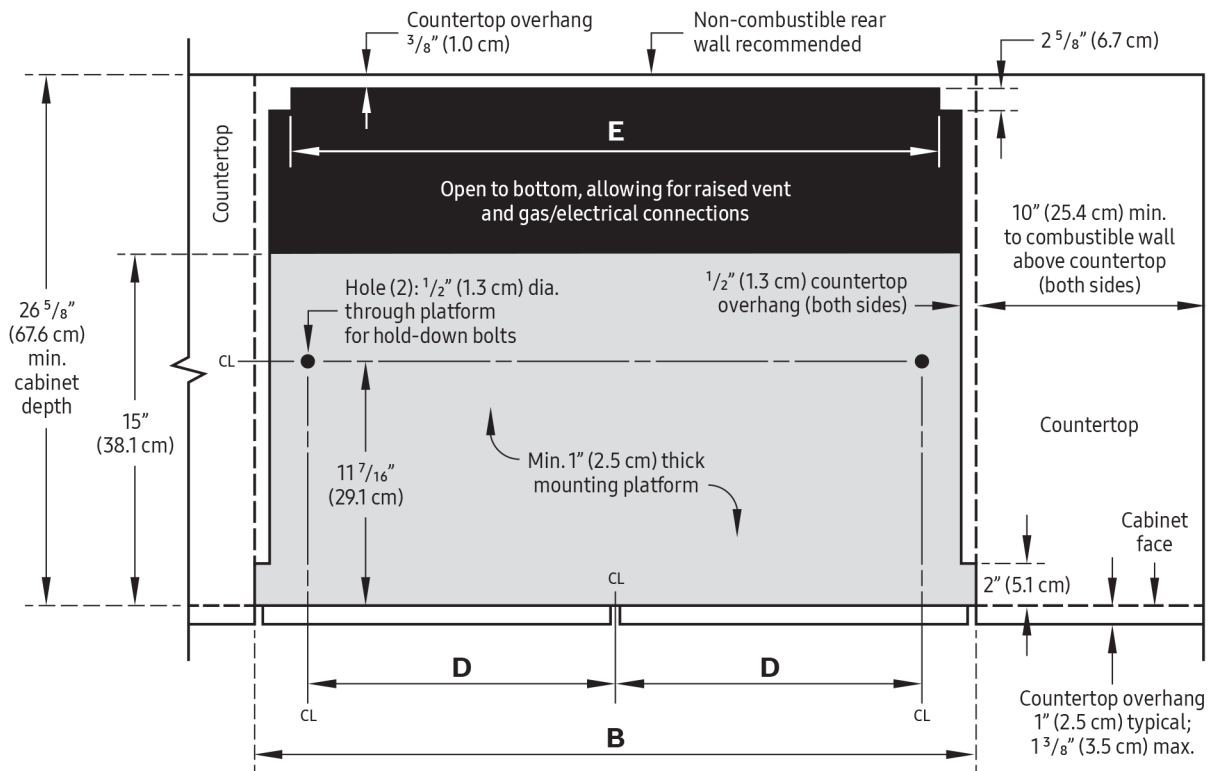

| Model | B (Cutout Width) | D (Hole Offset) | E (Downdraft Vent Cutout) |
|----------|------------------|-----------------------|---------------------------|
| H RTP366 | 36" (91.4 cm) | 16 $5/8"$ (42.2 cm) | 33 $1/2"$ (85.1 cm) |
| H RTP486 | 48" (121.9 cm) | 20 $13/16"$ (52.9 cm) | 43 $1/2"$ (110.5 cm) |

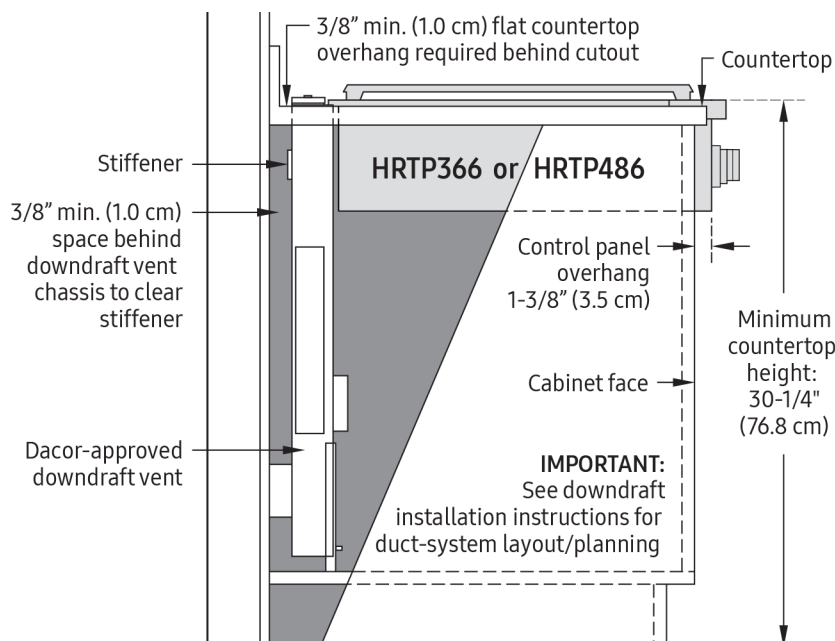

NOTE:

The power cord and gas-supply conduit may be routed through the bottom or back of the rangetop chassis.

| Rangetop | Approved Downdraft Vents* |
|----------|---------------------------|
| H RTP366 | MRV3615 |
| H RTP486 | MRV48 |

*Use only the downdraft vents specified.