



# USER MANUAL

## Installation: 4 Gang & 2 Fan Switch

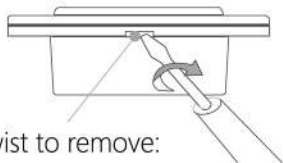


1. Open the front cover by a small flat screwdriver

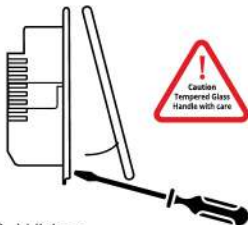

Twist to remove:

2. Wiring:



Connect wire to the correct terminal and tighten the screws.

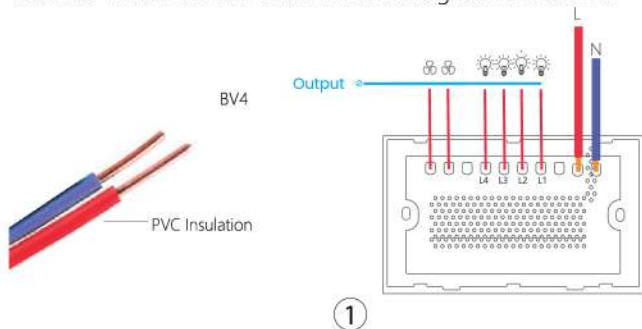

# Installation: 4 Gang & Fan Switch




1. Open the front cover by a small flat screwdriver

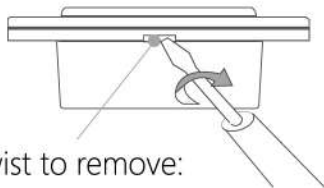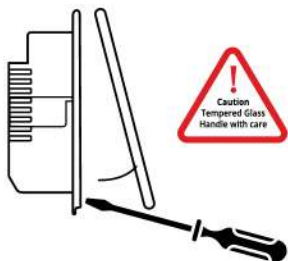

2. Wiring:



Connect wire to the correct terminal and tighten the screws.

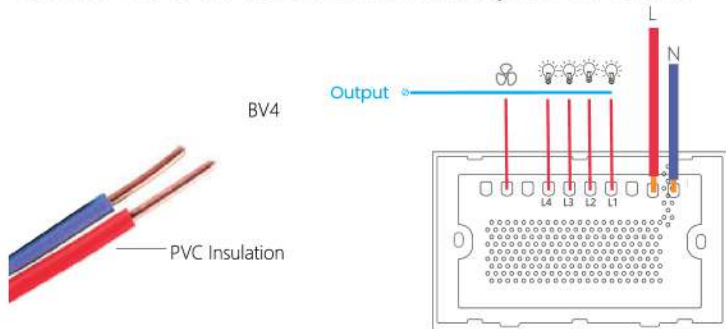

# Installation: 8 Gang Switch




1. Open the front cover by a small flat screwdriver

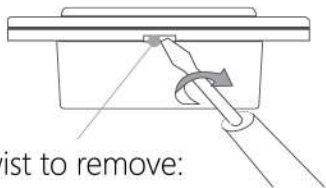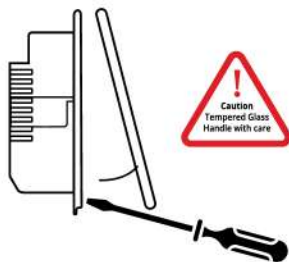

Twist to remove:

2. Wiring:



Connect wire to the correct terminal and tighten the screws.

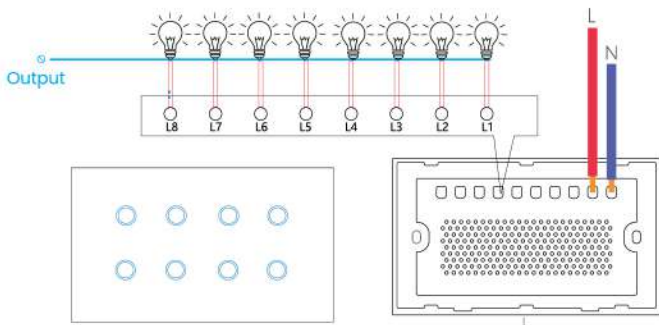

# Installation: USB Charger & Wall Socket




1. Open the front cover by a small flat screwdriver

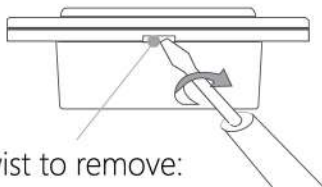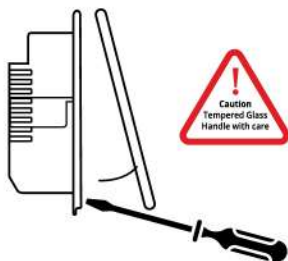

Twist to remove:

2. Wiring:



Connect wire to the correct terminal and tighten the screws.

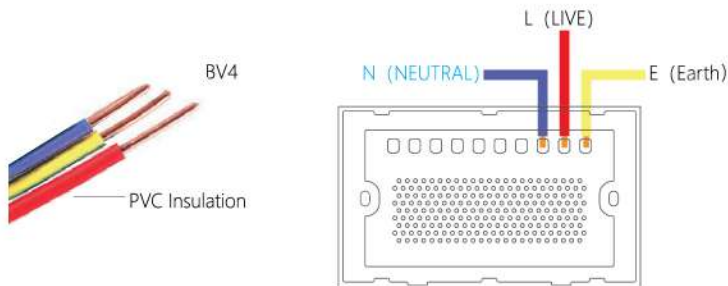

# Installation: 4 Gang & Socket




1. Open the front cover by a small flat screwdriver

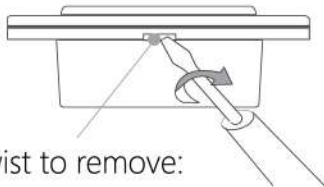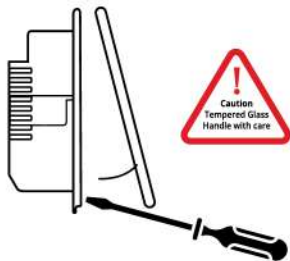

Twist to remove:

2. Wiring:



Connect wire to the correct terminal and tighten the screws.

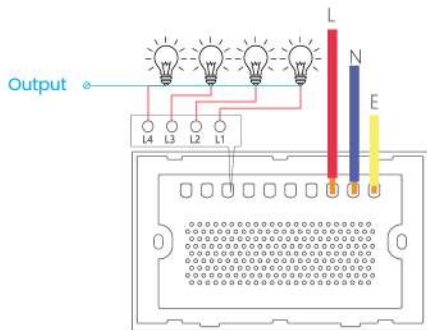

# Installation: Universal Socket with Dual USB





1. Open the front cover by a small flat screwdriver

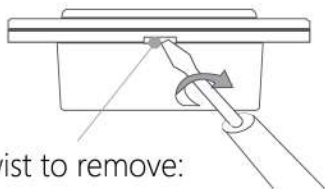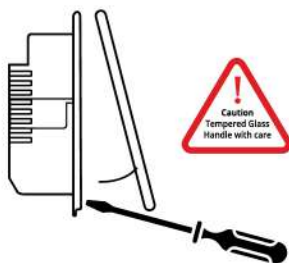

Twist to remove:

2. Wiring:



Connect wire to the correct terminal and tighten the screws.

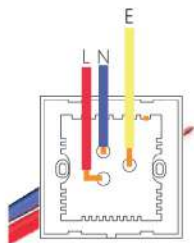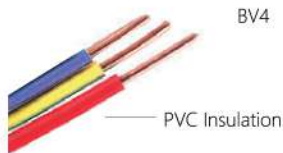

# Installation: Fan Dimmer Speed Control





1. Open the front cover by a small flat screwdriver

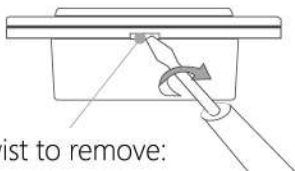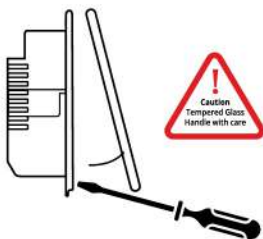

2. Wiring:

Connect wire to the correct terminal and tighten the screws.

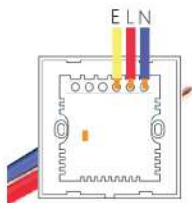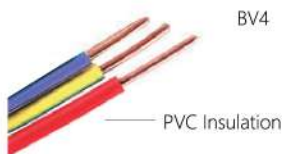

CONNECT WITH GOOGLE HOME



DOWNLOAD OKASHA SMART APP



# WARNING

1. Get it installed by certified Electrician.
2. Please turn off general power before installation.
3. Please do not modify any parts of our product. We are not responsible for unauthorized alteration products.

## Switch Configuration

### 1. Configuration Mode:

Tap any "○" button for 3 times and then hold for 7 seconds. You will see the "○" buttons backlight flicks, then release finger.

### 2. Clearoff code.

Press any "○" button for 10 seconds, then release finger. Wifi were cleared off after this operation.

### Specification:

Voltage: AC 110-220V 50~60Hz

Lamp load: 600W/ Gang

Fan Load: < 600W

Wifi standard: IEEE802.11b/g/n

### Features:

1. High quality crystal tempered glass panel design, never fade.
2. LED indicator, very distinguished.
3. Directly Link it with wifi.
4. Check lamp status.
5. Power statistics function.
6. Applicable to incandescent lights, fluorescent lamps, and motor etc.