

Zooka Sports Owner's Manual

EB-1 External Battery

THIS IS A SEALED LEAD-ACID BATTERY THAT SHOULD BE KEPT AT FULL CHARGE FOR LONGER LIFE.
RECHARGE WHEN FIRST RECEIVED, AFTER EACH USE, AND EVERY 4 MONTHS.

IMPORTANT SAFETY INSTRUCTIONS

Save these instructions

OPERATING INSTRUCTIONS

Warning: Failure to follow instructions may cause damage or an explosion. Read entire instruction manual before use.

- 1a. If your pitching machine has an aluminum tripod, install the battery mounting bracket under the black tripod clamping knob. Place the handle of the battery into the bracket.
- 1b. If your machine has a short, black, rigid tripod, the mounting bracket is not used. Place the battery on the ground under the tripod.
2. Plug the external battery into the three-pin connector on the rear panel of the pitching machine.
3. The battery selector switch on the rear panel of the pitching machine selects whether the internal or external battery is used.
4. Except for this switch setting, operation of the pitching machine is the same as when using the internal battery.
5. Never unplug the external battery while the pitching machine is running.
6. When you are finished using the external battery, return the battery selector switch to the internal position.

7. Recharge the external battery as soon as possible after use, even if it is only partly discharged. Failure to recharge promptly will shorten battery life.

STORAGE

The external battery can be stored in any position. Recharge fully every 4 months. The ideal storage temperature is 70 degrees F or cooler. Performance varies based on battery temperature conditions.



CONTAINS SEALED NON-SPILLABLE LEAD-ACID BATTERY. MUST BE DISPOSED OF PROPERLY.

WARNING: Possible explosion hazard. Contact with battery acid may cause severe burns and blindness. Keep out of reach of children.

Do not expose the external battery to temperatures below 20 degrees F. Never attempt to recharge a frozen battery.

CHARGING THE BATTERY

The external battery may be charged either through the pitching machine or with the separate charger which is provided with the external battery.

Charging with the separate charger:

1. Use only the charger provided by Zooka Sports to charge the external battery.
2. Plug the charger cord into the jack on the side of the battery.
3. Plug the body of the charger into a 115 VAC electrical outlet.
4. Allow the unit to charge overnight. It is normal for the charger to be warm when charging.
5. A fully discharged battery will recharge fully in 10 to 12 hours. **Always disconnect the battery when it is fully charged.** Over-charging will shorten battery life. Never allow the battery to charge for more than 24 hours.

Note: Use of the separate charger allows the user to charge the external battery at the same time that the machine is charging its internal battery. However, the user must remember to disconnect the external battery when charging is finished.

Charging through the pitching machine:

11. Turn the pitching machine OFF.
2. Plug the external battery into the connector on the rear panel of the pitching machine.
3. Set the rear panel selector switch to EXTERNAL.
4. Plug the end of the charger cable into the rear panel of the pitching machine.
5. Plug the charger body into a 115 VAC outlet. The machine will turn on and begin charging.
6. After about 5 minutes to analyze battery condition, the percent of battery charge appears on the display. As charging progresses, the display indicates the degree of charge in 5% increments.
7. The battery recharges to 100% in about 12 hours, and charging stops automatically. If necessary, the battery may be used before it is fully recharged.

LIMITED WARRANTY

Zooka Sports warrants its battery products to be free from defect in materials and workmanship under normal use and service conditions for a period of twelve months from date of original purchase. Zooka Sports will repair or replace defective products at its option, without charge. Evidence showing the date of purchase must be submitted at the time any warranty claim is made. This warranty is void and shall not apply to batteries which have been used in commercial service or have not been recharged properly, or to damage caused by unauthorized repairs or alterations.

If any defect should occur, contact Zooka Sports Technical Assistance at (425) 861-0111. If we are unable to resolve the problem by telephone, an R.A. number will be issued which must be clearly shown on the outside of the box in order for a returned item to be received at Zooka Sports. Return the unit in its original carton & packing, freight prepaid. No C.O.D. shipments will be accepted. Zooka Sports will pay the freight to return the repaired merchandise to the customer at a U.S. address. Customers will be charged for shipping to other countries.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF QUALITY AND PERFORMANCE WRITTEN, ORAL OR IMPLIED, AND ALL OTHER WARRANTIES INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. IN NO EVENT SHALL ZOOKA SPORTS BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHETHER IN CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE. Some states do not allow limitations on how long an implied warranty lasts and/or the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.