



LEARN PHOTOGRAPHY COMPANY

CAMERA GUIDE: CANON 5D MKII

TABLE OF CONTENTS

Mode	3
Aperture Setting / F-stop	4
ISO	5
Focus Mode	6
Focus Point	7
Continuous Shooting	9
Self-Timer	10
Metering	11
Exposure Compensation	12
White Balancing	13

MODE




- P** : Program AE
- Tv** : Shutter-priority AE
- Av** : Aperture-priority AE
- M** : Manual exposure

Turn the Mode Dial while holding down the Mode Dial center (Mode Dial lock release button).

APERTURE SETTING / F-STOP



Set the Mode Dial to Av.

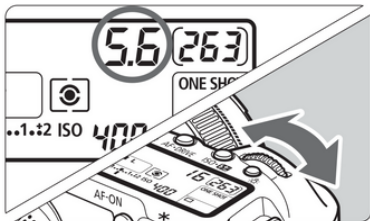


While looking at the LCD panel, turn the Main Dial <  > to set the desired aperture.

Focus the subject and press the shutter button halfway.
The shutter speed is set automatically.




Check the viewfinder. As long as the shutter speed is not blinking, you can take your photo.

ISO

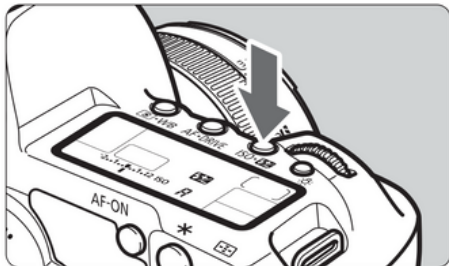


Press the ISO button on the top of the camera.

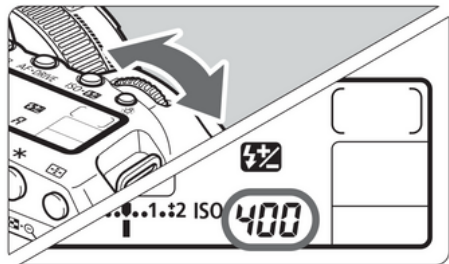


While looking at the LCD panel or through the viewfinder, turn the Main Dial and selected your desired ISO setting.


FOCUS MODE

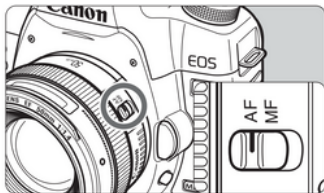

Set the lens focus mode switch to AF.

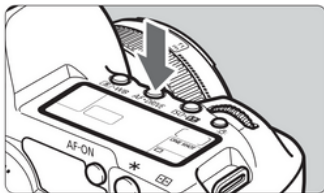


Press the AF button.

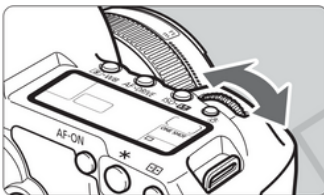

Select the AF operation by turning the main dial or the Quick Control Dial to the desired AF setting.


ONE SHOT : One-Shot AF
AI FOCUS : AI Focus AF
AI SERVO : AI Servo AF

FOCUS POINT

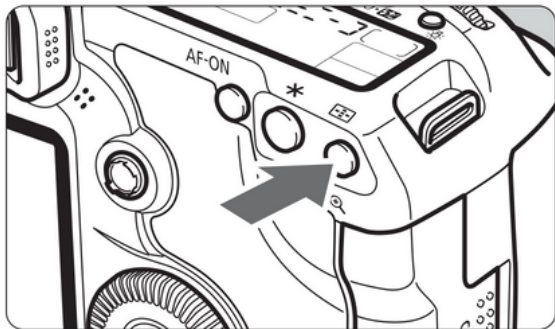


Press the AF Point Selection button ().

FOCUS POINT (SET MANUALLY)

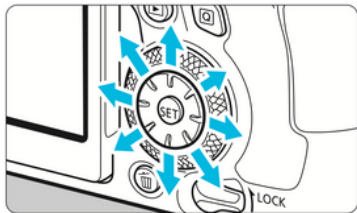

Select an AF point.


The AF point selection will change in the direction you tilt the <  >. If you press SET, the center AF point (or center zone) will be selected.

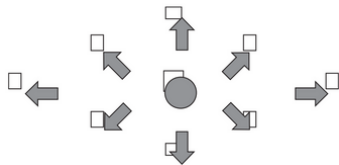

Single Point AF


You can also select a horizontal AF point by turning the Main Dial and select a vertical AF point by turning the Quick Control Dial

CONTINUOUS SHOOTING MODE

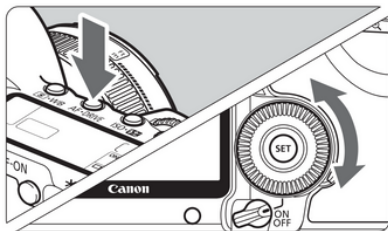

Press the DRIVE button.

While looking at the LCD panel, turn the Main Dial <  > to select the continuous shooting mode.

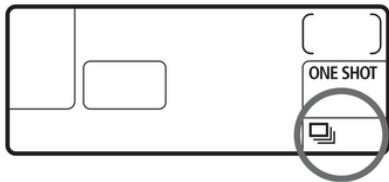


Single shooting - only one shot will be taken



Continuous shooting.

SELF-TIMER MODE

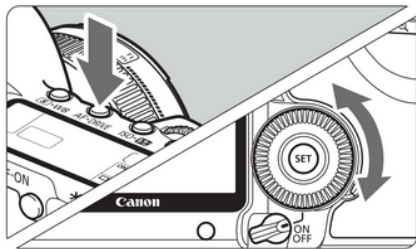

Press the DRIVE button.


While looking at the LCD panel, turn the Quick Control Dial <  > to select the self-timer delay.



10 sec. self-timer



2 sec. self-timer

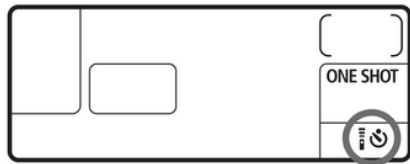


Look through the viewfinder, focus the subject, and press the shutter completely.


You can check the self-timer operation with the self-timer lamp, beeper and countdown display on the LCD panel.

Two seconds before the picture is taken, the self-timer lamp will light up and the beeper will sound faster.

METERING MODE

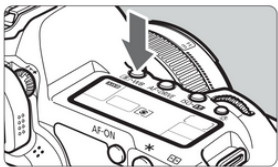

Press the Metering Mode Selection button.

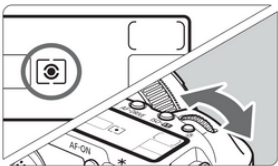

While looking at the LCD panel, turn the Main Dial to select the metering mode.



Evaluative metering (general purpose - exposure automatically set)



Partial metering




Spot metering



Center-weighted average metering

EXPOSURE COMPENSATION

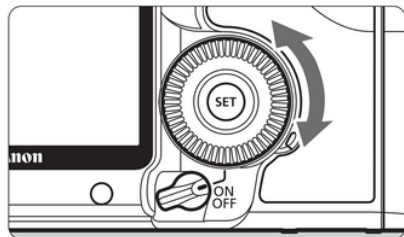


Press the shutter button halfway and check the exposure level indicator.

While looking at the viewfinder or LCD panel, turn the Quick Control Dial .

If it cannot be set, set the LOCK switch downward, then turn the Dial.

Take the picture. To cancel the exposure compensation, set the level back to the center indicator.

WHITE BALANCE

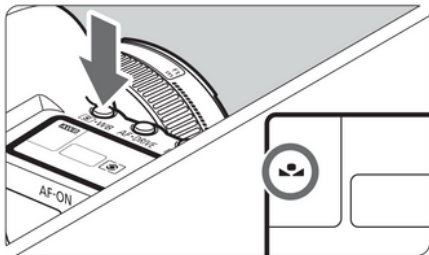

Press the <  •WB> button.

Select the desired setting, then press Set.

Display	Mode	Color Temperature (K: Kelvin)
	Auto (Ambience priority, p.187)	3000 - 7000
	Auto (White priority, p.187)	
	Daylight	5200
	Shade	7000
	Cloudy, twilight, sunset	6000
	Tungsten light	3200
	White fluorescent light	4000
	Flash use	Automatically set*
	Custom (p.188)	2000 - 10000
	Color temperature (p.190)	2500 - 10000