


Revolution™

R37-V-xx LED Lightheads

Operation and Programming Instructions

CIGAR PLUG SWITCHES

TOGGLE Switch On to Activate.
MOMENTARY Switch Used in Program Mode

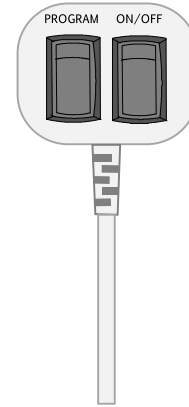

ELECTRICAL

Input Voltage: +12Vdc thru +24Vdc

Input Current:	Default Flash Normal Mode		Default Flash Dim Mode	
	12Vdc	24Vdc	12Vdc	24Vdc
R37-V Warning Lights	0.39A	0.27A	0.11A	0.05A

PROGRAMMING FLASH RATE

ENTERING PROGRAM MODE

Press the MOMENTARY switch while turning On the TOGGLE switch.
Keep the MOMENTARY switch pressed for at least 2 seconds.
All LEDs will flash **3** times to indicate you have entered Flash Type & Rate selection mode.
Release the MOMENTARY switch and the unit will operate in the currently selected flash type and rate.

Press and release the MOMENTARY switch to select the Flash Type & Rate.
See the “SELECTING FLASH RATESS” section and Flash Type & Rate Table below for more details.

Turn Off the TOGGLE switch, to exit Flash Type & Rate selection mode.

SELECTING FLASH RATES:

Use the MOMENTARY switch to step through the Flash Type & Rate table.

- Single Press and Release - Step Forward
- Double Press and Release - Step Backward
- Press and Hold - Reset to Defaults and Toggles the Dim Setting (Bright or Dim)

SELECTABLE FLASH TYPE & RATE

1. **Neobe flash 150 FPM (DEFAULT)**
2. Neobe flash 120 FPM
3. Neobe flash 75 FPM
4. Double flash 250 FPM
5. Double flash 125 FPM
6. Double flash 75 FPM
7. Single flash 375 FPM
8. Single flash 150 FPM
9. Single flash 120 FPM
10. Single flash 75 FPM

Use the MOMENTARY switch to step through the Flash Type & Rate table.

Single Press and Release - Step Forward
Double Press and Release - Step Backward
Press and Hold ¹ - Reset to Default and
Toggles the Dim Setting (Bright or Dim)

CONFIGURATION SELECTION NOTES:

- 1) The hold time for the Press and Hold action is 3 seconds.