



promate.net Lifestyle Technology

**Mulotov**

**Rugged Sporty Bluetooth® Speaker  
with Handsfree for Outdoor Use**



User Guide

## Introduction

Made for the rugged outdoors, Mulotov defines the characteristic of on the go pocket speakers. Built with wrapped flexible and tough rubber, this pocket speaker can be used at any given day in even the most rugged of terrains. Take it while hiking, camping, fishing or even on a safari, this tough all around speaker could even be hooked onto any belts, backpacks, or even on your tent pillars for the most encouraging outdoor music experience. An additional handsfree feature for phone conversation just makes the Mulotov functions beyond its size.

## Packaging Content

- Mulotov Bluetooth® Speaker
- 1 USB charging cable
- User Guide
- Warranty Card

## Specification:

- Bluetooth® Version: 2.1 + A2DP
- Input Power: DC 5V
- Output Power: 1.5W
- Impedance: 4Ω
- Speaker Frequency: 85Hz-20KHz
- Mic Sensitivity: 42dB ±2dB
- Signal-to-noise Ratio: 65dB
- Charging Time: 3 hours
- Playing Time: 3 hours (75% volume)
- Battery Capacity: 500 mAh / 3.7V
- Operating Distance: <=10M

## Features:

- Shockproof speaker, wrapped in flexible and tough rubber
- Compact and portable, easy to carry around wherever and whenever you go
- Hanger to hook it onto belts, backpacks, etc.
- Bluetooth® A2DP (Advanced Audio Distribution Profile) allows wireless transmission of audio from your device to the speaker
- Smart voice handsfree option with built-in microphone
- 3.5mm Audio jack to connect external devices
- Micro-USB jack for charging battery, USB cable included

## Compatibility:


Mulotov may be paired as a speaker to any compatible Bluetooth® enabled devices and devices with compatible auxiliary plug out features.

## Precautions

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

1. Do not disassemble the device or attempt to fix it.
2. Kindly use the included micro-USB Cable to charge the product.
3. Do not attempt to replace any part of this device or battery inside.
4. Do not crush, puncture or dispose of in fire.
5. Do not store or use the device in a high temperature environment, including intense sunlight or heat.
6. Avoid excessive drops, bumps, abrasions and impacts.
7. If there is any reason to believe that there is internal damage to the device, discontinue use immediately.
8. If you find that the device is too hot, is emitting and odor is deformed, punctured or exhibits any suspicious or abnormal behavior, discontinue use immediately and contact our customer service.
9. Always charge this product before extended storage.

## Appearance & Interface Description:

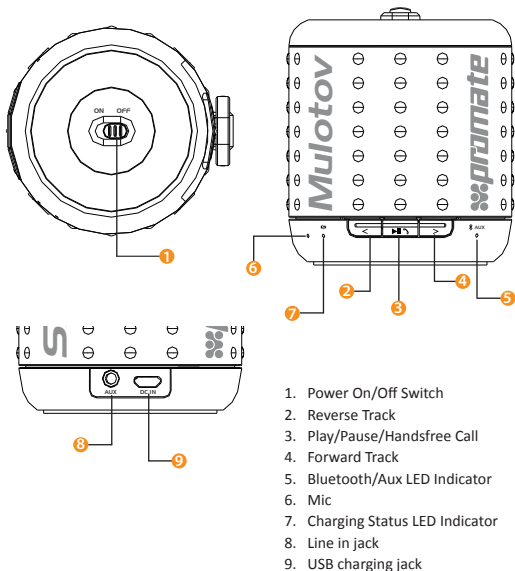

## Operation Instructions:

### 1. Basic Operation

- **Power switch:** Located at the bottom, switch it to turn Mulotov on/off.
- **Adjust the volume:** Press the volume button (+) to increase the volume. Press the volume button (-) to decrease the volume.
- **Reverse Track/Forward Track:** Tap it to go backward or forward to the songs you like
- **Play/Pause/Handsfree Call:** Press it to play a song, pause it or to answer/end/reject a call.

### 2. Bluetooth® Pairing Mode

- Turn on the Power switch until Bluetooth®/Aux LED flashes blue. Automatically you will hear a tone and Mulotov is now on pairing mode.
- Activate Bluetooth® on your device and set it to search for new devices.
- Select "Mulotov" from the list of found devices on your Bluetooth® devices and connect. If necessary, enter passcode "0000" to pair and connect Mulotov to your device. Blue LED will light up and you will hear a connecting tone if pairing is successful. Now you can use Mulotov for listening to music or for answering calls.
- If you want to disconnect to the device you are paired to, just long press Play/Pause/Handsfree until you hear warning tone. Mulotov is back on pairing mode.

### 3. Auxiliary Mode

Connect the sound source device to Mulotov with the AUX cable. Automatically, Bluetooth®/Aux LED will light up red. Play music via AUX and enjoy it. (sound source devices: MP3/smartphone/laptop, etc)

#### **4. Music (Needs music player support)**

- Press “Play/Pause” to play or pause a track.
- Press “Reverse Track” to skip to the previous track.
- Press “Forward Track” to skip to the next track.

#### **5. Handsfree Call**

When you receive a call, press Handsfree button to answer the call. When the call is finished, press Handsfree button again to end the call. Long press Handsfree button to reject the call.

#### **6. Charging**

Plug the USB cable included to a USB port and the other end into Mulotov’s charge jack. Charging Status LED will light up red while it is charging and it will light up green when Mulotov is fully charged. When battery is low, you will hear a warning prompt. When that happens, please charge Mulotov immediately.



[www.promate.net](http://www.promate.net)