



Pyram

Universal Mini Handsfree Bluetooth™ Speakers
with MP3 Micro-SD Card Slot



User Guide

Introduction

Pyram is a universal mini Bluetooth™ speaker with hands-free function for all Bluetooth enabled mobile and tablet devices. Perfect for smartphone audio enhancement, lightweight and portable, Pyram provides amazingly clear sound. Choose to play by Bluetooth streaming from your smartphone or tablet, also by connecting 3.5mm audio cable to any music source, or even by simply inserting a micro-SD card with music tracks. This multifunctional mini speaker even provides high-quality hands-free function which lets you stream phone calls from your smartphone. A uniquely designed mini-speaker with sound beyond its size, Pyram simply covers it all.

 
 
 
Features

- Universal Portable Bluetooth™ speakers
- Micro SD card port
- Ultra-sensitive high quality microphone
- Compatible with a wide range of phones, music players, laptops, desktops, and tablets
- 3.5mm Stereo Audio Line-in
- Intelligent Voice Prompt
- Pocket- sized, Ultra-Light, Portable,
- Micro-USB charging port
- Multi-color collection

Packing Contents

- Pyram
- USB Charging Cable
- User Guide
- Warranty Card

Appearance and Interface Description

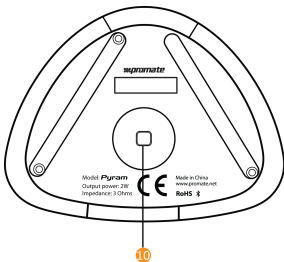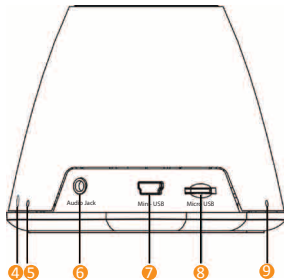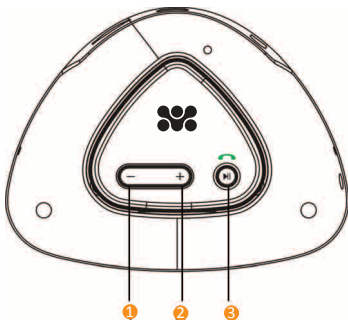

1.)-Button

In Bluetooth mode :

- Press this button to adjust volume level down during Bluetooth mode .

In TF card Playback mode :

- Press and hold this button to adjust volume level down.
- Short press this button once to return to the beginning of current track or previous track.

2.)+Button

In Bluetooth mode :

- Press this button to adjust volume level up during Bluetooth mode

In TF card Playback mode :

- Press and hold this button to adjust volume level up.
- Short press this button once to return to go to next track.

3.)⏮/⏭ Button

- While unit is in Bluetooth or TF card Playback mode, press once to play or pause the current track.
- In Bluetooth mode, when receiving an incoming call on your cell phone, tap this button once to answer the phone, press this button again or press and hold this button to end the call or ignore the incoming call.

4.)Built-in Microphone

5.)Battery charging Indicator (Red color)

- Rapid flashing =low battery

While charging :

- Flashing =charging
- Steady Red= full charged

6.)Aux-In Jack

7.)Mini USB Charging jack

8.)TF card slot

9.)Operating mode indicator (Red/Blue/Purple)

- Blue color =Bluetooth mode
- Purple color= TF card playback mode
- Red=Aux-in mode

10.)Power On/Off selector

Technical Specification:

- Bluetooth™: Version 3.0
- Input power: 5V, 1A
- Output power: 2W
- Impedance: 3 Ohms
- Speaker frequency: 90-15K
- Signal-to-noise ratio: 50dB
- Charging time: 2 hours
- Playing time: 2 hours
- Battery capacity: 800mAh
- Operating distance: 10M

Battery Charging Instruction

This unit operates on a built-in Li-ion battery that can be recharged either using the USB port on your computer or from a USB power adaptor (not included) with a rated output of DC 5V 500mA and up.

Note: The mini USB CHARGING JACK located on this unit is only designed for charging the built-in Li-ion battery.

Charging the Battery for First Time

- 1.) Charge the built-in Li-ion battery a minimum of 2 hours prior to first use. Plug the unit into the USB port on your computer or into a USB power adaptor (not included) using the included USB cable.
 - 2.) The battery charging indicator flashes while charging and it stops flashing when the unit is fully charged.
- Unplug the USB cable from the power source once the battery is fully charged.

Recharging the Internal Battery

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the internal battery capacity is very low, the battery Indicator will rapidly flash in red to alert you to recharge the internal battery as soon as possible.

Plug the speaker into a USB port on your computer by using the included USB cable or into a DC 5V, 500mA and up USB power adaptor (not included). Disconnect the USB cable from the speaker as soon as it is fully charged.

Notes:

- 1.)Charging time will vary if you are listening to music while charging the internal battery. We recommend you switch off the speaker power during the charging process.
- 2.)To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again .
- 3.)Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.

Turn the Speaker Power ON/OFF

- 1.)Slide the Power ON/OFF selector on the bottom of the unit to ON position (where the orange round mark on the selector can not been seen),a voice prompt "Power on" and a beep sound is heard in 2-3 seconds. Meanwhile, the Operating mode indicator will flash in blue.
- 2.)To turn the unit off, slide the Power ON/OFF switch to OFF position (where the orange round mark on the selector can been seen).

Pairing (Linking) A Bluetooth Enabled Smartphone Or Other Bluetooth Enabled Device To The Speaker

If the speaker has never been paired with a Bluetooth device before . You need to follow the pairing instructions below to link the speaker with your Bluetooth device .

- 1.)When the speaker turned on, the Operating mode Indicator flashes in blue.The speaker is ready to pair (link) with your Bluetooth device .
- 2.)Activate Bluetooth on the compatible device, and set it to search for compatible devices.
- 3.)Select the speaker name:"Pyram" from the list of found devices.

Tips: Only one playback unit can be connected to the speaker. If the speaker is already connected to another playback unit, the speaker will not appear in the BT selection list.


 

- 4.)If your device asks for a passkey (depending on the device manufacturers, model, and software version), then enter digits "0000"(four zeros) and press OK.

If pairing has been carried out successfully, a voice prompt "Pairing completed" and a beep sound is heard, meanwhile, the Blue color indicator stops flashing.


If the speaker has ever been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the speaker with your Bluetooth device .

- 1.)After turning on the speaker, the speaker will search for the last paired device . The operating mode indicator will flash in blue. If the unit finds the paired Bluetooth device , a beep sound is heard and operating mode indicator will keep in blue and stop flashing .
- 2.)After successfully pairing (linking) , you can begin playing music from your Bluetooth device wirelessly to the speaker .
- 3.)Press the + / - button on the speaker to adjust to the desired volume level .

Using The Speaker as a Handfree Bluetooth Speakerphone

- 1.)Link your smartphone to the speaker via Bluetooth as described above .
- 2.)When receiving an incoming call on your cell phone , tap  button on the speaker to switch the incoming call from cell phone to the speaker. A short beep sound will be heard confirming the call was answered. Complete your call using the built-in microphone and speaker.
- 3.)Adjust the volume control of your cell phone to obtain the desired sound level.
- 4.)To end the call, just tap the  button again, a short beep sound will be heard and the call will end. If you were playing music from your cell phone to the speaker before answering the call, the music will automatically resume playing when you hang up .
- 5.)To ignore an incoming call, simply press and hold the  button on the speaker for about 2 seconds, a beep sound will be heard and the call will be ignored .

OPERATING THE SPEAKER IN TF-CARD MODE

- Insert the TF card carefully to the speaker to access TF card mode, the operating mode indicator will be changed to Purple color. The TF card will start playing automatically in few seconds.
- Press  button to pause or resume playback.
- Press and hold the “+” or “-” button to raise up/lower the volume level.
- Short Press “+” button to skip to next track or press “-” button to the previous track.
- To remove your TF card, simply pause the playback and gently unplug it from the slot. Remember to turn off the speaker, too.

OPERATING THE SPEAKER IN AUX-IN MODE

If you are using an iPod, MP3/MP4 player or other mobile phone which can not connect this unit via bluetooth directly, you can still play it on the speaker via an audio connecting cable.

- 1.) Plug one end of the 3.5mm audio cable (excluded) into the headphone or line out jack on your player, plug the other end of cable into the unit AUX-IN jack of the speaker.
- 2.) Turn on the external audio source and play your device.
- 3.) Slide the Power ON/OFF switch to ON position to turn on the unit, the operating mode indicator will light up in Red.
- 4.) The volume level can now be controlled through the main unit. Operate all other functions on the external device as usual.

Notes:

- 1). If you're connected to the Line out Jack of your external device, then you only need to adjust the volume control of this speaker. If you're connected to the Headphone Jack of your external device, then you may need to adjust both the volume control of your external device and the volume control of this unit to find the most desirable volume setting.
- 2) Slide the Power ON/OFF selector to OFF position to turn off the unit when you finish listening.
Don't forget to switch off the power of your external device as well.
- 3) During AUX mode, if you plug TF card into the unit, the play mode will automatically change to TF Card playback mode.

Troubleshooting Guide

Should you experience difficulties in the use of this player, please refer to the following chart.

Fault	Cause	Solution
No Charging	The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the mini USB jack on the bottom of the Pyram	Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the mini USB jack on the Pyram
	Wall outlet is not functioning	Plug another device into the same outlet to confirm the outlet is working.
	Computer USB port is not function.	Make sure your computer power is turned on and try another USB port.

NO Sound	The Pyram battery is dead.	Recharge the Pyram battery.
	The Pyram is not linked with the cell phone.	Go through "Speaker Operations" process to link the speaker.
	Volume set too low.	Increase the volume of your device.
No audio signal via the Bluetooth connection	Speaker is not paired to the audio source.	Check whether a connection exists. If necessary, pair the speaker again to the audio source.
	Volume too low	Increase the volume on the speaker
		Increase the volume on the audio source.
Speaker cannot be connected	Pairing does not work	Check whether the audio source supports the A2DP protocol
	Audio source is switched off	Switch on the audio source
	Bluetooth is switched off at the audio source.	Switch on the Bluetooth function in the audio source.
	Bluetooth version is not supported.	Use a different playback unit.
Poor sound quality from a Bluetooth® device	Bluetooth device is almost out of range of the Pyram	Move your Bluetooth device closer to the Pyram



www.promate.net