



Rustic-3

Portable Rugged IPX6 Water-Resistant True Wireless Stereo Speaker

10W High-Def Sound • AUX Port • MicroSD Card Slot



MUSIC CREATES

▶ MEMORIES

User Guide

Introduction

Rustic-3, The compact wireless speaker that delivers deep, crystal clear HiFi sound. Ready to play wherever you go, its compact body makes it efficient and portable, but don't let its small size fool you. The built in drivers are designed to generate room-filling sound output with the least amount of noise or feedback. Rustic-3 offers 5-6 Hours of continuous high-quality music playback. All this encompassed in an abrasion resistant, and IPX6 certified water resistant body, making Rustic-3 the best portable speaker for any environment.

Packaging Contents

- Rustic-3
- AUX Cable
- USB Charging Cable
- User Guide

Specifications

- **Bluetooth Version:** v4.2
- **Bluetooth Chipset:** ATS2825
- **Bluetooth Frequency:** 2.4GHz
- **Bluetooth Profiles:** A2DP, AVRCP ,HSP
- **Battery Type:** Lithium Ion
- **Battery Capacity:** 4000mAh
- **Power Input:** 5V, 1A
- **Speaker Output:** 5W*2
- **Impedance:** 4Ω*2
- **Operating Distance:** 10m
- **Music Playback Time:** 8 hours
- **Charging Time:** 5-6 hours

Features

- **Powerful Speaker:** A multi-function 6watt speaker that takes your music listening experience on to the next level
- **IPX6 Water Resistant:** Certified with an IPX6 water resistant rating, Rustic-3 is protected from even when it falls into water up to 1m deep.
- **Multiple Connectivity Options:** Play your favourite tracks via various connectivity options available with Rustic-3. Play it wirelessly or via the 3.5mm audio jack or the microSD card slot.
- **Easy Music Navigation:** Easy navigation through your playlist with the help of a soft touch control panel
- **True Stereo Sound:** Connect the pair of speakers together to experience fuller sound.
- **Long Lasting Battery:** Play your favourite tracks for up to 6 hours with Rustic-3 4000mAh rechargeable lithium-polymer battery
- **Universal Compatibility:** Rustic-3 is compatible with all Bluetooth enabled devices
- **Variety of Colours:** Rustic-3 is available in a range of colours to suit your style


Precautions:

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

- Do not disassemble the device or attempt to fix it.
- Kindly use the included cable to charge the product.
- Do not attempt to replace any part of this product.
- Do not crush, puncture or dispose of in fire.
- Do not store or use the battery in a high-temperature environment, including intense sunlight or heat.
- Avoid excessive drops, bumps, abrasions and impacts.
- If there is any reason to believe that there is internal damage to the device, discontinue using immediately.
- If you find that the device is too hot, is emitting an odour, or is deformed, punctured or exhibits any suspicious or abnormal behaviour, discontinue use immediately and contact our customer service.
- Always charge this product before extended storage.

Appearance & Interface Description

1. Next Track / Vol+ Button
2. LED light indicator
3. Power Button
4. Bluetooth Button
5. Play/Pause Button
6. Previous Track / Vol- Button
7. AUX Port
8. MicroSD Card Slot
9. Micro-USB Charging Port

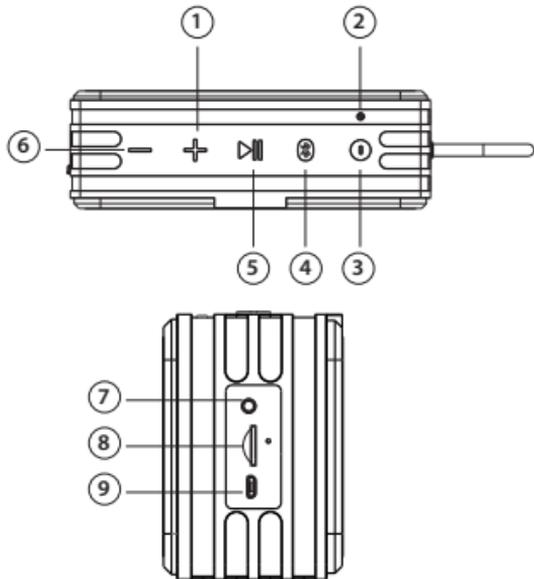

Operation Instructions

1. Charging Rustic-3

- Use the provided cable to charge Rustic-3.
- Connect one end of the USB Cable provided to Rustic-3 and the other end to any 5V/1A USB Power Socket.

2. Turning Rustic-3 On/Off

- To turn on Rustic-3, press and hold the Multi-Function button for 2 seconds
- Press and hold the Multi-Function button again for 2 seconds to turn off Rustic-3.

3. Bluetooth Pairing

- Rustic-3 automatically enters into Bluetooth pairing mode once powered on.
- To manually enter Bluetooth pairing mode, long press the "Multi-Function button" for 2-3 seconds.
- The LED indicator will begin flashing when in pairing mode.
- Turn on the Bluetooth function on your device and select "Rustic-3" in the available devices list.
- Some Bluetooth devices may require you to enter a passcode to pair your device to Rustic-3. Enter "0000" and press submit.
- Once your device is successfully paired, the LED indicator will stop flashing.

4. Using TWS function:

- Turn on both Rustic-3 speakers and long press the “Bluetooth Button” until a “Dong” prompt is heard.
- When a “Dong-Dong” prompt is heard both Rustic-3 are connected to each other.
- Pair your phone using the above steps to one Rustic-3.

5. Playing Music via Auxiliary Connection:

- Connect your device to Rustic-3 via the 3.5mm Aux cable provided.
- Short press the “Power Button” to enter into AUX playback mode.
- Then select the track you wish to play from your connected device.

6. Playing Music via microSD Card

1. Insert a microSD card into the microSD card slot on Rustic-3.
2. Short press the “Power Button” to enter into microSD playback mode.
3. Use the Track Control buttons to traverse through the multiple files on the microSD card.

7. Controlling Music Playback (Only under Bluetooth & microSD card mode)

- Use the “Music Playback Control Button” to control music playback.
- Skip to the next track by pressing the “Next Track” button.
- Skip to the previous track by pressing the “Previous Track” button.

8. Volume Control

- Control volume via the paired devices or by long pressing the “Next Track” or “Previous Track” buttons on Rustic-3.

Troubleshooting

1. Rustic-3 does not pair with a Bluetooth device:

- Check if the Bluetooth hardware on your device supports A2DP profile which is necessary for sound transmission over Bluetooth.

2. Unable to play music files stored on the microSD card:

- Check the file format of your music files.
- Rustic-3 only supports MP3/WMA/WAV/APE/FLAC file formats.
- We would recommend formatting the microSD card to FAT32 file format.



www.promate.net