



promate.net Lifestyle Technology

Rugged **Bluetooth®** Speaker with **Hands-Free**



On The Go



10 m Transmit



Built-in
Mic



Charging



Handsfree



Multi-Color

User Guide

Introduction

Rustic, The compact wireless speaker that delivers deep, crystal clear HiFi sound. Ready to play wherever you go, its compact cylindrical body makes it efficient and portable, but don't let its small size fool you. The built in 3D DSP is designed to generate room-filling sound output with the least amount of noise or feedback. Rustic, offers 5-6 Hours of continuous high quality music playback along with an LED indicator to indicate its battery status. This powerful and portable speaker also includes a microphone and call answer button. To use it as a hands-free device. All this encompassed in an abrasion resistant body, making Rustic the best portable speaker for any environment.

Packaging Contents:

- Rustic
- USB charging cable
- AUX cable
- User Guide

Specification:

- Bluetooth® Version: 2.1+EDR
- Bluetooth® Profile: HFP, HSP, A2DP
- Input Power: 5V/500mA
- Output Power: 3W x 2
- Impedance: 4 Ohms
- Speaker Frequency: 60Hz~20000Hz
- Signal-to-noise ratio: 65dB
- Charging time: 5 hours
- Maximum playing hours: 5-6 hours
- Battery Capacity: 800 mAh
- Operating Distance: 10 meters

Features:

 
- Lightweight high quality housing
- Crystal clear DSP 3D surround stereo sound effect
- Sleek Cylindrical body
- Abrasion resistant surface
- Durable and portable
- Answer phone calls wirelessly from any Bluetooth® smartphone
- Easy-to-use controls for music playback and answering phone calls
- Streams music wirelessly from any Bluetooth® enabled device
- Micro-SD / TF card play back support
- Auxiliary Playback from Mp3 players and other devices
- Available in a variety of colours

Precautions:

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

- Do not disassemble the device or attempt to fix it.
- Kindly use the included USB Cable to charge the product.
- Do not attempt to replace any part of this case or battery inside.
- Do not crush, puncture or dispose of in fire.
- Do not store or use the battery in a high temperature environment, including intense sunlight or heat.
- Avoid excessive drops, bumps, abrasions and impacts.
- If there is any reason to believe that there is internal damage to the device, discontinue use immediately.
- If you find that the device is too hot, is emitting and odor is deformed, punctured or exhibits any suspicious or abnormal behavior, discontinue use immediately and contact our customer service.
- Always charge this product before extended storage.


Appearance & Interface Description:

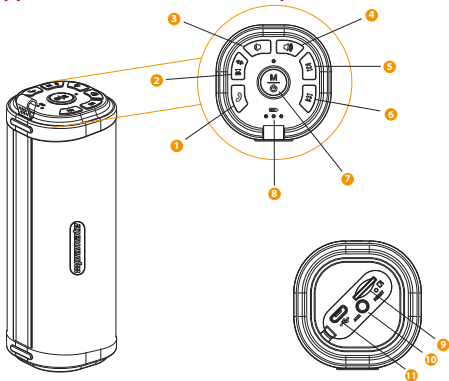

1. One Touch Answer Button
2. Play/ Pause Button
3. Volume - Button
4. Volume + Button
5. Toggle Backward Button
6. Toggle Forward Button
7. Mode / Power Button
8. Battery Status indicator
9. Micro-SD Card Slot
10. Auxiliary Port
11. USB Charging Port


Operation Instructions:

 Charging Rustic

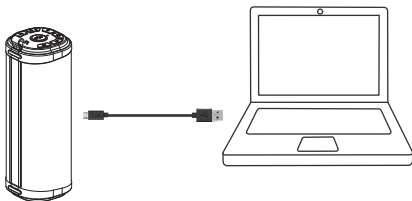


1. Connect Rustic to a PC/Laptop/Mac or 5V USB adaptor (not included) with the USB cable included
2. The Battery status LED's indicate the current battery level in Rustic.
3. When all LED's are on, Rustic is fully charged

 Pairing Rustic with Smartphones and Tablets

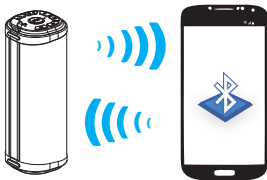

1. Press and hold the power button on Rustic
2. A voice prompt “Bluetooth Enabled” indicates that Rustic is now in Bluetooth® pairing mode.
3. Turn on the Bluetooth function on your phone and search for “Rustic” in the available device list.
4. Pair the device to your phone using the passkey (0000).

 Playing Music via Micro-SD card

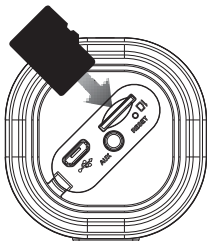


1. Turn on Rustic and insert your Micro-SD card into the Micro-SD card slot as indicated above.
2. Press the Mode/ Power button once to enter into SD card playing mode.
3. You will hear a voice prompt “SD Card Enabled” and the first track on the Micro-SD card begins playing automatically.

Playing Music via Auxiliary Connection:

1. Connect your device to rustic via the 3.5mm Aux cable provided.
2. Press the Mode/ Power button to enter into AUX playing mode.

 Controlling Music Playback(Only in Bluetooth® and SD-Card Playback mode)

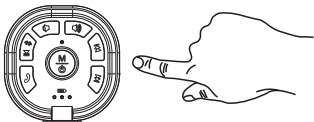

1. Use the Play/ Pause button to control music playback.
2. Skip to the previous track by pressing the Toggle Backward button.
3. Skip to the next track by pressing the Toggle Forward button.

Volume control

Control volume via the paired devices or by long pressing the Volume + / Volume - buttons on the device.

Answering Calls

1. Short press the “One touch Answer” button to answer the phone call.
2. Short press again to end a call.

Refusing Calls

1. During an incoming call press and hold the “One Touch Answer” button to refuse the call.



www.promate.net