



promate.net Lifestyle Technology

cheerBox

Premium Touch controlled Bluetooth V4.0 Speaker



Touch Key
Control



Music & Calls
Streaming



On/Off
Button



10 m
Transmit



Handsfree



Last Paired
Device Memory



AUX



Built-In
Mic

User Guide

Introduction:

Design meets functionality; cheerBox is a distinctly crafted Bluetooth mini speaker. It features a highly sensitive touch key control which allows you to navigate through your music playlist with ease. Just a simple touch to adjust the volume control, this speaker truly is one of a kind. Having to communicate with friends and love ones is also a highly anticipated feature of this product which comes with a mic for Handsfree conversation. With a built-in battery which lasts for hours, cheerBox could be used both indoors and outdoors.

Packaging Content:

- cheerBox Bluetooth Speaker
- AUX Cable
- Micro USB Charging Cable
- User Guide

Specification:

- Bluetooth Version: v4.0 + EDR
- Bluetooth Profiles: A2DP, AVRCP, HSP, HFP
- Input Power: DC 5V/1A
- Output Power: 3W x 2
- Impedance: 4 Ω
- Speaker Frequency: 100Hz-20KHz
- Signal-to-noise Ratio: 75dB
- Charging Time: 3- 5 hours
- Playing Time: 8hours
- Battery Capacity: 850mAh
- Operating Distance: 10meters
- Made from PC

Features:

- Sturdy, distinctly designed Bluetooth speaker
- Ultra-sensitive touch key control
- Intelligent voice prompt feature
- Smart handsfree function supported with built-in mic
- TF card reader
- Micro-USB Audio jack to connect external devices
- Micro-USB Charging cable included

Compatibility:

cheerBox may be paired as a speaker to any compatible Bluetooth enabled devices and devices with compatible auxiliary plug out features.

Precautions:

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

- Do not disassemble the device or attempt to fix it.
- Kindly use the included Micro-USB Cable to charge the product.
- Do not attempt to replace any part of this device or battery inside.
- Do not crush, puncture or dispose of in fire.
- Do not store or use the device in a high temperature environment, including intense sunlight or heat.
- Avoid excessive drops, bumps, abrasions and impacts.
- If there is any reason to believe that there is internal damage to the device, discontinue use immediately.
- If you find that the device is too hot, is emitting an odor or is deformed, punctured or exhibits any suspicious or abnormal behavior, discontinue use immediately and contact our customer service.
- Always charge this product before extended storage.

Operation Instructions:

1. Basic Operation

- **Power Switch:** Switch it to the Blue position to activate Bluetooth pairing and to the Green Position to activate TF card mode.
- **Adjust the volume:** Press the Volume + button or Volume – Button to toggle volume.
- **Reverse Track/Forward Track:** Tap it to go backward or forward to the songs you like.
- **Multifunction Button:** Tap it to play a song, pause it or answer/end/reject a call

2. Bluetooth Pairing Mode

- Turn on cheerBox by switching the power switch to the blue position.
- Activate Bluetooth on your device and set it to search for new devices.
- Select "cheerBox" from the list of found devices on your smartphone and connect. If necessary, enter passcode 0000 to pair and connect cheerBox to your device. You will hear a "Ding" sound.
Now you can use cheerBox for listening to music or answering calls.

3. Auxiliary Mode

- Plug in the Micro-USB audio jack into the Micro-USB port. Voice prompt will say "AUX-in Mode".
- Connect the sound source device to CheerBox with the AUX cable.

4. Music (Needs music player support)

- Tap "Multifunction Button" to play or pause a track.
- Tap "Reverse Track" to skip to the previous track.
- Tap "Forward Track" to skip to the next track.



5. Handsfree Call

- When you receive a call, tap the Multifunction Button to answer the call. When the call is finished, tap Handsfree button again to end the call.

6. Charging

Plug the USB cable included to a USB port and the other end into cheerBox's charging jack. Red LED will light up while it is charging while Green LED will light up when cheerBox is fully charged. When battery is low, you will hear a low battery warning tone and the voice prompt "Battery low". When that happens, please charge cheerBox immediately.

Appearance & Interface Description:

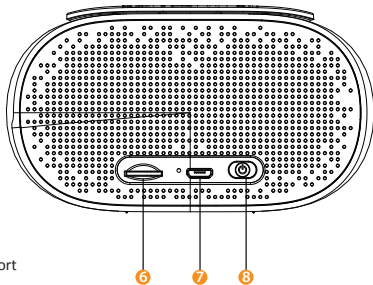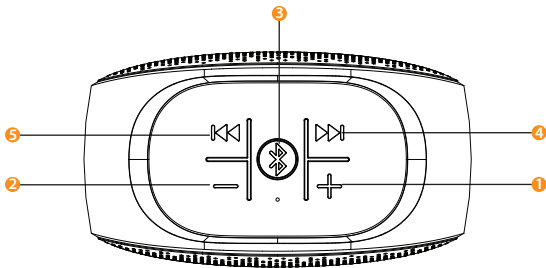

1. Volume + Button
2. Volume – Button
3. Multifunction Button
4. Forward Track Button
5. Reverse Track Button
6. TF card Slot
7. Micro-USB Charging port
8. Power Switch



www.promate.net