


SO THERE™ USER MANUAL - CDT1 Compact Digital Tuner

TUNER DIAGRAM

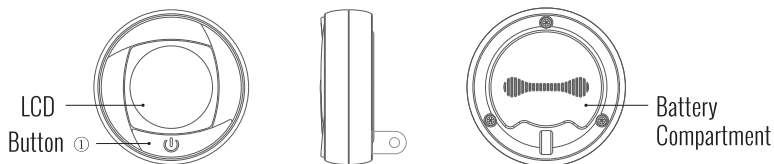

BATTERY INSTALLATION


1. Locate battery compartment on backside of the display.
2. Gently turn battery cover to the right (clockwise). The cover will release.
3. Place the included battery into the compartment with the positive (+) side facing you.
4. Replace the battery cover and gently turn to the left (counterclockwise) until it clicks into place.

TUNER OPERATION

1. Securely Clip the tuner to the instrument's headstock.
2. Press and hold the red power button ① to power unit on. The unit will illuminate.
3. Adjust the tuner to the desired viewing position.
4. Briefly press the red button to select the desired instrument mode.

Tuning Modes:

- C - Chromatic
- G - Guitar
- B - Bass
- V - Violin
- U - Ukulele

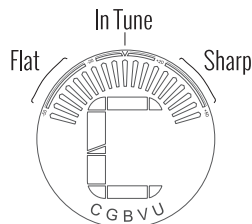

5. Activate the desired string and adjust tuning as follows:

TUNING INDICATORS

Tuning is **flat** when the indicator is to the left of the center, the LCD display is **red**.

Tuning is **sharp** when the indicator is the right of center, the LCD display is **yellow**.

The string is **in tune** when the indicator is in the center position, the LCD display is **green**.

SO THERE™ USER MANUAL - CDT1 Compact Digital Tuner

NOTICE

Without input, the tuner will shut off automatically after 3 minutes to conserve battery life.

Replace the battery when the LCD display darkens or fails to power up.

SPECIFICATIONS

Tuning Range: A0(27.5 Hz)-C8(4186.00 Hz)

A4 frequency: 440Hz

Tuning items: Chromatic

Tolerance: 1 cent

Battery: Cr2032

Size: 90x60x14mm

Weight: 50g

WARRANTY REGISTRATION

To register your tuner for the Limited Warranty please visit www.SoThereUSA.com